

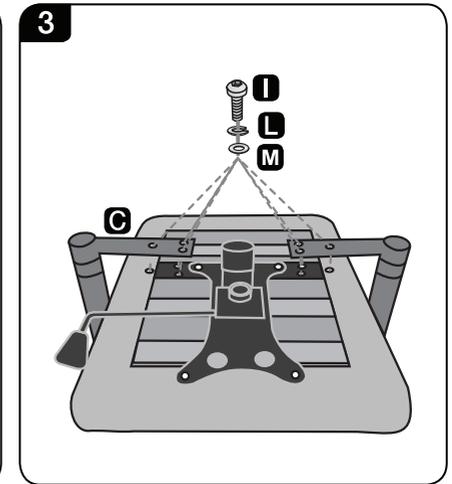


<b>A</b> x1 	<b>E</b> x1 
<b>B</b> x1 	<b>F</b> x1 
<b>C</b> x1 	<b>G</b> x1 
<b>D</b> x1 	<b>I</b> x10 
<b>H</b> x5 	<b>J</b> x4 
	<b>K</b> x2 
	<b>L</b> x14 
	<b>M</b> x14 
	<b>N</b> 

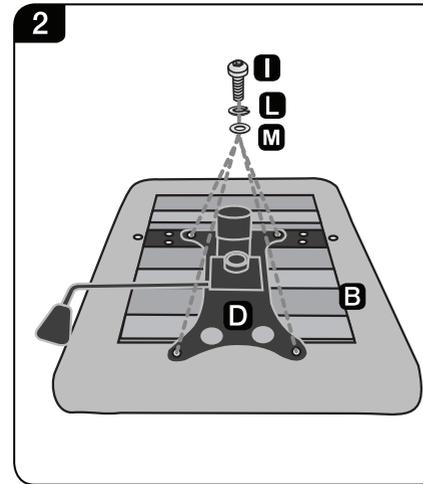

**!** IMPORTANT!  
If there is a red/orange plastic cap on the top of the gas piston you need to remove it before you continue to step 5.

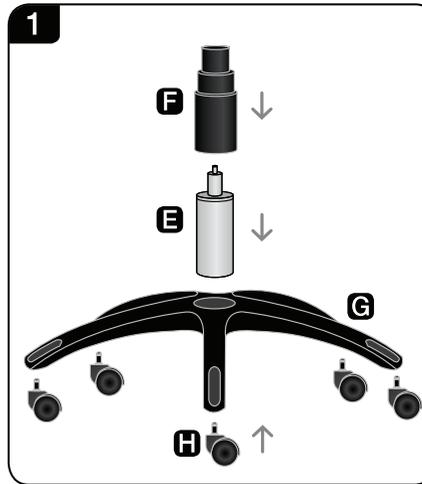