

GoHawk®

TS3

TS3-Q

Powersports Stereo System



USER MANUAL

www.GoHawk.com

714 599-7709 (US)

©2025 Golden Hawk USA Inc. or its affiliates. GoHawk and all related logos are trademarks of Golden Hawk USA Inc.

FCC ID: 2A5K2GOHAWKTY00

Revision: 03-2025 (MP040-MP041-MP060-MP061-MP152-MP153)

GoHawk[®]

www.gohawk.com

GoHawk

GoHawk is a manufacturer of high-end motorcycle stereo products that make your journey full of music and love. Enjoy your ride with GoHawk's speakers.

1. Contents	1
2. Features	1
3. Read Before Installation	2
4. Installation	3
5. Wiring Instruction	4
6. Operation Instruction	5
7. BT / FM / USB / SD / AUX	7
8. Troubleshooting	9
9. Specifications	10
10. Warranty	11
11. Product Support	12

1. *Contents*

- Speakers
- Amplifier
- Wired Control
- Mounting Clamps
- Power Cord
- Output Jack Connector
- AUX Cable
- User's Manual

2. *Features*

- 3" Waterproof Speakers
- Built-In Bluetooth for Audio Streaming
- Built-In FM Radio Receiver
- 3.5mm AUX Input Jack
- Support USB Drive
- Support microSD Drive
- All-Function Wired Control


3. Read Before Installation

- 1) Ensure that the components and wiring are not installed in proximity to any moving parts. Keep them clear of ignition components, fuel lines, the engine, or hot exhaust surfaces.
- 2) Avoid mounting the speakers in locations that could obstruct or hinder the operation of essential safety features on your vehicle, such as lights, horns, or brake levers.
- 3) Before proceeding with the installation, it is advisable to test the speakers and amplifier. Connect them to the battery and play music for a minimum of three minutes to confirm that the product is fully functional.
- 4) Depending on your motorcycle's handlebar size, you may need to trim or modify rubber inserts for a proper fit.
- 5) Please be aware that splash, water, and dust resistance are not permanent conditions and may diminish due to regular wear and tear.
- 6) To prevent excessive battery drainage, disconnect the speaker from the battery if the motorcycle or ATV is expected to remain unused for more than 15 days.
- 7) Keep in mind that at higher speeds, engine noise, exhaust noise, and wind noise may become predominant and may overpower the speaker's sound output. This is a fundamental aspect of physics and cannot be entirely mitigated.
- 8) Ensure that the speakers are connected to the correct power supply(DC 12V source).


4. Installation

- 1) Use 4 Phillips screws to secure the mounting bracket to the bottom of the speaker.
- 2) Identify a safe and stable mounting location on the mounting bar.
- 3) Attach the speaker to the bar using the mounting clamp.

① : Trimming the rubber insert may be necessary for certain bar sizes.

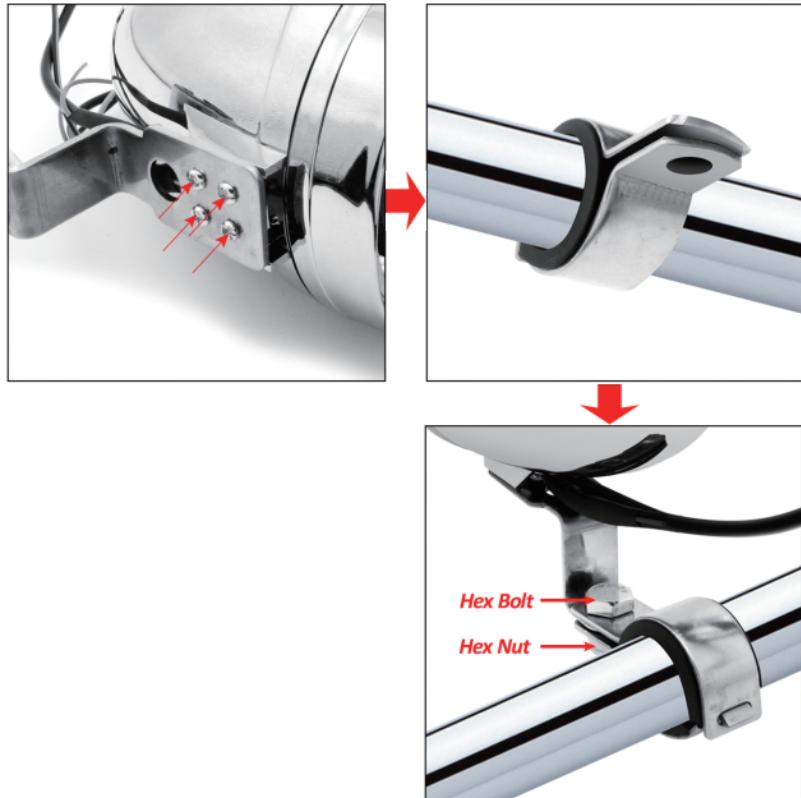


5. Wiring Instruction

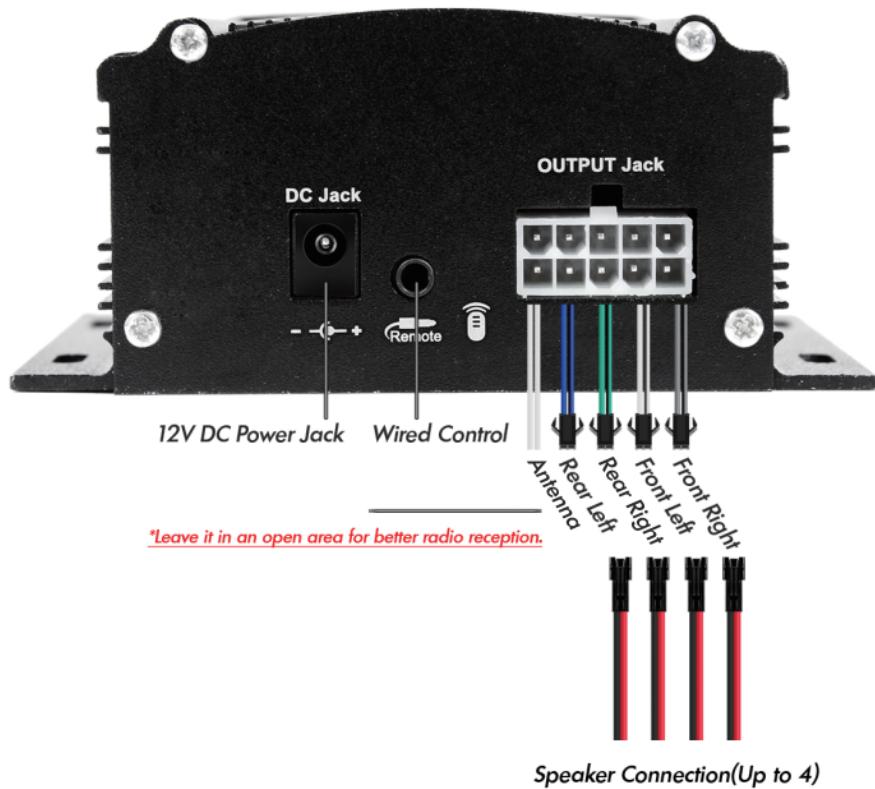

- 1) Connect the speakers to the output jack connector.
- 2) Plug the wired control into the Remote jack at the back.
- 3) Place the antenna wire in an open area for optimal reception.
- 4) Connect the RED wire to the positive (+) terminal and the BLACK wire to the negative (-) terminal of a 12V battery.

① : Extension audio cables(sold separately, Part Number: PART0101) are available to extend reach if needed.

6. Operation Instruction

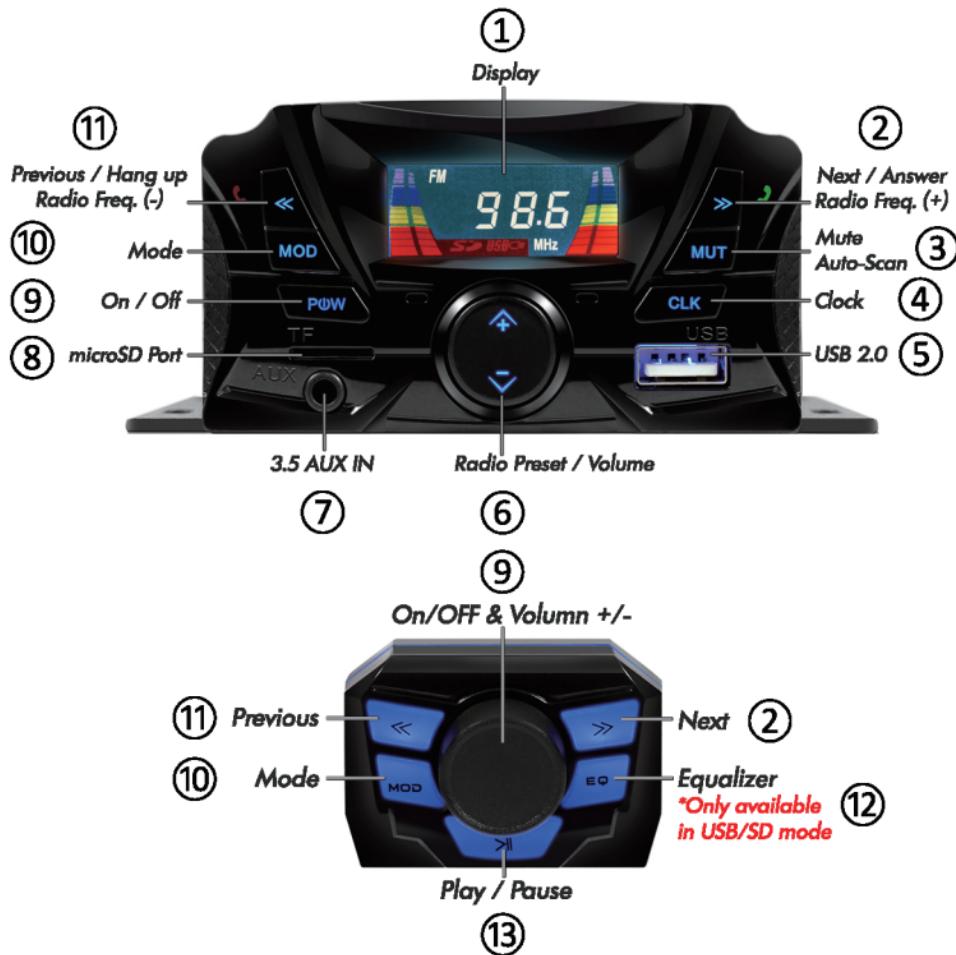

Power On/Off:

- Short press ⑨ to turn the unit on or off.

Mode Selection:

- Short press ⑩ to cycle through modes: FM Radio, BT, AUX-In, USB, SD.
- Press ⑫ to select from 5 EQ settings.

① : EQ settings are only available in USB/SD mode.

Clock Setting:

1. Short press ④ to display the time.
2. Long press ④ to enter clock setting mode.
3. Use ⑥ (Vol+ or Vol-) to adjust the time.
4. Short press ④ to exit the clock menu.

Bluetooth:

1. Press ⑩ (MOD) to switch to Bluetooth.
2. Enable Bluetooth on your smartphone.
3. Search for the device named "GOHAWK".
4. Pair the device. (Enter 0000 if prompted for a PIN).
5. "Connected" will be displayed upon successful pairing.

FM Radio:

1. Press ⑩ (MOD) to switch to FM mode.
2. Long press ③ (Mute) to start auto-scanning. Short press to mute.
3. Short press ⑥ to select preset radio stations. Long press to adjust volume.
4. Short press ⑩ / ② (Previous/Next) to adjust frequency. Long press to manually scan stations.

USB / microSD Card:

- Insert a USB/SD card and press ⑩ (MOD) to switch to USB/SD mode.

① :

1. USB/SD card must be in FAT format.
2. The system will skip this mode if no USB/SD card is detected or files are corrupted.
3. USB-to-Phone music playback is not supported.
4. The USB port is not designed for charging.

Auxiliary Input (AUX):

1. Insert the AUX cable into the "AUX" jack.
2. Connect the other end to an MP3 device.
3. Press ⑩ (Mode button) to switch to AUX mode.

① : AUX mode does not support Previous/Next track control via wired remote.

8. Troubleshooting

Unit Doesn't Turn On:

1. Ensure the wired control is plugged into the back "Remote", not the front.
2. Ensure the RED wire is connected to positive, BLACK wire to negative terminal of a 12V battery.
2. Check the inline fuse and replace it if blown.
3. Verify the battery provides a minimum of 12V for operation.

Insufficient Volume:

1. Compare the left and right speakers to check if one is blown.
2. Adjust the speaker's direction toward the driver's position.
3. After starting the engine, confirm the battery maintains at least 12V.

USB Isn't Playing Music:

1. USB input supports USB drives only.
2. USB-to-phone music playback is not supported.

Radio Reception Issues:

1. Reset radio stations by performing a long press on the "Mute" button.

Mounting Clamp Doesn't Fit:

1. The clamp fits handlebars between 7/8" to 1.25".
2. For bars outside this range, custom mounting may be required.

9. Specifications

Amplifier:

Working Voltage: DC 12 V

Rated Power: 4*25W4Ω

Peak Wattage: 180W

Channel: 4.0

Channel separation: >45dB

Frequency range: 87.5--108MHz

Fuse rating: 6A

Speaker:

Outline Size: 3-3/8" x 4"

Sound Core: 3"

Rated Power: 15W

10. Warranty

REGISTER YOUR PRODUCT:

www.gohawk.com/warranty

1-Year Limited Parts Warranty:

All GoHawk products purchased in the United States are warranted for a period of one year from the purchase date against defects in materials and workmanship. We will provide you with free parts for one year after your purchase. The warranty is for replacement at the sole discretion of the selling dealer. If we choose to replace your product, we may replace it with a new or reconditioned unit of the same or similar design. The customer is responsible for freight charges incurred to return the product.

For all other countries, contact our technical support where you must send a copy of the original invoice with the date of purchase. Please enclose a letter stating the problem you are having with the product, your daytime phone number, and your return shipping address (no P.O. Box). Contact us to receive an RA# before sending your defective item. This warranty does not cover any unit subject to abuse, neglect, incorrect wiring, water and/or physical damage, or any repair or modification performed by someone other than a GoHawk repair technician.

Any damages resulting from legal action for breach of expressed or implied warranties shall be limited to the cost of the original purchase price of the unit. As a condition of this warranty, it is agreed that the remedy provided in this document is the sole remedy under this warranty. All liability for

coincidental damages is excluded. The purchaser agrees to retain the original proof of purchase for establishing the effective date of this warranty. Should GoHawk or an authorized dealer replace your product under warranty, this replacement shall be considered a transaction under the original warranty and does not extend the original warranty period.

11. Product Support

Please visit: www.gohawk.com/contact-us

Email: info@gohawk.com

Tel: 714-599-7709