



TV SOUNDBAR MOUNT

RF-SBM101

USER GUIDE

Before using your new product, please read these instructions to prevent any damage.

Safety information and specifications



**IMPORTANT
SAFETY
INSTRUCTIONS -
SAVE THESE**

INSTRUCTIONS

CAUTION: Do not use this product for any purpose not explicitly specified by Rocketfish.

Improper installation may cause property damage or personal injury. If you do not understand these directions, or have

doubts about the safety of the installation, contact Customer Service or call a qualified contractor. Rocketfish is not responsible for damage or injury caused by incorrect installation or use.

The weight of your soundbar must not exceed 15 lbs. (6.8 kg). Also, the weight of the soundbar plus the weight of your TV cannot exceed the total rated weight of the TV wall mount. Refer to your TV wall mount assembly guide for specific weight limits.

This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

WARNING: This product is only designed to be used with Rocketfish, Dynex, Insignia, and SANUS television mounts mounted below the television.

This soundbar mount was designed to be installed and utilized **ONLY** as specified in this manual. The manufacturer is not responsible for improper assembly, use, or handling of this product.

Maximum soundbar weight: 15 lbs.
(6.8 kg)

Overall dimensions (W × D × H):
1.75 x 1.0 x 11.9 in. (4.4 x 2.5 x 30.2 cm)

Soundbar mount weight: 1.74 lbs.
(0.79 kg)

We're here for you

www.rocketfishproducts.com

For customer service, call:

800-620-2790 (U.S./Canada
markets)

Before You Begin

Please check the following items:

- Your TV and any accessories you plan to use do not exceed the specified weight limit of your TV mount.
- You read and understand these directions.
- You refer to the documentation that came with your TV for additional guidance.
- You have the tools needed for installation.
- If your TV bracket has built-in or integrated spacers (see Figure 1), or mounting holes or slots that are wider than 11mm [.43 in.] (see Figure 2), you cannot use this product. Call Customer Service for assistance.

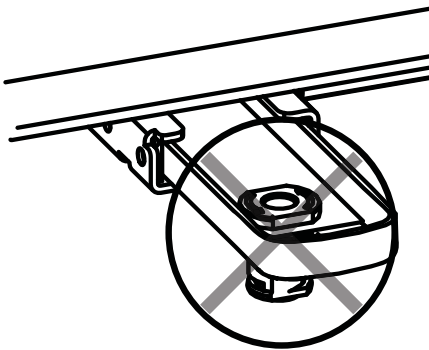


Figure 1


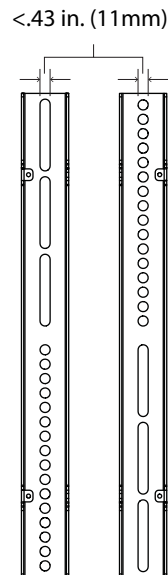



Figure 2

What you need


You will need the following to assemble your new sound bar mount:

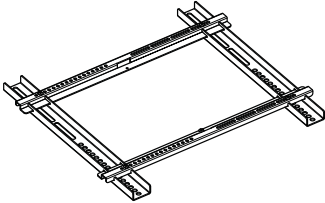

TV Wall Mount Bracket

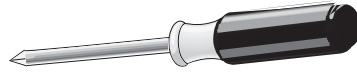

Phillips screwdriver

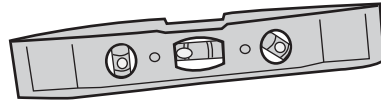

Level




3/16 in. Hex key
(Included in this kit)

Package contents: parts

Make sure that you have all the parts necessary to assemble your new sound bar mount.


Soundbar bracket assembly - **A** (2)



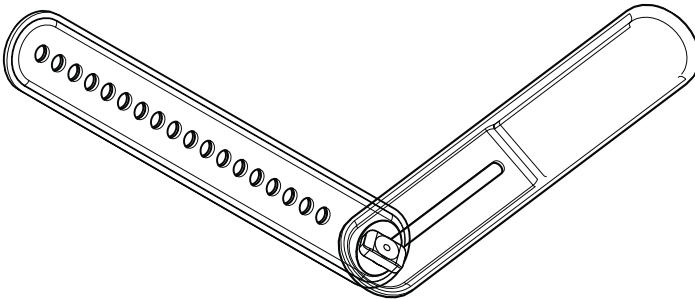


Package contents: hardware

Make sure that you have all the hardware necessary to assemble your new soundbar mount. Not all hardware included will be used:


Hardware bag

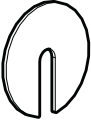
Label	Hardware	Qty
C	 Fender washer	2
D	 Keyhole screw	2
E	 Knob	2
F	 Mount spacer	2
G	 M4/M5 washer	4
GG	 M4/M5 washer	4

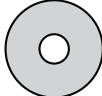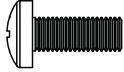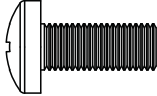Label	Hardware	Qty
H	 M6/M8 washers	4
HH	 M6/M8 washers	4
I	 M4 × 16 mm screw	4
J	 M5 × 16 mm screw	4
K	 M6 × 16 mm screw	4
L	 M6 × 25 mm screw	4
M	 M8 × 20 mm screw	4

Hardware bag (continued)

Label	Hardware	Qty
N	 Spacers	4
P	 M4 × 40 mm screw	4
Q	 M5 × 40 mm screw	4

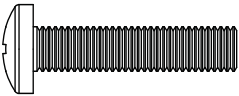Label	Hardware	Qty
R	 M6 × 40 mm screw	4
S	 M6 × 50 mm screw	4
T	 M8 × 40mm screw	4

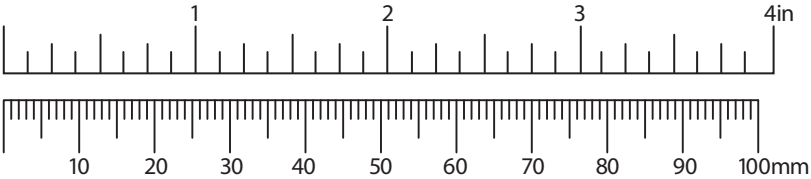


Installation instructions


STEP 1: Option 1 - Mount the bracket arms to the soundbar

- 1 Check the compatibility of the soundbar bracket with your soundbar.
- 2 Insert the keyhole screws (D) into the knobs (E).
- 3 Attach the soundbar bracket assembly (A) to your soundbar with the assembled knob/keyhole screws.

NOTE: When planning on the position of the soundbar, make sure you will be able to properly access control buttons, if necessary.

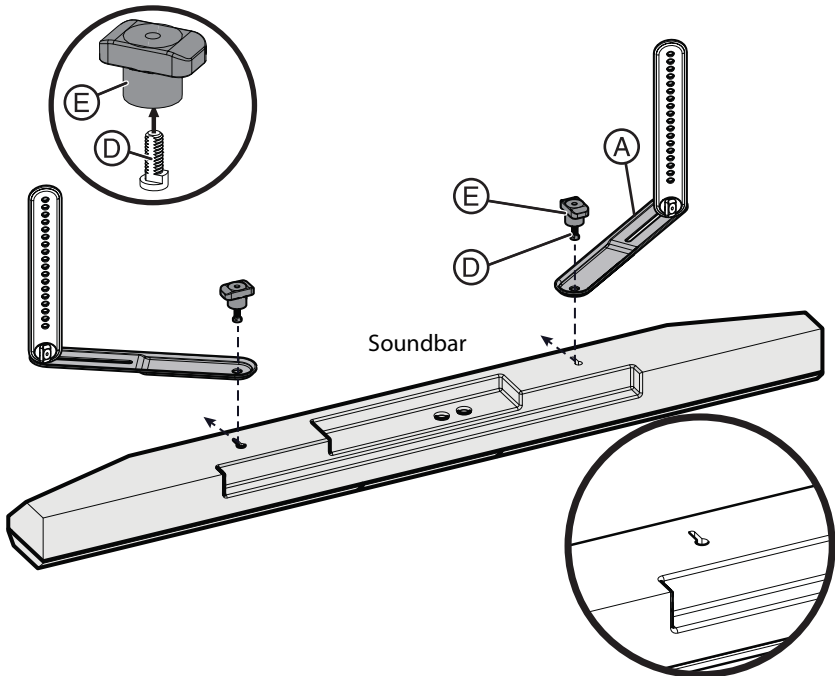

- 4** [OPTIONAL] If there are gaps or recesses under the soundbar arms, slip a "Fender" washer (C) onto the keyhole screws (D) and under the soundbar bracket assembly (A) make sure that it lays flat on the soundbar.

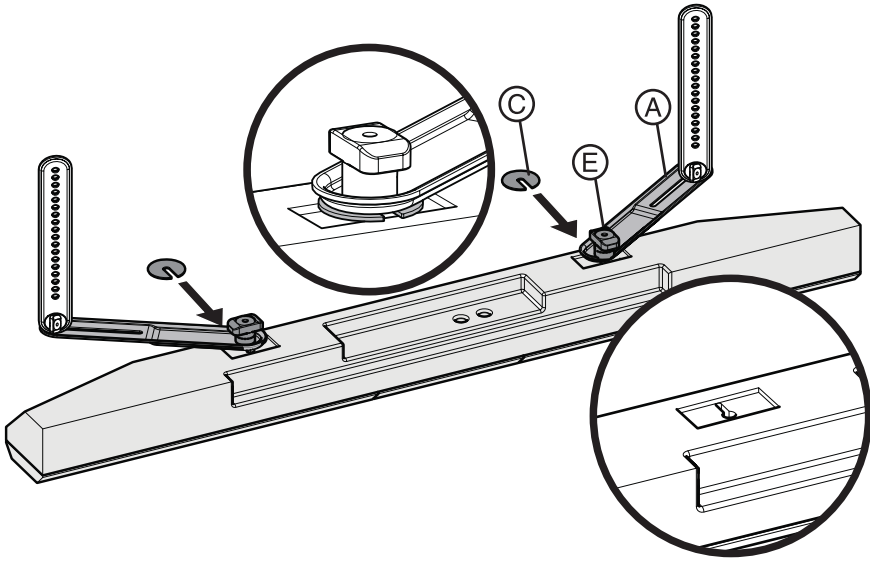


- 5** Loosely tighten the knobs (E).

STEP 1: Option 2 - Mount the bracket arms to a hanger

Some soundbars come with a manufacturer supplied hanger (for example Samsung).

- 1 Attach the soundbar bracket assembly (A) to the soundbar hanger with the assembled knob/keyhole screws. Do not fully tighten knobs.

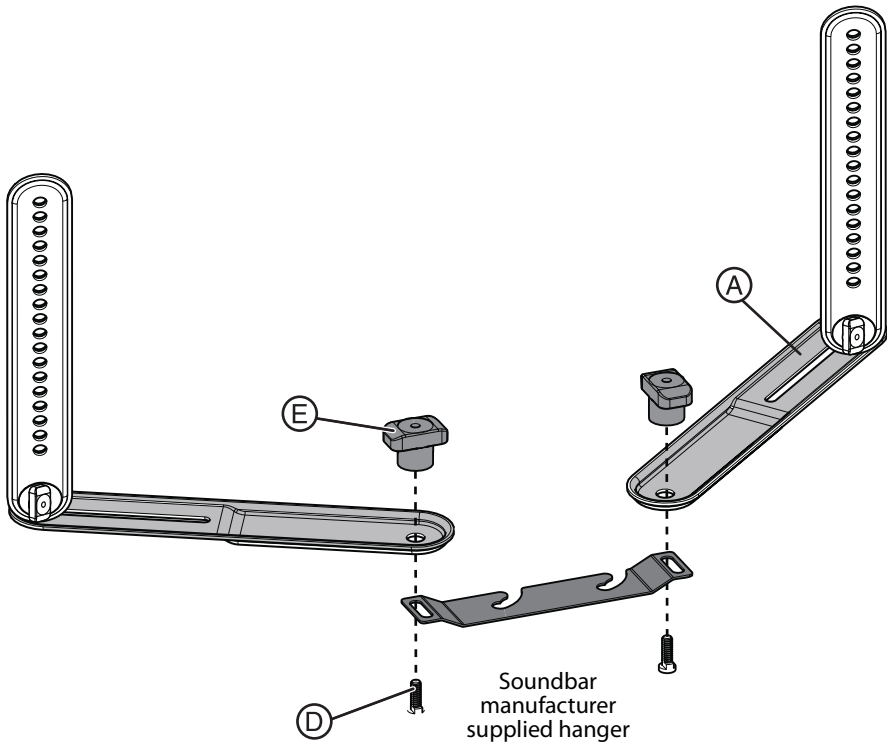


STEP 2 - Preparing your TV (go to Step 3 if your TV is not already mounted on the wall).



CAUTION: Refer to your TV wall mount assembly instructions for how to properly remove your TV from the brackets.


- 1** Remove all cables attached to your TV.
- 2** Remove your TV from the wall.
- 3** Remove the existing wall mount bracket from the back of your TV.
 - Save the existing screws and washers in case you want to use the TV without the soundbar in the future.
 - You **MUST** use the screws and washers provided with the soundbar mount instead of the screws and washers that came with your existing wall mount.

1

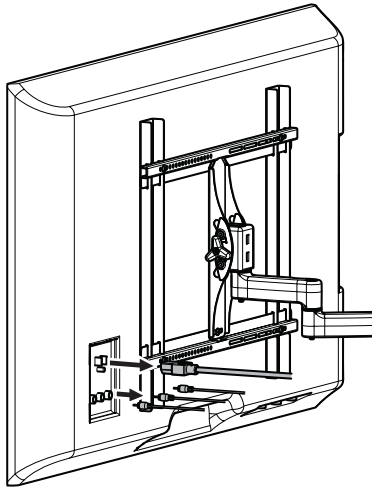




CAUTION: Heavy. You may need assistance with this step.

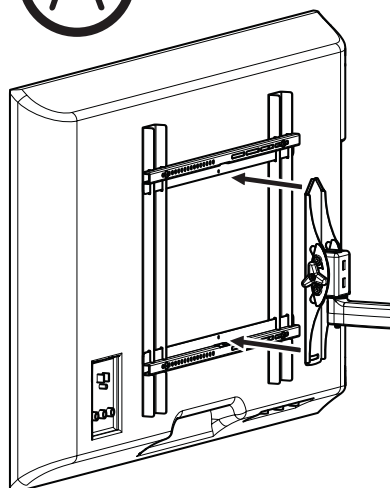

2

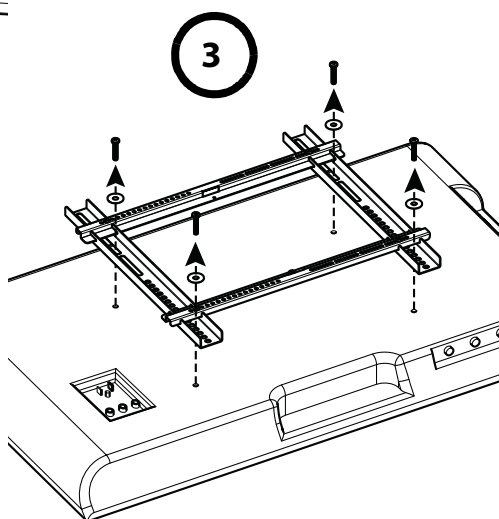

3


You'll need




Phillips screwdriver

STEP 3 - Determine whether your TV has a flat back or an irregular or obstructed back

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 If your TV has a table-top stand attached, remove the stand. See the documentation that came with your TV for instructions.
- 3 Temporarily lay your existing TV wall mount brackets (not included) on the back of your TV.
- 4 Align the screw holes in your existing TV wall mount brackets with the mounting screw holes on your TV.
- 5 Identify which type of back your TV may have:
 - **Flat back:** The brackets lay flush against the back of your TV and do not block any jacks. You do not need spacers when assembling the wall mount.

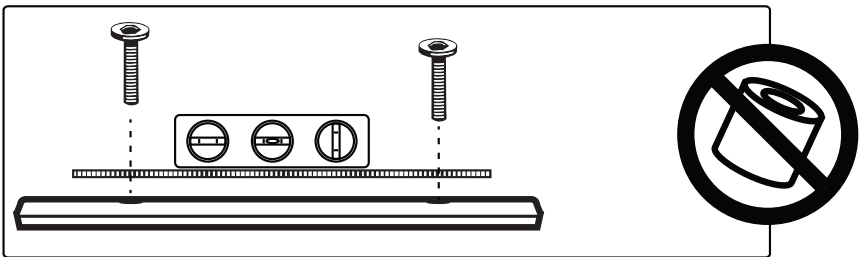


You'll need

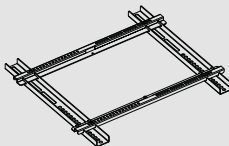


TV wall mount bracket

- **Obstructed back:** A bracket blocks any of the jacks on the back of your TV. You will need spacers when assembling the wall mount.

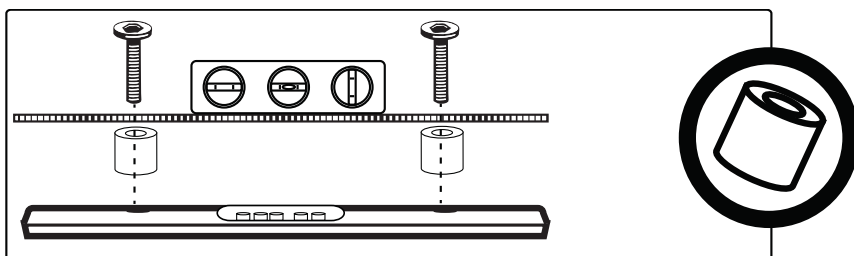


- **Irregularly-shaped back:** There is a gap between a bracket and some part of the back of your TV. You will need spacers when assembling the wall mount.

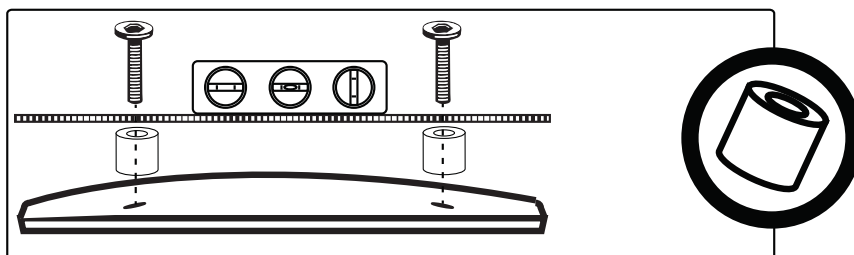

6 Remove the TV brackets.

You'll need

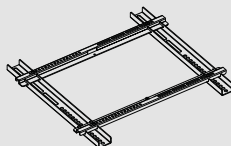

TV wall mount bracket

STEP 4 - Select screws, washers, and spacers

- 1 Select the hardware necessary for your TV (screws, washers, and spacers). A limited number of TVs come with mounting hardware included. (If there are screws that came with the TV, they are almost always in the holes on the back of the TV.)

If you don't know the correct length and diameter of the mounting screws your TV requires, test various sizes by hand threading the screws.

Select one of the following types of screws:

M4 × 16 mm screws (I)	M6 × 25 mm screws (L)
M4 × 40 mm screws (P)	M6 × 40 mm screws (R)
M5 × 16 mm screws (J)	M6 × 50 mm screws (S)
M5 × 40 mm screws (Q)	M8 × 40 mm screws (T)
M6 × 16 mm screws (K)	


Select one of the following types of washers:

M4/M5 washers (G)	M6/M8 washers (H)
M4/M5 washers large (GG)	M6/M8 washers large (HH)

For an irregular or obstructed TV back, use the spacers (**N**) provided.



CAUTION: To avoid potential personal injuries and property damage, make sure that there are adequate threads to secure the brackets to your TV. If you encounter resistance, stop immediately and contact customer service. Use the shortest screw and spacer combination to accommodate your TV. Using hardware that is too long may damage your TV. However, using a screw that is too short may cause your TV to fall from the mount.

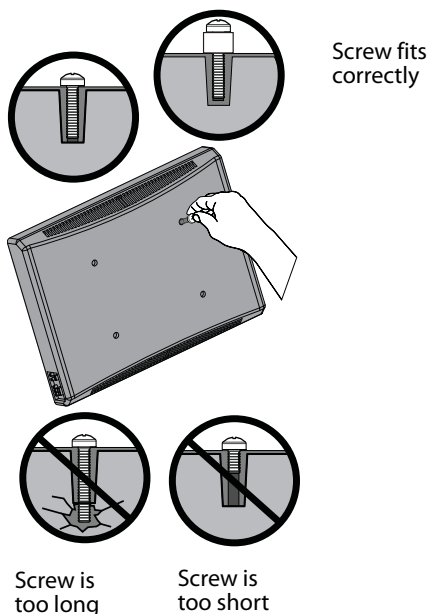

2 Remove the screws.

3 For a flat back TV, go to "STEP 5 - Option 1: Attaching the mounting hardware to TVs with a flat back" on page 16.

-OR-

For an irregular or obstructed back, go to "STEP 5 - Option 2: Attaching the mounting hardware to TVs with irregular or obstructed backs" on page 18.



STEP 5 - Option 1: Attaching the mounting hardware to TVs with a flat back


- 1** Place the mount spacers (**F**) over the top two screw holes on the back of the TV.
- 2** Place the soundbar bracket assembly (**A**) over the bottom two screw holes on the back of the TV. To make sure the arms are not visible when on the wall, align the arms so they reach the bottom or corners of the TV, but do not over hang the edges.
- 3** Align your existing TV wall mount brackets with the screw holes on the back of the TV.
- 4** Install screws (**I, J, K, L, or M**) and washers (**G, GG, H, or HH**) through the top two holes in the wall mount bracket. The TV brackets should be level on the back of the TV. Do not tighten.
- 5** Install screws (**I, J, K, L or M**) and washers (**G, GG, H, or HH**) through the bottom two holes in the wall mount bracket.

Continued on next page.

6 Tighten all screws, but do not over-tighten.


NOTE: Your existing TV wall mount may vary from the one shown below. Refer to the instructions that came with your existing TV wall mount for attaching brackets to the back of the TV. However, you **MUST** use the screws and washers provided with the soundbar mount instead of the screws and washers that came with your existing wall mount.

WARNING: You must use the larger washers (**GG** or **HH**) unless they do not fit your TV bracket.

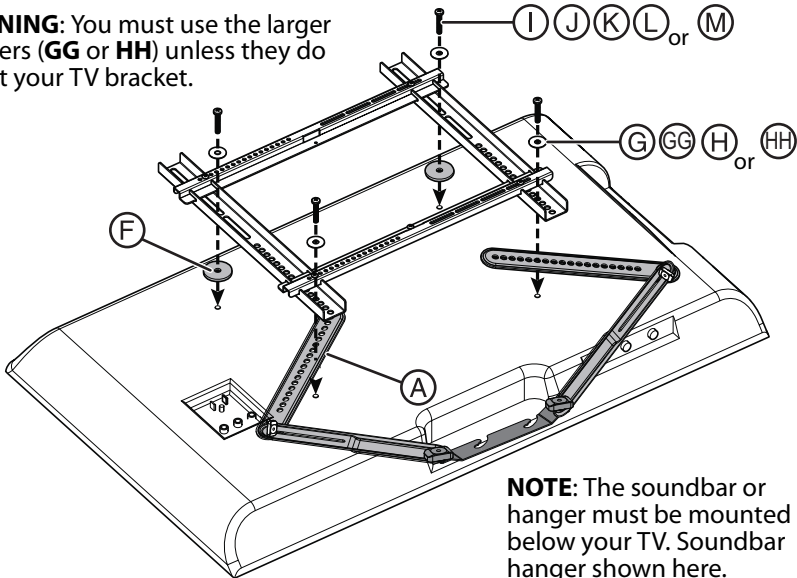

NOTE: The soundbar or hanger must be mounted below your TV. Soundbar hanger shown here.

You'll need

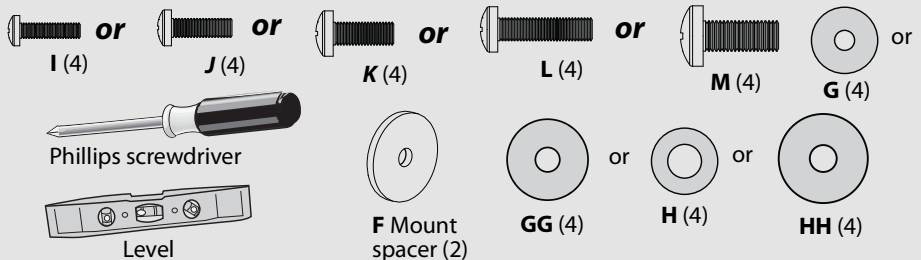

STEP 5 - Option 2: Attaching the mounting hardware to TVs with irregular or obstructed backs


- 1** Place the spacers (**N**) and mount spacers (**F**) over the top two screw holes on the back of the TV.
- 2** Place the spacers (**N**) and the soundbar bracket assembly (**A**) over the bottom two screw holes on the back of the TV. To make sure the arms are not visible when on the wall, align the arms so they reach the bottom or corners of the TV, but do not over hang the edges.
- 3** Align your existing TV wall mount bracket with the screw holes on the back of the TV.
- 4** Install screws (**P, Q, R, S, or T**) and washers (**G, GG, H, or HH**) through the top two holes in the wall mount bracket. The TV brackets should be level on the back of the TV. Do not tighten.
- 5** Install screws (**P, Q, R, S, or T**) and washers (**G, GG, H, or HH**) through the bottom two holes in the wall mount bracket.

Continued on next page.

6 Tighten all screws, but do not over-tighten.


NOTE: Your existing TV wall mount may vary from the one shown below. Refer to the instructions that came with your existing TV wall mount for attaching brackets to the back of the TV. However, you **MUST** use the screws and washers provided with the soundbar mount instead of the screws and washers that came with your existing wall mount.

WARNING: You must use the larger washers (**GG** or **HH**) unless they do not fit your TV bracket.

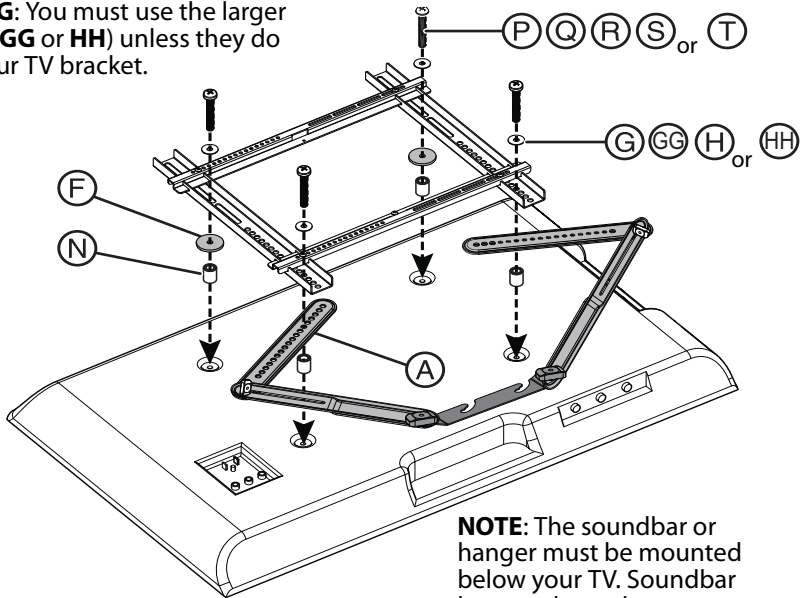

NOTE: The soundbar or hanger must be mounted below your TV. Soundbar hanger shown here.

You'll need

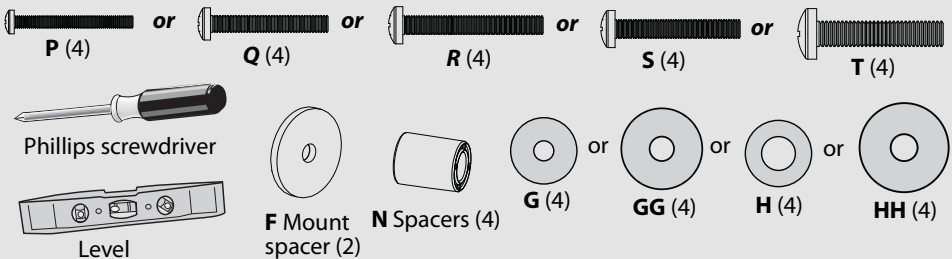


STEP 6 - Final adjustments, tightening, and hanging the TV

- 1 Adjust the soundbar bracket assembly (A) until the soundbar is in the position you want.


NOTE: The soundbar must be positioned within 2 inches (5.1 cm) of the TV.




CAUTION: Heavy. You may need assistance with this step.

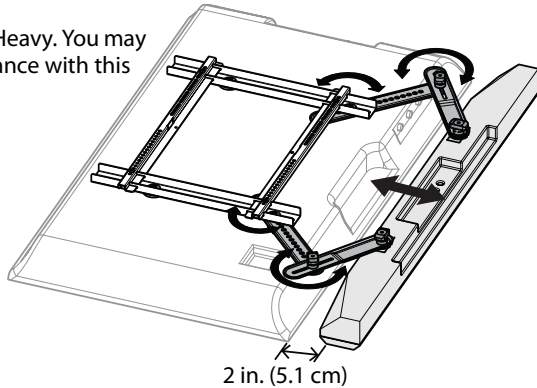

Attaching the soundbar using the manufacturers supplied bracket.

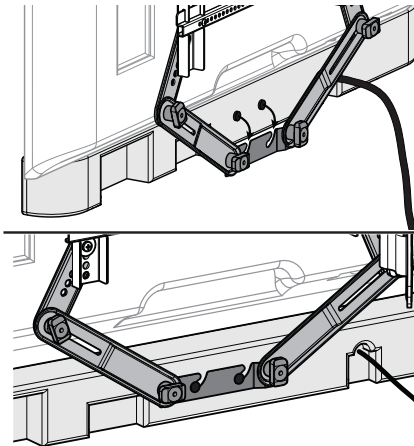


NOTE: The TV/bracket arms should be positioned as vertically as possible.

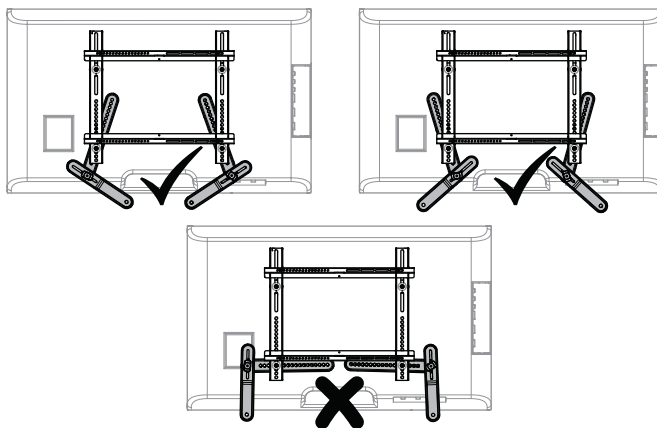

- 2 When the soundbar is in the correct position, tighten all fasteners. Do not overtighten the screws.


NOTE: Tighten the upper four connectors with the screwdriver and the bracket connectors with the 3/16 in. hex key. The soundbar knobs should be hand tightened.

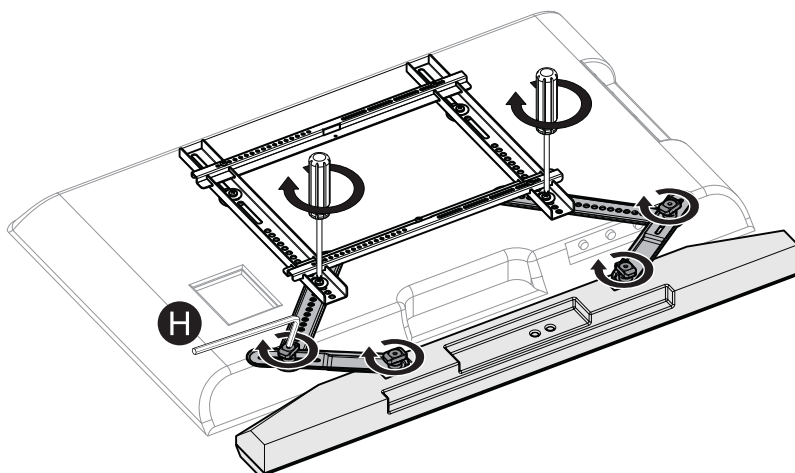




- 3 Hang the TV/soundbar assembly on the wall, following the instructions that came with your existing TV wall mount, then reconnect the cables and power cord.

 You'll need



Phillips screwdriver

 

H 3/16 in. Hex key

For customer service, call: 800-620-2790 (U.S./Canada markets) or 01-800-926-3010 (Mexico).



Part Number: 6907-002115 00

www.rocketfishproducts.com
(800) 620-2790

ROCKETFISH is a trademark of Best Buy and its affiliated companies.
Registered in some countries. Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN 55423-3645 USA
© 2016 Best Buy. All rights reserved.
Made in China