



SOUND STATION INSTALLATION & USER GUIDE

TTR2



Introduction	4
Features	4
Safety and Care Information	5
What's in the Box?	6
Sound Station Controls	7
Remote Control	8
Installation	9
Step 1: Connect to a Wireless Network	10
Step 2: Enter Your SiriusXM Streaming Account Information	13
Navigation Basics	14
Using the Sound Station	16
Home Screen	16
Listening to SiriusXM	16
Listening to SiriusXM	17
Now Playing Screen	17
Viewing and tuning Channels By Category	17
Viewing and Tuning Channels in a List	18
Direct Tune	18
Start Now	18
Presets	19
Listening to MyMix	20
MyMix Now Playing Screen	20
Configuring MyMix for a Channel	21
Tuning to a MyMix Channel	21
Ending MyMix	22
Editing a MyMix Channel	22
Listening to On Demand	23
On Demand Now Playing Screen	23
Listening to On Demand Shows	23
Adding On Demand Show to Favorites	24
Listening to Recent Shows/Channels	25
Listening to Favorites	26
Listening to a Favorite Show	26
Deleting a Favorite Show	26
Advanced Features	27
Start Now, Pause/Play, Rewind, Fast Forward, and Go to Live	27
TuneStart	27
Alarm Clock	28
Snooze Timer	29
Sleep Timer	29
Equalization Settings	30
Aux In	30
Configuring the Sound Station	31
Setup	31
SiriusXM Account	31
Network Wizard	32
Network Info	33
Firmware Update	34
Info	34
Factory Reset	34
Display Brightness	35
Clock and Alarms	35

Troubleshooting	37
Product Specifications	39
Patent and Environmental Information	40
Patent Information	40
Environmental Information	40
FCC Statement	41
Important Legal Information	42

Features

Thank you for purchasing the SiriusXM Sound Station!

Your new SiriusXM Sound Station comes with everything you need to enjoy SiriusXM in your home.

- Set up easily for use in your home or office
- View large, color display with album art and channel information
- Enjoy powerful, full-range sound with adjustable equalizer
- Access SiriusXM On Demand shows
- Personalize favorite music and comedy channels with MyMix
- Go back up to five hours and hear shows from the beginning with Start Now
- Pause, rewind and replay live radio
- Set multiple alarms, sleep and snooze timers on the integrated clock
- Select ten favorite channels for easy access
- Use WiFi 802.11 b/g/n wireless Internet connection with WEP and WPA security

Use this User Guide to familiarize yourself with all of your Sound Station's features and capabilities. For the latest information about your Sound Station and other SiriusXM products and accessories, visit **siriusxm.com**.

Safety and Care Information



IMPORTANT! Always read and understand all the instructions to avoid injury to yourself and/or damage to your device. Sirius XM Radio Inc. disclaims all responsibility for damage from data loss due to breakdown, repair, or other causes.

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use device near or in water.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight for a prolonged period of time, and do not expose to fire, flame, or other heat sources.
- Do not try to disassemble and/or repair device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.
- If the screen is damaged, do not touch the liquid crystal fluid.

WARNING!

- Opening the case may result in electric shock.
- Make sure that you insert the plug all the way into the outlet.
- Do not touch the device with wet hands.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- This device should be unplugged from the AC outlet during a thunder and lightning storm, and when the device will not be used for an extended period of time.
- Use the power plug to disconnect the device from the power source. To begin using the device again, reconnect it to an AC outlet.
- Connect the device to an easily accessible AC outlet, so that the device can be quickly disconnected, if necessary.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

When found on the apparatus, the lightning flash with arrowhead symbol indicates hazards arising from dangerous voltages.


When found on the apparatus, the exclamation point within an equilateral triangle symbol indicates the user should read all safety statements found in the user's manual.

When found on the apparatus, the double box symbol indicates double insulation.


WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.


What's in the Box?

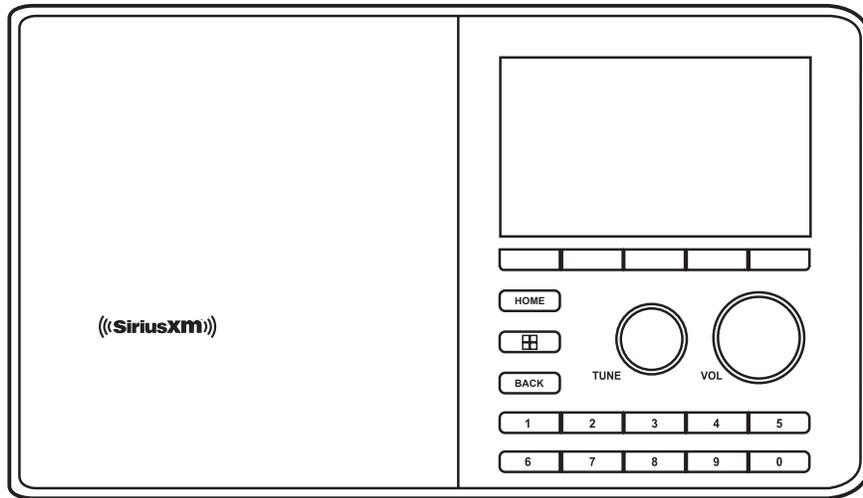

SiriusXM Sound Station

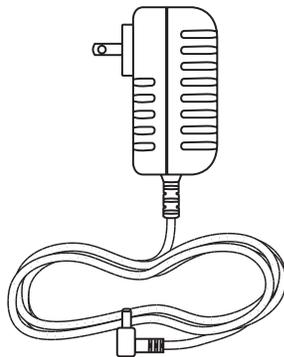

AC Power Adapter

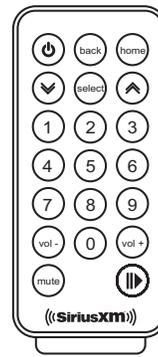

Remote Control

Sound Station Controls

Context Sensitive Buttons

These buttons change their functions according to the context. Press to select the function shown on the display screen just above the button.

HOME Button

Press to access the menu for listening modes and configuration options.

Action Panel Button

While at the Now Playing screen, press to learn more about the channel, show, or artist, and for additional selection options, for example, customizing a channel (MyMix).

BACK Button


Press to return to the previously displayed screen.

0-9 Number Buttons

Press to tune to a favorite channel; press and hold to set the current channel as a favorite channel.

TUNE Knob (Multifunction)


Turning the knob at the Now Playing screen displays the Channel Listing screen; pressing the knob at the Now Playing screen displays the Direct Tune screen; turning the knob in a menu or user input screen scrolls through and highlights menus and choices; pressing the knob in a menu or user input screen selects the highlighted item.

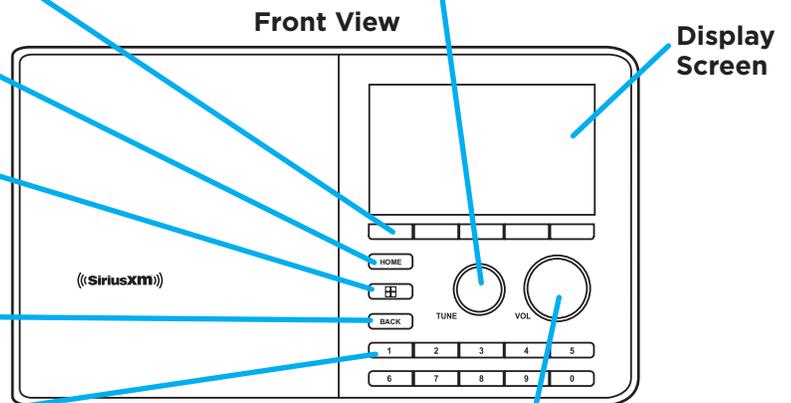

Volume / Mute Knob

Turn to adjust the volume; press to mute and un-mute audio.

Top View

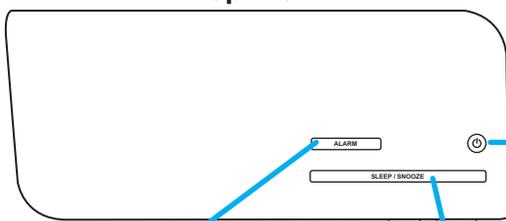

Power/Standby Button

Press to turn On/Standby; also press to turn alarm off.


Alarm Button

Press to set and edit alarms; press and hold to cancel the next scheduled alarm.

Sleep / Snooze Button

During an alarm press to snooze the alarm for 10 minutes or set snooze time; at the Now Playing screen press to set the sleep timer.

Rear View

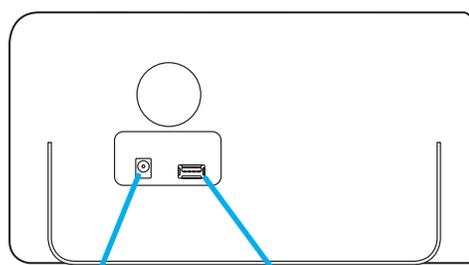


Power Connection

USB Connection

For external wired Ethernet Adapter, sold separately.

Side View

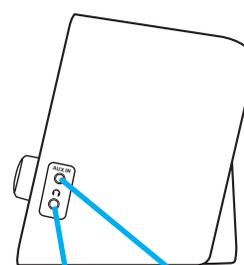

Headphone Connection

Aux In Connection

Remote Control

Power/Standby Button

Press to turn On/Standby; also press to turn alarm off.

Select Button


Press to select highlighted items; pressing at the Now Playing screen displays the Direct Tune screen.

0-9 Number Buttons

Press to tune to a favorite channel; press and hold to set the current channel as a favorite channel.

Mute Button

Press to silence the audio.

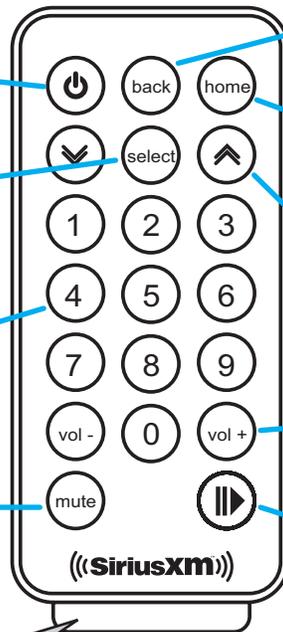

Back Button

Press to return back to the previous display screen.

Home Button

Press to display the Home screen for listening modes and configuration options.

Arrow Buttons

Press in a menu or user input screen to scroll through and highlight menu items and choices.

Vol+/Vol- Buttons

Press to increase or decrease the audio volume.


Play/Pause Button

Press to pause or resume playing of the currently tuned channel or show.

IMPORTANT!
Pull tab and remove before using the Remote Control.

Battery Replacement

Follow the instructions on the back of the Remote Control to replace the battery. The battery is a CR2025.

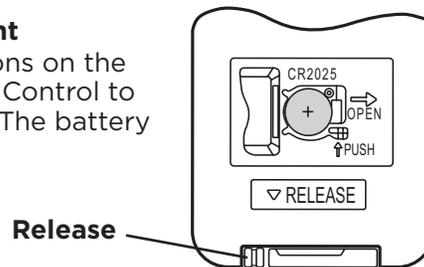

The SiriusXM Sound Station allows you to listen to all of the channels on your SiriusXM subscription package using a wireless Internet connection (Wi-Fi®).

You must have a qualifying SiriusXM subscription to use the Sound Station. You can add streaming to your existing SiriusXM subscription, or subscribe only to the SiriusXM Internet Radio package.

To subscribe to SiriusXM, go to **siriusxm.com/streaming** or call **866-635-2349**. See Details below. When subscribed, you will be provided with your account user name and password.

Once you have subscribed, verify that you are subscribed to the service by listening online:

Go online to **siriusxm.com/streaming**. Click on the **Listen Now** link, enter your username and password, and click **Login**. If you can listen, then you are subscribed to stream SiriusXM. Close the browser window to exit the player before continuing.

The SiriusXM Sound Station supports a wireless Internet connection through any standard 802.11b/g access point. This includes wireless networks which are WEP/WPA/WPA2 protected and require a password, and wireless networks where the network name (SSID) is hidden. Once you have connected to a wireless network, the Sound Station will remember your network settings so you will not have to enter the information again, unless you perform a Factory Reset of the Sound Station.

Details: The subscription plan you choose will automatically renew and you will be charged according to your chosen payment method at then-current rates. Fees and taxes apply. To cancel, you must call us at 1-866-635-2349. See our Customer Agreement for complete terms at www.siriusxm.com. All fees and programming subject to change.

Step 1: Connect to a Wireless Network

The easiest way to connect to a wireless network is to have the Sound Station scan for wireless networks, and then choose your wireless network from the list of wireless networks. The Sound Station will automatically do this the first time you power it on.

However, if your wireless network name (SSID) is hidden, or if your network is DHCP disabled, you'll have to manually enter the network settings. Refer to "Manually Connecting to a Wireless Network" on page 11.




Turning the **TUNE knob** scrolls through menus and lists to highlight items, and pressing the **TUNE knob** selects a highlighted item.

Easy Connection to a Wireless Network

1. Plug the AC Power Adapter into an AC outlet, and plug the power plug into the connector on the rear of the SiriusXM Sound Station. Press the **Power** button if the Sound Station does not automatically turn on.
2. If the Sound System has not previously connected to a wireless network, the Sound Station will display the Network Wizard screen, with Wireless highlighted. Press the **TUNE Knob**.

Otherwise, press the **HOME** button, turn the **TUNE knob** to highlight Setup and press the **TUNE knob** to select. Turn the **TUNE knob** to highlight Network Wizard and press **TUNE knob** to select. Wireless will be highlighted; press **TUNE knob** to select.

3. At the Wireless screen, Scan will be highlighted. Press the **TUNE knob** to select.
4. Wait while the Sound Station scans for wireless networks and then select your wireless network from the list. Turn the **TUNE knob** to highlight your wireless network and then press the **TUNE knob** to select.
5. The Sound Station will attempt to connect to the wireless network. If you chose a network that requires a password, you will be prompted to enter the network password. Password will be highlighted. Press the **TUNE knob** to begin entering the password. Otherwise, the Sound Station will attempt to connect to the wireless network.
6. To enter the network password, turn the **TUNE knob** to highlight each character of the password and press the **TUNE knob** to select the character. Then enter the next character and continue until you have finished entering the password. If you make an error, press the **Delete** button to erase the character. When you have completed entering the network password, press the **Enter** button.
7. When the Sound Station has successfully connected to the wireless network, "Connected successfully" will be displayed.

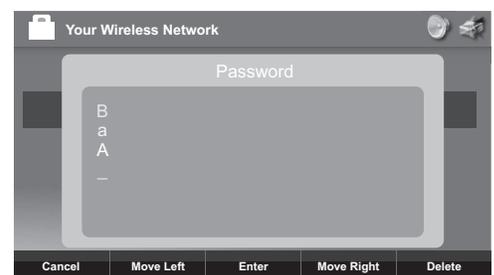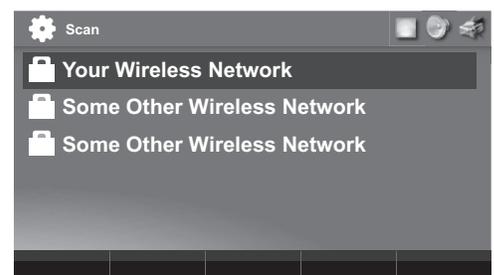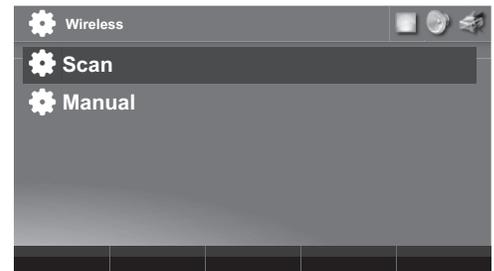

If you have not yet entered your username and password, continue with "Step 2: Enter Your SiriusXM Streaming Account Information" on page 13.

Manually Connecting to a Wireless Network


To manually connect to a wireless network, you'll need to know the SSID (wireless network name), password, and type of encryption, and also may need additional information about your wireless network if it is not DHCP enabled:

SSID (wireless network name)	
Password	
Encryption (None, WEP, WPA-PSK)	
IP (Address for the Sound Station)	
Mask (Network Mask IP Address)	
Gateway (Gateway IP Address)	
DNS (Primary Name Server IP Address)	

1. Plug the AC Power Adapter into an AC outlet, and plug the power plug into the connector on the rear of the SiriusXM Sound Station. Press the **Power** button if the Sound Station does not automatically turn on.
2. If the Sound System has not previously connected to a wireless network, the Sound Station will display the Network Wizard screen, with Wireless highlighted. Press the **TUNE Knob**.

Otherwise, press the **HOME** button, turn the **TUNE knob** to highlight Setup and press the **TUNE knob** to select. Turn the **TUNE knob** to highlight Network Wizard and press **TUNE knob** to select. Wireless will be highlighted; press **TUNE knob** to select.

3. At the Wireless screen, Scan will be highlighted. Turn the **TUNE knob** to highlight Manual and then press the **TUNE knob**.
4. SSID (wireless network name) will be highlighted. Press the **TUNE Knob**. Enter the SSID by turning the **TUNE knob** to highlight each character of the SSID and press the **TUNE knob** to select the character. If you make an error, press the **BACK** button to erase the character. When you have completed entering the SSID, press the **Enter** button.
5. Turn the **TUNE knob** and highlight Password. To enter the password, turn the **TUNE knob** to highlight each character of the password and press the **TUNE knob** to select the character. If you make an error, press the **BACK** button to erase the character. When you have completed entering the password, press the **Enter** button.

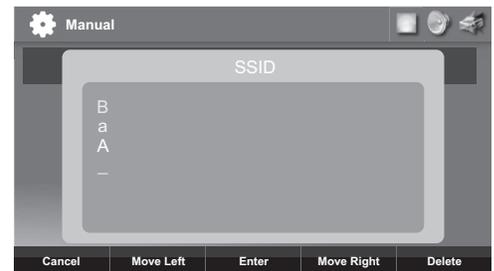

6. Turn the **TUNE knob** and highlight Encryption. Turn the **TUNE Knob** to highlight the type of encryption and press the **TUNE Knob** to select.
7. If DHCP is enabled on your wireless network, turn the **TUNE Knob** and highlight DHCP Connect and press the **TUNE Knob**. Skip ahead to step 14.

If DHCP is not enabled on the wireless network, turn the **TUNE Knob** and highlight Static IP and press the **TUNE Knob**.

8. IP will be highlighted. Press the **TUNE knob** to select. Enter the IP Address. The IP address must be entered in the xxx.xxx.xxx.xxx format. When you have completed entering the IP address, press the **Enter** button.
9. Enter the Network Mask in the same way as you entered the IP Address.
10. Enter the Gateway IP Address in the same way.

- 11.** Enter the DNS IP Address in the same way.
- 12.** When all the information has been entered, turn the **TUNE knob** to highlight Connect and press the **TUNE knob**.
- 13.** The Sound Station will attempt to connect to the wireless network, and will display “Connected successfully” if the connection to the wireless network was successful. If the Sound Station cannot connect to the wireless network, there is likely an error in the information that was entered.
- 14.** If you have not yet entered your SiriusXM streaming username and password, continue with “Step 2: Enter Your SiriusXM Streaming Account Information” on page 13.


Step 2: Enter Your SiriusXM Streaming Account Information

The SiriusXM Sound Station requires your SiriusXM streaming username and password to connect to SiriusXM. If are not yet subscribed to SiriusXM, go to siriusxm.com/streaming or call **866-635-2349**. When subscribed, you will be provided with your account username and password.


1. If you have not previously entered your username and password, or have manually configured the wireless network in the previous step, the Sound Station will already be prompting to enter your username and password. Continue with the next step.

Otherwise, press the **HOME** button, turn the **TUNE knob** to highlight Setup and press the **TUNE knob** to select. Turn the **TUNE knob** to highlight **SiriusXM Account** and press **TUNE knob** to select.

2. Username will be highlighted. Press the **TUNE knob**. Enter each character in your SiriusXM streaming username and press the **TUNE knob** to select the character. When complete press the **Enter** button. Your username is case sensitive.
3. Turn the **TUNE knob** to highlight Password and press the **TUNE knob** to select. Enter each character in your password and press the **TUNE knob** to select the character. When complete press the **Enter** button. Your password is case sensitive.
4. The Sound Station will connect to SiriusXM and confirm the username and password you entered. If correct, "SiriusXM credentials accepted" will be briefly displayed.

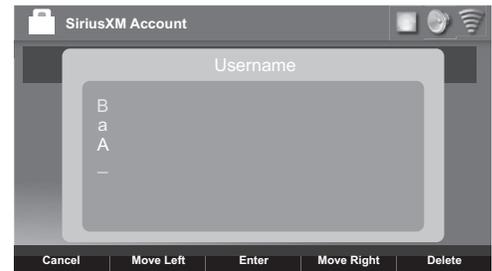

5. Next you will be prompted to select your time zone. Turn the **TUNE knob** to highlight your time zone and press the **TUNE knob** to select.
6. If you are prompted that an Internet Update is available, allow the update to install. Turn the **TUNE knob** to highlight Install Update and press the **TUNE knob** to select. Wait until the update has completed and you see the message, "Please press the Power button".
7. The installation is complete. Press the power button if the Sound Station is in Standby mode. The Home screen will be shown. Scroll the **TUNE knob** until the Category icon is highlighted and press the **TUNE knob**. Turn the **TUNE knob** to highlight a category and press the **TUNE knob** to display a list of channels. Turn the **TUNE knob** to highlight a channel and press the **TUNE knob** to tune the channel.

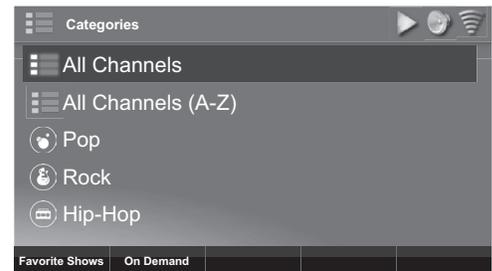

The installation is complete.

Power Button



The **Power** button turns the Sound Station on or places it in Standby mode. Also press to turn an alarm off.

ALARM Button



Pressing the **ALARM** button displays the alarm setup menu screen. Press the **Add alarm** button to add a new alarm. Turn the **TUNE knob** to highlight an existing alarm and press the **TUNE knob** to enable or disable the alarm, or to modify the alarm settings. You can set up to five alarms.

Press and hold the **ALARM** button to cancel the next scheduled alarm.

SLEEP / SNOOZE Button



Sleep: When the alarm clock is sounding, pressing the **SLEEP/SNOOZE** button will silence the alarm for 10 minutes, or you can select the amount of sleep time. To restart the sleep timer once it has begun, press the **SLEEP/SNOOZE** button again. To cancel the sleep timer press the **Power** button.

Snooze: Pressing the **SLEEP/SNOOZE** button when a alarm is sounding will set a snooze time of 10 minutes, or you can select the amount of snooze time. To cancel the snooze timer (or cancel an alarm) press the **Power** button.

To adjust the Sleep or Snooze time to a time other than 10 minutes, press the **SLEEP/SNOOZE** button and turn the **TUNE knob** to adjust the amount of sleep time, hours first, and then press the **TUNE knob** to select the hour setting. Do the same for the minutes.

Context Sensitive Buttons (5)



These buttons change their functions according to the context. Press to select the function shown on the display screen just above the button. These buttons are described in this User Guide in the context where they appear.

Tune Knob



The **TUNE knob** is multifunction: you can turn it clockwise or counter-clockwise and press it.

Turn: Turning the **TUNE knob** at the Now Playing screen displays the Channel Listing screen. When in menus or user input screens, turning the **TUNE knob** scrolls through and highlights menu items and choices.

Press and Release: Pressing the **TUNE knob** at the Now Playing screen displays the Direct Tune screen. When in menus or user input screens, pressing the **TUNE knob** selects the highlighted item.

VOL Knob



Turning the **VOL knob** clockwise or counter-clockwise increases or decreases the volume of the audio. Pressing the **TUNE knob** mutes and un-mutes the audio.

Number Buttons 0-9



The number buttons are used to store favorite channels in the button location by pressing and holding the button. Then you can tune a favorite channel just by pressing the button. They can also be used to enter a channel number when at the **Direct Tune** screen.

BACK Button



The **BACK** button returns back to the previously displayed screen.

Action Panel Button



The **Action Panel** button displays information about the artist, song or show, and may provide additional selection options, for example, personalizing a channel for MyMix.


HOME Button



Pressing the **HOME** button displays the Home screen showing the listening modes and configuration options for the Sound System.

Home Screen

The Home screen provides access to the different functions of the Sound Station. You can navigate the Home screen by pressing **HOME**, turning the **TUNE knob** to highlight an item, and pressing the **TUNE knob** to select.

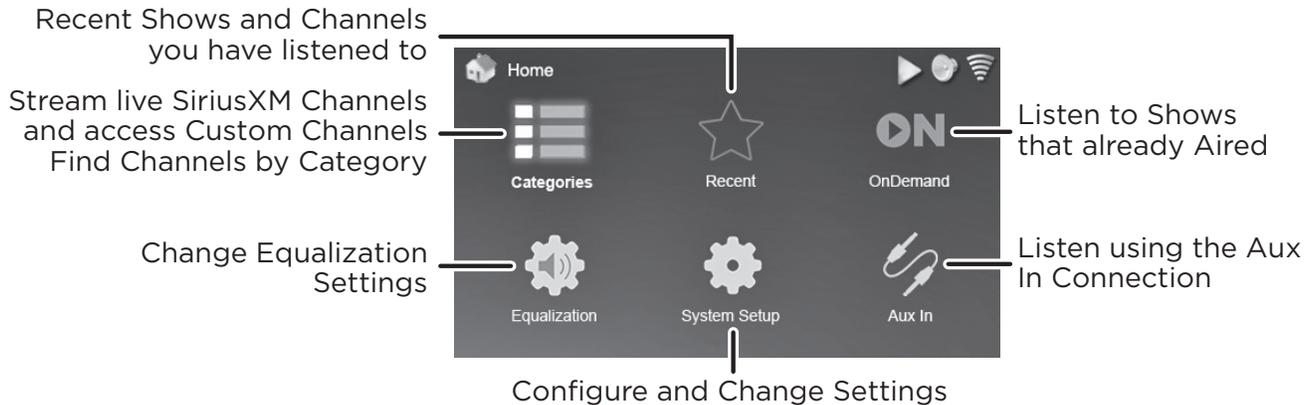

Listening to SiriusXM

You can listen to SiriusXM with the Sound Station in several ways:

Streaming SiriusXM: Listen to the SiriusXM channels live, or rewind up to the past 5 hours on each channel. Also, you can press the **Start Now** button and select a show that aired in the previous 5 hours on the channel (page 17).

MyMix: For music and comedy channels which have this feature, you can personalize your listening preferences to play more of what you like to hear (page 20).

On Demand: Use On Demand to find and listen to shows which have aired previously, or are currently playing, on SiriusXM. If you missed your favorite show, find and listen to it using On Demand. Or just browse the extensive On Demand library for something that interests you (page 23).

On Demand show episodes can be added to your Favorites so that you can easily find them (page 26).

Recent: The Sound Station keeps a list of the most recent shows and channels you have listened to so you can easily tune to them again (page 25).

Favorites: Save a list of individual shows using On Demand and then listen to the shows whenever you want (page 26).

Also familiarize yourself with the advanced features of the Sound Station, features such as Pause, Rewind, and Replay, the alarm clock and sleep timer features, equalization, Aux In, etc. (page 27).

Now Playing Screen



The Now Playing screen provides details about the currently playing song, show, or game.



Viewing and tuning Channels By Category

Channels are organized into categories to make it easier for you to find the ones that suit your taste.

1. Press **HOME**.
2. Turn the **TUNE knob** to highlight Categories and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to highlight a category and press the **TUNE knob** to select the category.
4. Turn the **TUNE knob** to scroll through the channels in the category. Press the **TUNE knob** to select a channel.

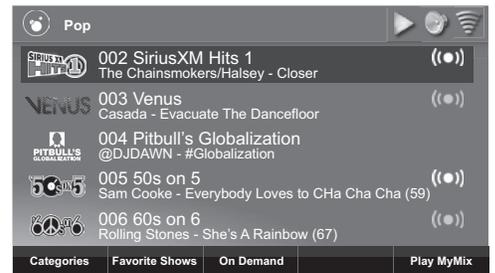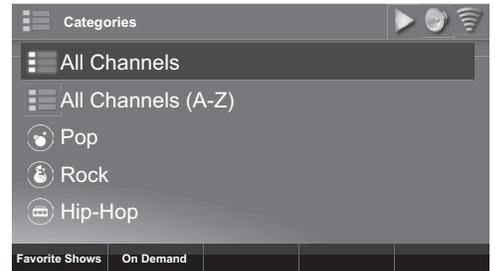


Viewing and Tuning Channels in a List

Channels can be tuned from a list of all available channels, “All Channels”.

1. Press **HOME**.
2. Turn the **TUNE knob** to highlight Categories and press the **TUNE knob** to select.
3. Press the **TUNE knob** to highlight All Channels and press the **TUNE knob**.
4. Turn the **TUNE knob** to browse through the channels, and highlight a channel and press the **TUNE knob** to tune the channel. The Sound Station will tune to the channel.




TIP! Go to siriusxm.com/channellineup for the latest SiriusXM channel lineup.

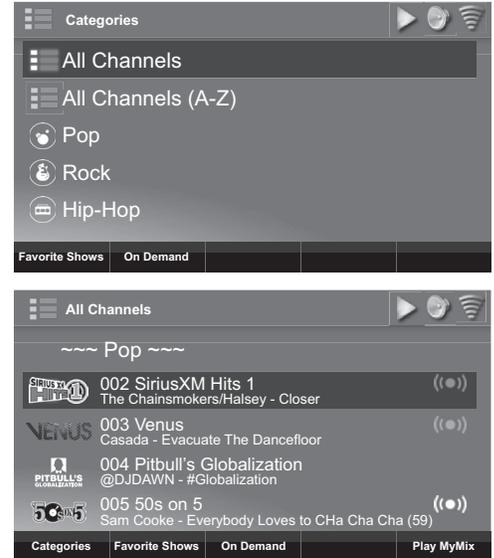

Direct Tune

A channel can be tuned directly by entering the channel number when at the Now Playing screen.


1. At the Now Playing screen, press the **TUNE knob**.
2. Use the **0-9** number buttons on the Sound Station or Remote Control to enter the channel number, or turn the **TUNE knob** to highlight a number and press the **TUNE knob** to select and move to the next number. If you make a mistake, press the **Delete** button.
3. When the channel number has been entered, press the **Enter** button. The Sound Station will tune to the channel.

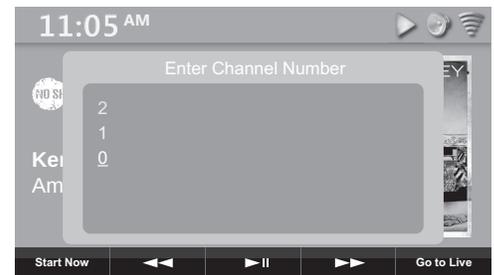

Start Now

You can tune to a show that aired in the past 5 hours on a channel by using the **Start Now** button when at the Now Playing screen.

1. At the Now Playing screen, press the **Start Now** button.
2. Turn the **TUNE knob** to highlight a show in the list and press the **TUNE knob** to begin playing the show.

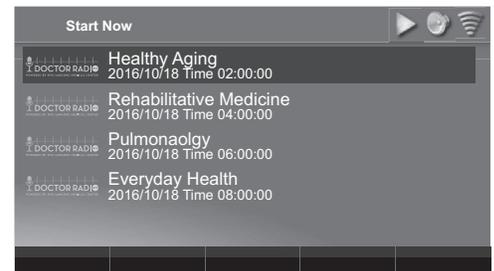

Presets


You can assign up to 10 of your favorite channels to the preset buttons (0-9), so you can easily tune them. Presets can be either channels, or channels you have personalized for MyMix.

To assign a favorite channel to a Preset button:

1. Tune to the channel you want to save as a preset.
2. Press and hold a number button (**0-9**) to assign the custom channel as a preset to that button.



IMPORTANT! If the button you choose already has a preset channel assigned to it, the number button will be replaced with the new preset channel.

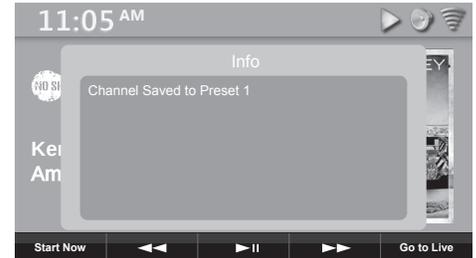

To tune a Preset channel:

1. Press the number button **0-9** that is assigned to the Preset channel. The Sound Station will tune to the channel.

MyMix Now Playing Screen

You can personalize your listening preferences for many music and comedy channels, to hear more of the type of music you prefer. Channels which can be personalized have the MyMix icon (Ⓜ) displayed in the channel list.



You can personalize your listening experience by adjusting the parameters of a channel's genre. The parameters will vary from channel to channel.

Personalizing a Channel for MyMix


1. Tune to the channel which you want to personalize for MyMix and press the **Action Panel** button.
2. Press the **Play MyMix** button.
3. Turn the **TUNE Knob** to highlight a personalization setting and press the **TUNE Knob** to select the setting. Then turn the **TUNE Knob** to adjust the setting. Press the **TUNE Knob** again to confirm the setting.
4. If you do not want to hear DJ talk, select the Music Only checkbox by tuning the **TUNE Knob** to highlight Music Only and press the **TUNE Knob** to select. (“Music Only” will also remove DJ talk on the comedy channels.)
5. When you have finished adjusting the MyMix personalization settings, press the **Play MyMix** button.
6. MyMix will now play the channel personalized according to your preference. A MyMix icon is displayed directly to the right of the channel logo indicating that you are listening to MyMix. If you wish to exit MyMix, press the **Go to Live** button.



Tuning to a MyMix Channel

Once you have personalized a channel for MyMix, you can tune to the MyMix channel.

1. Press **HOME**.
2. Turn the **TUNE knob** to highlight Categories and press the **TUNE knob** to select.
3. Press the **TUNE knob** to select All Channels or turn the **TUNE knob** to the category desired and press the **TUNE knob** to select.
4. Turn the **TUNE knob** to browse through the channels. Channels which you have personalized for MyMix will show the MyMix icon enabled (bright). Turn the **TUNE knob** to highlight a channel and press the **Play MyMix** button.
5. If you are already tuned to a channel which has been personalized for MyMix, you can tune to the MyMix channel by pressing the **Action Panel** button and then pressing the **Play MyMix** button.
6. The MyMix channel will be tuned and the MyMix icon displayed directly to the right of the channel logo to indicate the MyMix channel is playing.

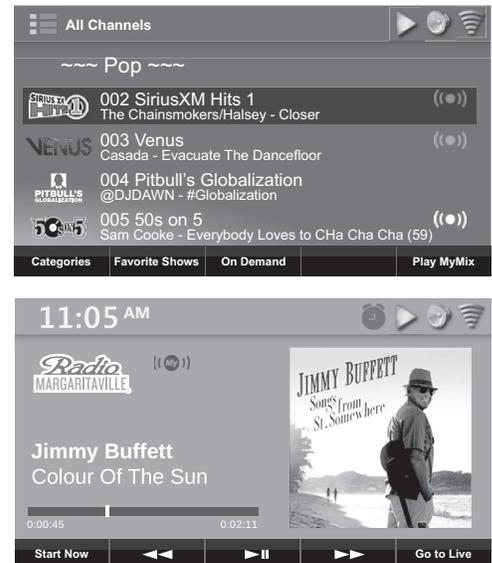

As songs play from the MyMix channel, a timebar is displayed. You can press the **Pause/Play** button to pause, and **Rewind** and **Fast Forward** buttons rewind or advance.

Ending MyMix

When the a MyMix channel is playing, you can end MyMix and return to live SiriusXM without changing the channel.

1. When listening to a MyMix channel, press the **Go to Live** button. The channel will be tuned live, and the MyMix icon will no longer be displayed on the Now Playing screen.

Editing a MyMix Channel

You can change the personalization settings of a MyMix channel that had previously been personalized for MyMix.

1. Tune to the MyMix channel, or tune to the channel which has been personalized for MyMix.
2. Press the **Action Panel** button and press the **Edit MyMix** button.
3. Adjust the MyMix personalization settings and then press the **Play MyMix** button to save the settings and play the MyMix channel.

On Demand Now Playing Screen

On Demand allows you to listen to shows which have aired previously on SiriusXM or are currently playing.



Listening to On Demand Shows

On Demand shows can be found by several search methods.


1. Press **HOME**.
2. Either turn the **TUNE knob** to highlight On Demand and press the **TUNE knob**, or turn the **TUNE knob** to highlight Categories and press the **On Demand** button.
3. Next select the method by which to search for shows. Turn the **TUNE knob** to highlight a search selection and press the **TUNE knob** to select.

All Shows: These are all available shows listed by channel number.

Favorites: These are shows which you have saved as favorite shows.

Shows by Category (Pop, Rock, Etc.): These are all shows in a category, listed by channel number.


4. Once you have searched for and located a show, you can select a show episode from the show list. Turn the **TUNE knob** to highlight a show in the list and press the **TUNE knob**.
5. If you have selected a show from the list which has more than one episode, select an episode by turning the **TUNE knob** to highlight a show episode. Press the **TUNE knob** to listen to the show episode, or press the **Back** button to return to the show list.
6. The circles show at the right of each show denote whether the show episode has been listened to or not. Empty circles denote the show episode has not been listened to, a half filled circle denotes the show episode has been partially listened to, while a filled circle denotes the show episode has been listened to in its entirety.

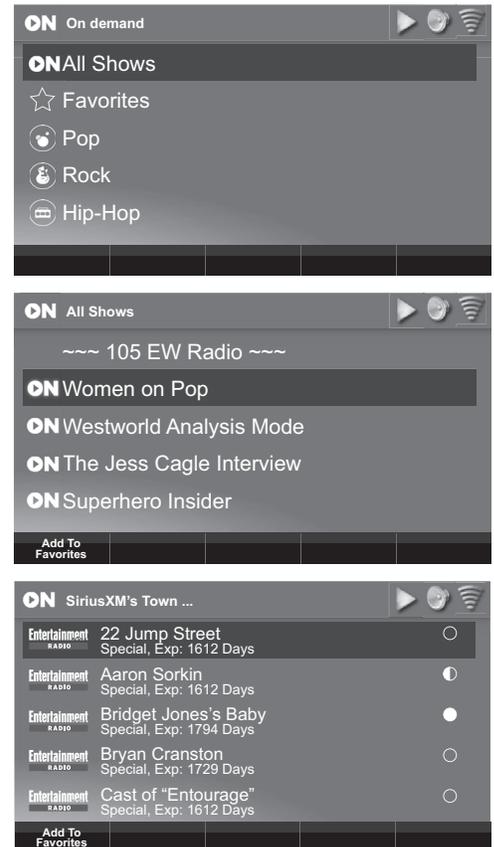

Adding an On Demand Show to Favorites


You can add an On Demand show to Favorites to make the show episodes easy to find and tune.

1. Search for and locate a show. (Refer to “Listening to On Demand Shows” on page 23.)
2. Once you have located a show, or a show episode, highlight the show or show episode by turning the **TUNE knob**.
3. Press the **Add To Favorites** button to add the show to Favorites.
4. The confirmation message **Show added to favorites** will be displayed to confirm the show has added to favorites.

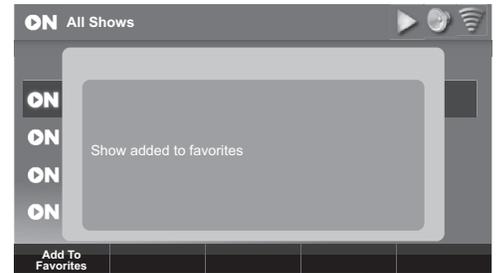

The Sound Station keeps a list of the most recent shows and channels you have listened to. You can easily tune to them again from the Recent list.


1. Press **HOME**.
2. Turn the **TUNE knob** to highlight **Recent**, and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to highlight a recent show or channel in the list and press the **TUNE knob** to tune the show or channel.
4. If a channel in the Recent list has been personalized for MyMix, the MyMix channel can be tuned by pressing the **Play MyMix** button.

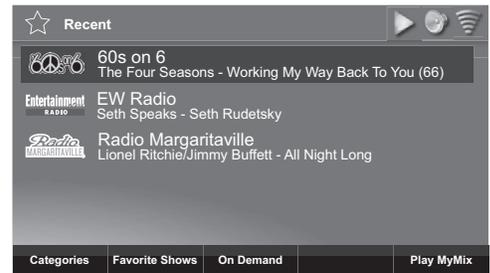

You can add shows to Favorites using On Demand (page 23), and then select and listen to them from Favorites.


Listening to a Favorite Show

1. Press **HOME**.
2. Turn turn the **TUNE knob** to highlight **On Demand**, and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to highlight **Favorites**, and press the **TUNE knob** to select.
4. Turn the **TUNE knob** to highlight a favorite show in the list and press the **TUNE knob** to listen.

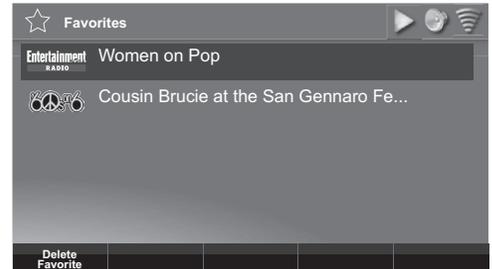

Deleting a Favorite Show

1. Press **HOME**.
2. Turn turn the **TUNE knob** to highlight **On Demand**, and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to highlight **Favorites**, and press the **TUNE knob** to select.
4. Turn the **TUNE knob** to highlight the favorite show in the list which you want to delete and press the **Delete Favorite** button.
5. The message **Show removed from favorites** is displayed to confirm that the show has been deleted from favorites.

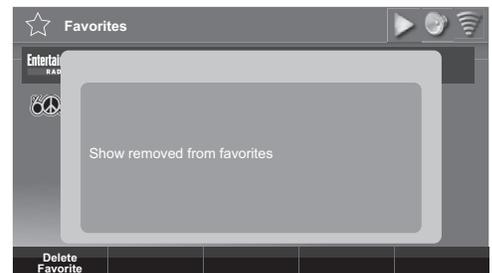

Start Now, Pause/Play, Rewind, Fast Forward, and Go to Live

The Sound Station is able to pause, rewind, and fast-forward through channels and content. When listening to SiriusXM channels live, you can rewind up to the past 5 hours of content that aired on the channel. When listening to On Demand content, or content saved as Favorites you can also pause, rewind, and fast-forward through the show episode. When listening to a MyMix channel, you can pause or resume playing the current song, fast-forward to the next song, or rewind to the previous song.

The Now Playing screen has context sensitive buttons at the bottom of the display screen for these features:

Start Now: (Available when listening to SiriusXM channels live.) Pressing **Start Now** lists all the shows that have played on the channel in the past 5 hours. Select a show to begin listening from the beginning.

Play/Pause: Pause and resume playing the channel or content.

Rewind: (Available when listening to SiriusXM, On Demand, and MyMix.) Rewinds back through content. When listening to SiriusXM live, you can rewind 5 hours. When listening to On Demand or Favorite content, you can rewind back through the show episode to the beginning. When listening to MyMix, you can rewind back to the previous song.

Fast-Forward: (Available when listening to SiriusXM, On Demand, and MyMix.) Fast forward through the channel or content. When listening to SiriusXM in Replay mode, you can fast forward until you reach live. When listening to On Demand or Favorite content, you can fast forward through the through the show until you reach the end. When listening to MyMix, you can Fast Forward to the next song.

Go to Live: (Available when listening to SiriusXM channels live, or MyMix.) If you are listening to SiriusXM, and are not listening live, pressing **Go to Live** will jump to live. If you are listening to MyMix, pressing **Go to Live** will exit MyMix and play the channel live.

TuneStart

TuneStart plays the current song from the beginning when you tune to a music channel. TuneStart is disabled by default, or if you had previously enabled TuneStart for your SiriusXM streaming account, it will be enabled on the Sound Station.



NOTE: Certain music channels are not eligible for TuneStart due to the way in which they are broadcast. While these music channels can be saved as smart favorites, TuneStart will not occur for these channels.

To Enable or Disable TuneStart

1. Press the **HOME** button and turn the **TUNE knob** to highlight **Setup**. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** and highlight **SiriusXM Account** and press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight **TuneStart** and press the **TUNE knob** to enable or disable TuneStart. A checkmark in the TuneStart box indicates that TuneStart is enabled.

Alarm Clock

The Sound Station has five alarm clocks, each of which can be configured independently.

To Add or Modify an alarm:

1. Press the **ALARM** button to display the alarm screen, or press the **TUNE knob**, turn it to highlight Setup and press the **TUNE knob**. Turn the **TUNE knob** to highlight Clock and Alarms and press the **TUNE knob**. Turn the **TUNE knob** to highlight Alarms and press the **TUNE knob**.
2. To add an alarm, press the **Add Alarm** button, or to modify an alarm, turn the **TUNE knob** to highlight an alarm and press the **Modify Alarm** button.
3. Each alarm has configuration options which are summarized in the following table. Turn the **TUNE knob** to highlight a configuration option and press it to select. Then turn the **TUNE knob** to change a setting and press it to confirm the setting.

Alarm Time	12:00 AM - 11:59 PM	Turn the TUNE knob to adjust the hour setting and press the TUNE knob to select. Turn the TUNE knob to adjust the minutes setting and press the TUNE knob to select.
Repeat	One Time, Everyday, Weekly, Weekdays, Weekends, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, or Saturday	Turn the TUNE knob to highlight the frequency of the alarm and press the TUNE knob to select.
Alarm Channel	Buzzer, or choose a channel	Turn the TUNE knob to highlight what you want to wake up to, and press the TUNE knob to select.
Volume	Variable	Turn the TUNE knob to adjust the volume of the alarm and press the TUNE knob to select.

4. When you finish configuring the alarm, turn the **TUNE Knob** to highlight Save changes and press the **TUNE Knob**. An advisory message will be displayed confirming the action selected.

To Enable, Disable, or Remove alarms:

1. Press the **ALARM** button to display the alarm screen, or press the **TUNE knob**, turn it to highlight Setup and press the **TUNE knob**. Turn the **TUNE knob** to highlight Clock and Alarms and press the **TUNE knob**. Turn the **TUNE knob** to highlight Alarms and press the **TUNE knob**.
2. Turn the **TUNE knob** to highlight an alarm from the list and press the **Enable Alarm, Disable Alarm, or Remove Alarm** button. An advisory message will be displayed confirming the action selected.

To Cancel an alarm:

An upcoming alarm can be cancelled so that it does not sound. If the cancelled alarm has been configured as a repeating alarm, it will be reset to sound at the following scheduled time.

1. Press and hold the **ALARM** button for 2 seconds.

The alarm icon will be removed from the display screen temporarily until after the scheduled time of the alarm has passed. This function only cancels the upcoming alarm, not the alarm series.

Snooze Timer

When the alarm sounds, pressing the **SLEEP/SNOOZE** button will silence the alarm for 10 minutes, or you can select a custom amount of time. After the snooze time elapses, the alarm will sound again.

To Snooze:

1. When the alarm clock is sounding, press the **SLEEP/SNOOZE** button on the top of the Sound Station once to select the default snooze time of 10 minutes. To select a longer snooze time, press the **SLEEP/SNOOZE** button again to increase the time by 10 minutes. Each time the button is pressed the snooze time is increased by an additional 10 minutes.
2. Alternately you can also select a custom amount of snooze time. Press the **SLEEP/SNOOZE** button and turn the **TUNE knob** to configure the amount of time, hours first and then minutes. Turn the **TUNE knob** to select the time and press the **TUNE knob** to confirm.

Sleep Timer

The sleep timer automatically turns the Sound Station off after a period of time as you fall asleep. The period of time can be set up to 24 hours.

To turn the Sleep Timer On:

1. When the Sound Station is on, press the **SLEEP/SNOOZE** button on the top of the Sound Station once to select the default sleep time of 10 minutes. To select a longer time, press the **SLEEP/SNOOZE** button again to increase the time by 10 minutes. Each time the button is pressed the sleep time is increased by an additional 10 minutes.
2. Alternately you can also select a custom amount of sleep time. Press the **SLEEP/SNOOZE** button and turn the **TUNE knob** to configure the amount of time, hours first and then minutes. Turn the **TUNE knob** to select the time and press the **TUNE knob** to confirm.

To cancel the Sleep Timer:

1. To cancel the sleep timer, press the **SLEEP/SNOOZE** button, or press the **Power** button. The advisory message **Sleep timer disabled** will be displayed.

Equalization Settings

You can adjust the equalization of the Sound Station (EQ) to adjust for room acoustics and your listening preferences. You can adjust bass and treble, or you can select a profile such as Rock, Jazz, etc.

To change Equalization:

If you want to change the treble or bass, do the following:

1. Press **HOME** and turn the **TUNE knob** to highlight **Equalization**. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight either **Treble** or **Bass** and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to adjust the equalization and press the **TUNE knob** to select the setting.

If you want to select an equalization profile, do the following:

1. Press **HOME** and turn the **TUNE knob** to highlight **Equalization**. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight **Profile** and press the **TUNE knob** to select.
3. Turn the **TUNE knob** to highlight a profile and press the **TUNE knob** to select the profile.

Aux In

You can listen to another device such as an MP3 player by plugging it into the Aux In connection on the Sound Station.

To listen using Aux In:

1. Connect a device to the Aux In connection on the Sound Station.
2. Press **HOME** and turn the **TUNE knob** to highlight **Aux In**. Press the **TUNE knob** to select.

To exit Aux In:

1. Press the **Exit Aux In** button.

Setup

The Setup option on the Home screen has the following menu items.

SiriusXM Account	page 31
Network Wizard	page 32
Network Info	page 33
Firmware Update	page 34
Info	page 34
Factory Reset	page 34
Display Brightness	page 35
Clocks & Alarms	page 35

Refer to the indicated pages for each Setup option.

SiriusXM Account

This option has three selections:

Username: This option is where you enter your SiriusXM streaming username.

Password: This option is where you enter your SiriusXM streaming password.

Remove: This option clears the username and password previously entered into the Sound Station.

TuneStart: This option enables/disables TuneStart. Refer to “TuneStart” on page 27 for more information.

To enter the SiriusXM streaming Username/Password:

Before you can successfully enter your SiriusXM streaming username and password, the Sound Station must be connected to a wireless network with Internet connectivity. The Sound Station verifies your username and password when you enter them by connecting to SiriusXM streaming service.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** and highlight SiriusXM Account and press the **TUNE knob** to select.
3. Highlight Username and press the **TUNE knob**. Enter each character in your username. When complete press the **Enter** button. Your username is case sensitive.
4. Highlight Password and press the **TUNE knob**. Enter each character in your password. When complete press the **Enter** button. Your password is case sensitive.
5. The Sound Station will check your username and password. If correct, “Credentials Accepted” will be briefly displayed.

To remove the SiriusXM streaming Username and Password:

The Remove option clears the SiriusXM streaming username and password which had previously been entered into the Sound Station.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** and highlight SiriusXM Account and press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight Remove and press the **TUNE knob** to select.
4. “Credentials Removed” will be briefly displayed.

Note that you will have to enter your SiriusXM streaming username and password before you can listen to SiriusXM.

Network Wizard

The Network Wizard allows you to connect to a wireless or wired network.



IMPORTANT! To connect to a network which restricts access by MAC address, the MAC address of the Sound Station must be added to the allowed list of MAC addresses in the access point before connecting to the network. You can find the MAC address of your Sound Station by pressing **HOME**, then turning and pressing the **TUNE knob** to highlight and select **System → Network Info**. Turn the **TUNE knob** to scroll until the MAC address of the Sound Station is displayed.

Network Wizard has two main options:

Wireless: This option is for connecting to a wireless network. Wireless has the following two options:

Scan: This option scans for wireless networks and displays a list. You can select a wireless network from the list and quickly connect to it. Refer to “Step 1: Connect to a Wireless Network” on page 10.

Manual: This option allows you to enter all the wireless network configuration settings. Refer to “Manually Connecting to a Wireless Network” on page 11.

Wired: This option is for connecting to a wired network. Note that you will need an optional Ethernet USB adapter (sold separately). Wired has the following two options:

DHCP: This option is for networks which automatically supply an IP address and network information (most networks).

Static IP: This option is for networks which use a static IP address. You will need to provide an IP address and other network information.

To connect to a wired network using DHCP:

1. Connect the Sound Station to a wired network connection using the optional optional Ethernet USB adapter (sold separately).
2. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight Network Wizard and press the **TUNE knob** to select.
4. Turn the **TUNE knob** and highlight Wired and press the **TUNE knob** to select.
5. Turn the **TUNE knob** and highlight DHCP and press the **TUNE knob** to select.
6. The Sound Station will attempt to connect to the network, and will display “Connected Successfully” if the connection to the network was successful. If the Sound Station cannot connect to the network, there is likely a connection problem with the network, or in the connection of the Sound Station to the wired network.

To connect to a wired network using a Static IP:

Before entering the static IP network information you will need to know the following information about your network:

IP Address for the Sound Station	
Network Mask IP Address	
Gateway IP Address	
Primary DNS IP Address	

1. Connect the Sound Station to a wired network connection using the optional optional Ethernet USB adapter (sold separately).
2. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight Network Wizard and press the **TUNE knob** to select.
4. Turn the **TUNE knob** and highlight Wired and press the **TUNE knob** to select.
5. Turn the **TUNE knob** and highlight Static IP and press the **TUNE knob** to select.
6. IP will be highlighted. Press the **TUNE knob** to select. Enter the IP Address. The IP address must be entered in the xxx.xxx.xxx.xxx format. When you have completed entering the IP address, press the **Enter** button.
7. Enter the Network Mask in the same way as you entered the IP Address.
8. Enter the Gateway IP Address in the same way.
9. Enter the DNS IP Address in the same way.
10. When all the information has been entered, turn the **TUNE knob** to highlight Connect and press the **TUNE knob**.
11. The Sound Station will attempt to connect to the network, and will display “Connected Successfully” if the connection to the network was successful. If the Sound Station cannot connect to the network, there is likely an error in the information that was entered, or in the connection of the Sound Station to the wired network.

Network Info

Network Info displays the details of the current network configuration of the Sound Station. The MAC address of the Sound Station can be found in the network info.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** and highlight Network Info and press the **TUNE knob** to select.
3. The current network configuration will be displayed. Turn the **TUNE knob** to scroll through the configuration details.

Firmware Update

SiriusXM may occasionally update the software for the Sound Station and it is recommended that you always update the software when new software becomes available. The Sound Station will automatically check for software updates when you turn it on, but you also can manually check for any available software updates. Check siriusxm.com for any updated documentation associated with a software update.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight Firmware Update and press the **TUNE knob** to select.
3. If the Sound Station has already detected that a software update is available, it will show a software update available.

If not, the Sound Station will check for a software update. If no update is available, the Sound Station will display “No new updates”.
4. If a software update is available, turn the **TUNE knob** to highlight Install update and press the **TUNE knob** to select.
5. The software update will be applied to the Sound Station. **Do not turn the Sound Station off during the update, or disconnect the Sound Station power.** When complete, the Sound Station will restart to complete the update, and display “Please press the POWER button”.

Info

The Info option displays information about the Sound Station serial number and software version.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight Info and press the **TUNE knob** to select. The information will be displayed.

Factory Reset

The Factory Reset option restores the Sound Station to the factory settings. It will erase all the stored network settings, SiriusXM streaming username and password, favorite channels, favorite shows and channels, alarm clock settings, and set all other options back to the factory settings.

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight Factory reset and press the **TUNE knob** to select.
3. Confirm that you really want to proceed with the factory reset. Confirm factory reset will be highlighted. Press the **TUNE knob** to proceed with the factory reset, or press the **BACK** button to abort the factory reset.
4. The screen will display “Restoring factory defaults”, restart the Sound Station when complete and display “Please press the POWER button”.

Note that you will have to connect the Sound Station to a network (“Step 1: Connect to a Wireless Network” on page 10), and also enter your SiriusXM username and password (“Step 2: Enter Your SiriusXM Streaming Account Information” on page 13) after performing a Factory Reset.

Display Brightness

There are three different brightness backlight settings, and each type of backlighting can be set to a brightness from 0 to 19.

Active: This setting controls the brightness of the display screen when the Sound Station is On, and you are interacting with the Sound Station by pressing buttons, etc. After 30 seconds of inactivity, the display changes to the inactive setting.

Inactive: This setting controls the brightness of the display screen when the Sound Station is On, but you have not interacted with the Sound Station by pressing buttons, etc., for 30 seconds. You might use this setting to set the brightness when in a darkened room as you are falling asleep while listening to the Sound Station.

Standby: This setting controls the brightness of the display screen when the Sound Station is in standby mode.

To set the Display Brightness:

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight Display Brightness and press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight Active, Inactive, or Standby and press the **TUNE knob** to select.
4. Turn the **TUNE knob** to the desired setting, 0 to 19 and press the **TUNE knob** to select your setting.

Clock and Alarms

Clock set-up option has several selections:

24-hour time: This option sets the time format to a 12 or 24 hour format.

Alarm: The Sound Station has five alarm clocks, each of which can be configured differently. Refer to “Alarm Clock” on page 28 for information about the alarm clock.

Timezone: This option sets the Sound Station to the timezone for your area.

To enable or disable 24-hour time:

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
2. Turn the **TUNE knob** to highlight Clock and Alarms and press the **TUNE knob** to select.
3. Turn the **TUNE knob** and highlight 24-hour time.
4. Press the **TUNE knob** to enable 24-hour time (when the box has a checkmark in it), or disable (when the box does not have a checkmark in it).

To select the Timezone:

1. Press the **HOME** button and turn the **TUNE knob** to highlight Setup. Press the **TUNE knob** to select.
 2. Turn the **TUNE knob** to highlight Clock and Alarms and press the **TUNE knob** to select.
 3. Turn the **TUNE knob** to highlight a timezone and press the **TUNE knob** to select. A checkmark in the box next to the timezone indicates the selected timezone.
-

Your SiriusXM Sound Station has been designed and built to be trouble-free but if you experience a problem, here's some troubleshooting hints.

You can also call SiriusXM Customer Care at 866-635-2349.

If you see this on the screen:	Try this:
Initializing Network Connecting to <wireless network> Error loading menu	<ul style="list-style-type: none"> The Sound Station is attempting to connect to SiriusXM. If this message is displayed more than one minute, make sure your network is connected to the Internet. To verify that you have an Internet connection, refer to “Software Update” on page 37 and follow the procedure. If you receive the message No Update Available, or New version available, then the Radio is connected to the Internet. If you get the message, Login failed, then you don't have an Internet connection. Check with your network administrator for Internet connectivity on your network. Turn the Sound Station Off and On again.
Buffering	<ul style="list-style-type: none"> The Sound Station is loading the channel information. If this message is displayed for more than one minute, make sure your connection to the Internet has not been interrupted. See Connecting (previous troubleshooting item) and verify your Internet connection. Turn the Sound Station Off and On again.
Updating	<ul style="list-style-type: none"> Your Sound Station is installing a software update. Do not turn the Sound Station off or disconnect the power. Allow the software update to complete.
Not Connected to the Internet Retrying	<ul style="list-style-type: none"> The wireless network information you entered is incorrect. Verify and re-enter the information. You have entered an incorrect password for a secure wireless network. Verify and re-enter the information. If you have manually configured a network connection, you have entered one or more incorrect settings. Verify and re-enter the information.
Stream Closed Inactivity limit reached Already logged in elsewhere	<ul style="list-style-type: none"> Your account user name and password has been used at another location to connect to SiriusXM, and the Sound Station has been disconnected from the service. Turn the Sound Station Off and On again. The Sound Station may have timed out due to lack of activity. Turn the Sound Station Off and On again. To prevent a time-out, periodically adjust the volume, change the channel, or enter a menu, etc.
Login failed	<p>There are several possible reasons:</p> <ul style="list-style-type: none"> Your SiriusXM username and/or password was entered incorrectly. You don't have a subscription to stream SiriusXM. Your subscription is no longer valid. <p>To verify that you are subscribed to the service, listen online:</p> <ol style="list-style-type: none"> Go online to siriusxm.com/streaming. Click on the Listen Now link, enter your username and password, and click Login. If you can listen, then you are subscribed to stream SiriusXM. Close the browser window to exit the player before continuing. <ul style="list-style-type: none"> If you don't have a SiriusXM streaming subscription, go to siriusxm.com/streaming or call 866-635-2349 to subscribe.

If this happens:	Try this:
You do not receive the same Sirius or XM channels you receive on your Satellite Radio	<ul style="list-style-type: none">• SiriusXM streaming does not have all of the same channels as the Sirius or XM satellite service. Check siriusxm.com/channellineup for the latest SiriusXM streaming channel lineup.
The Scan for Network feature fails before the Sound Station connects to your network	<ul style="list-style-type: none">• Your network has DHCP disabled. You'll have to manually configure your network connection. Refer to "Manually Connecting to a Wireless Network" on page 11.
The Scan for Network feature does not find your wireless network	<ul style="list-style-type: none">• Your wireless network has a hidden name (SSID). If so, you will have to manually configure your wireless network connection. Refer to "Manually Connecting to a Wireless Network" on page 11.• The wireless signal from your access point is too low. Try moving the Sound Station closer to your access point and see if the Scan for Network feature finds your wireless network.

Sound Station

Dimensions:10.75 in (W) X 6.0 in (H) X 5.25 in (D)
273 mm (W) x 152 mm (H) x 133 mm (D)
Weight:3.0 lbs (1.36 kg)

Power Adapter

Input:100-240 VAC, 50/60 Hz, 0.2 A
Output:12 VDC, 1.0 A

Remote Control

Dimensions:1.5 in (W) x 3.375 in (H) x .25 in (D)
38 mm (W) x 86 mm (H) x 6 mm (D)
Weight:0.6 oz (20 g)
Battery:CR2025

Audio

Headphone:3.5 mm diameter mini stereo jack
Aux In:3.5 mm diameter mini stereo jack

Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. Furthermore, the AMBE[®] voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SiriusXM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

Environmental Information

Follow local guidelines for waste disposal when discarding packaging, electronic appliances, and batteries.

Your Radio is packaged with cardboard, polyethylene, etc., and does not contain any unnecessary materials.

WARNING! This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc can void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to Radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to Radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
- This device must not be co-located or operating in conjunction with any other antenna or transmitter.

IMPORTANT NOTICE: REQUIRED SUBSCRIPTION

Hardware and subscription sold separately, and activation fee required. Other fees and taxes may apply. **Subscriptions governed by SiriusXM Customer Agreement; see www.siriusxm.com. Service automatically renews into the subscription Package you choose (which may differ from the Package which arrived with the Radio), for additional periods of the same length, and automatically bills at then-current rates, after any complimentary trial or promotional period ends. You must call us to cancel at 1-866-635-2349.** Fees and programming are subject to change.

© 2016 Sirius XM Radio Inc. “Sirius”, “XM” and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks and logos are the property of their respective owners. All rights reserved. Certain features depend on subscription package.

**Sirius XM Radio Inc.
1221 Avenue of the Americas
New York, NY 10020
1.866.635.2349**

siriusxm.com