



QUICKSTART GUIDE

DRPTV430BC

43" Outdoor 4K UHD LED TV



Read Before Use

- Please follow all requirements for safe operation.
- Do not cover or block ventilation openings. Ensure adequate space around the device for sufficient ventilation.
- Do not place open flame sources, such as candles, on or near the device.
- Do not submerge the device in water.
- Do not expose batteries to extreme heat.
- Unplug device during lightning storms or when unused for long periods of time
- Install in accordance with manufacturer's instructions.
- Never place the TV in an unstable installation area. The TV may fall and cause serious injury or death, particularly to children.
- Refer all servicing to qualified service personnel.
- To reduce the risk of electric shock, do not perform maintenance other than that specified in the operating instructions, unless you are qualified to do so.
- Avoid keeping a static picture or a picture with static elements on your TV for more than two hours at a time, as this may cause damage known as screen burn in. Decrease the chances of burn in by altering the picture size for a minute or two every couple of hours or reduce the display's contrast and brightness.
- Refer to the user manual for more information.

Getting Started

Inputs and Connections


- ❶ Optical Out x 1
- ❷ HDMI® Inputs x 3
- ❸ Mini Line Out x 1
- ❹ AV In x 1
- ❺ Audio In x 1
- ❻ Video In x 1
- ❼ RF/Antenna In x 1
- ❽ USB Port x 1
- ❾ YPbPr In x 1

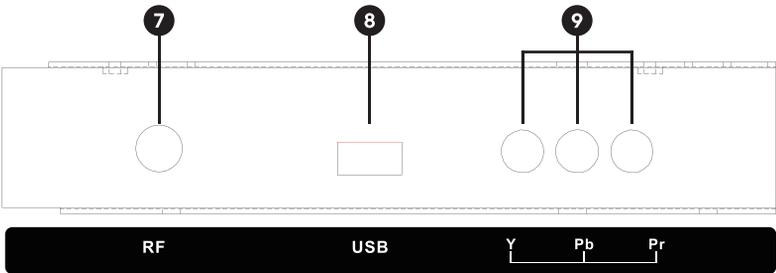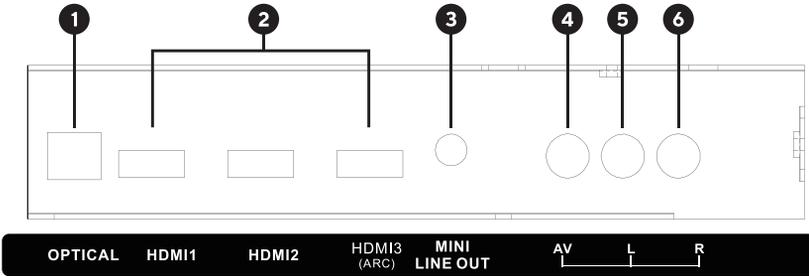


What's in the Box?

- Outdoor TV
- IP55 Waterproof Remote (including CR2025 battery)
- Wall Mount Kit
- User Manual
- Quickstart Guide
- Warranty Card

Getting Started

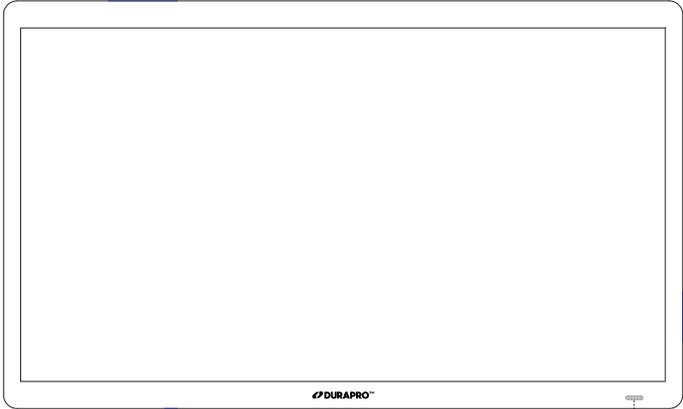


Power Indicator Light
and IR Receiver

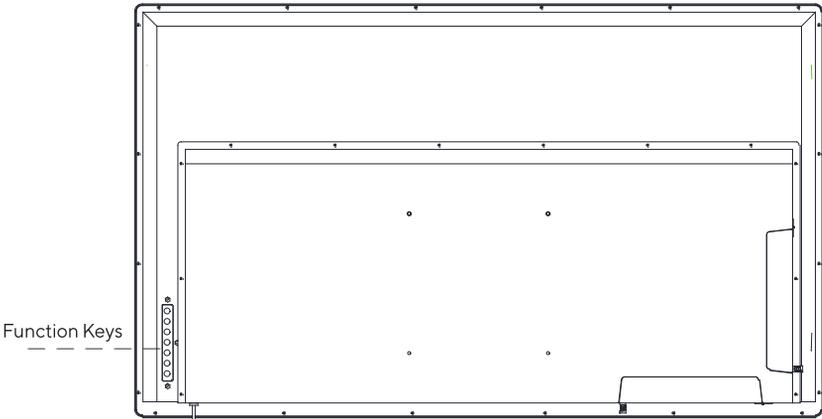


Function Keys

 Power Cable

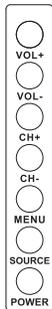

- VOL+: Increase volume
- VOL-: Decrease volume
- CH+: Switch to next channel
- CH-: Switch to previous channel
- Menu: Enter TV menu
- Source: Enter Source Menu
- Power: Turn TV on/off

Remote Functions

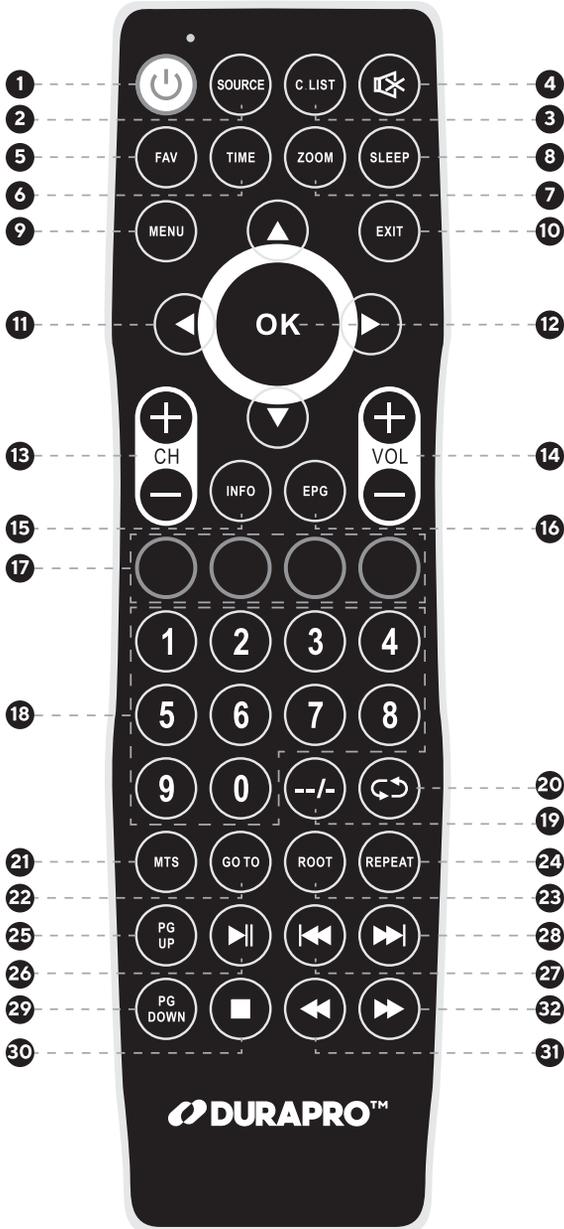

Remote Functions


- 1. POWER** Turn TV on/off
- 2. SOURCE** Select various input sources (TV/HDMI®/USB)
- 3. C.LIST** Channel list
- 4. MUTE** (🔇) Mute/unmute sound
- 5. FAV** Favorites menu
- 6. TIME** Time settings
- 7. ZOOM** Change aspect ratio
- 8. SLEEP** Set display to sleep mode
- 9. MENU** Operations menu
- 10. EXIT** Exit the selected menu item
- 11. ◀/▲/▼/▶** Navigation keys
- 12. OK** Confirm or enter
- 13. CH+/-** Scroll through channels
- 14. VOL+/-** Increase or decrease the volume
- 15. INFO** Display source or channel information
- 16. EPG** Enter Electronic Program Guide
- 17. ○○○○** Shortcut buttons
- 18. 0~9** Numeric buttons
- 19. --/-** Press once to enter a program with two digits; press twice to enter 3 digits
- 20. ↶** Return to previous channel
- 21. MTS** Multichannel TV Sound
- 22. GO TO** Jump to a specific time during playback
- 23. ROOT** Return to main menu
- 24. REPEAT** Repeat playback in USB mode
- 25. PG UP** TV channel up
- 26. ▶||** Press to pause playback; press again to resume
- 27. ◀◀** Previous chapter

Remote Functions

- 28.  Next chapter
- 29. **PG DOWN** TV channel down
- 30.  Stop playback and return to menu
- 31.  Rewind
- 32.  Fast forward

Connecting External Devices


You may connect external devices (such as USB drives, laptops, speakers, gaming consoles, etc.) to your TV.

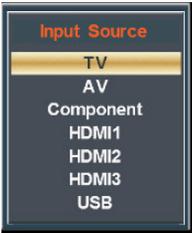

Media Playback via USB

To play media from an external hard drive (sold separately), insert your USB drive into the USB port on the TV. Press the SOURCE button on your remote. Navigate to USB and press OK. (Note: The maximum storage capacity is 400 GB.)

You may now view photos, play music, watch movies or read text documents from your flash drive.

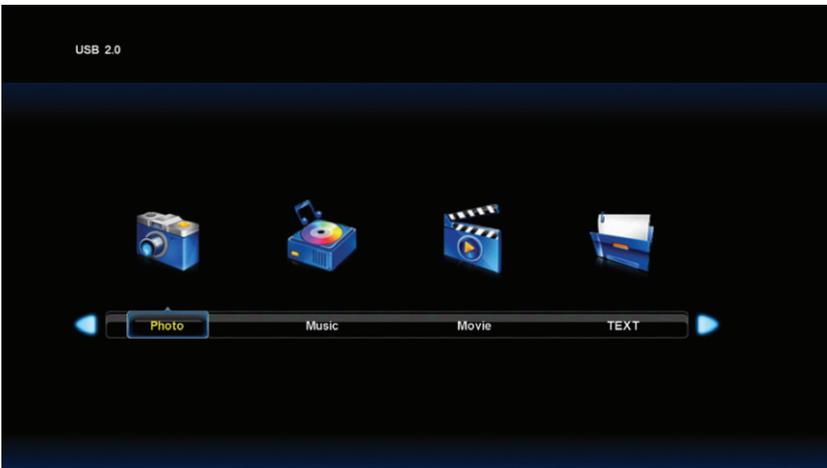


Connecting External Devices

Connecting an Antenna to Your TV

Connect your antenna's output cable to the TV's antenna input to access over-the-air channels. Refer to your antenna's user manual for further instructions. Press the TV remote's SOURCE button until you reach "TV".

- 1 - Antenna (sold separately)
- 2 - Amplifier Antenna (external)
- 3 - Amplifier Antenna (internal)

- 4 - Antenna Amplifier Power Plug
- 5 - Plug Antenna (75 Ω)

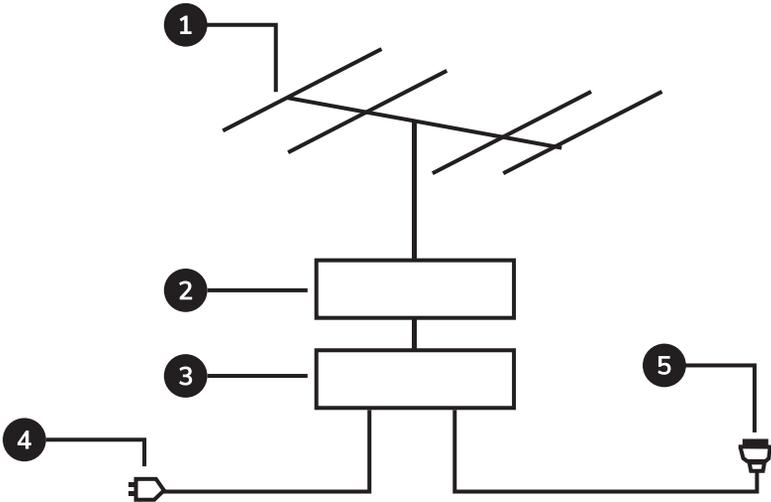


Connecting External Devices

Connecting an External Device to Your TV via HDMI®

Use an HDMI® cable (sold separately) to connect an external device, such as a laptop or DVD player, to your TV.


Press the TV remote’s SOURCE button until you reach “HDMI®”. Be sure to select the specific HDMI® source (HDMI® 1/2/3) that matches the input to which the cable is connected.

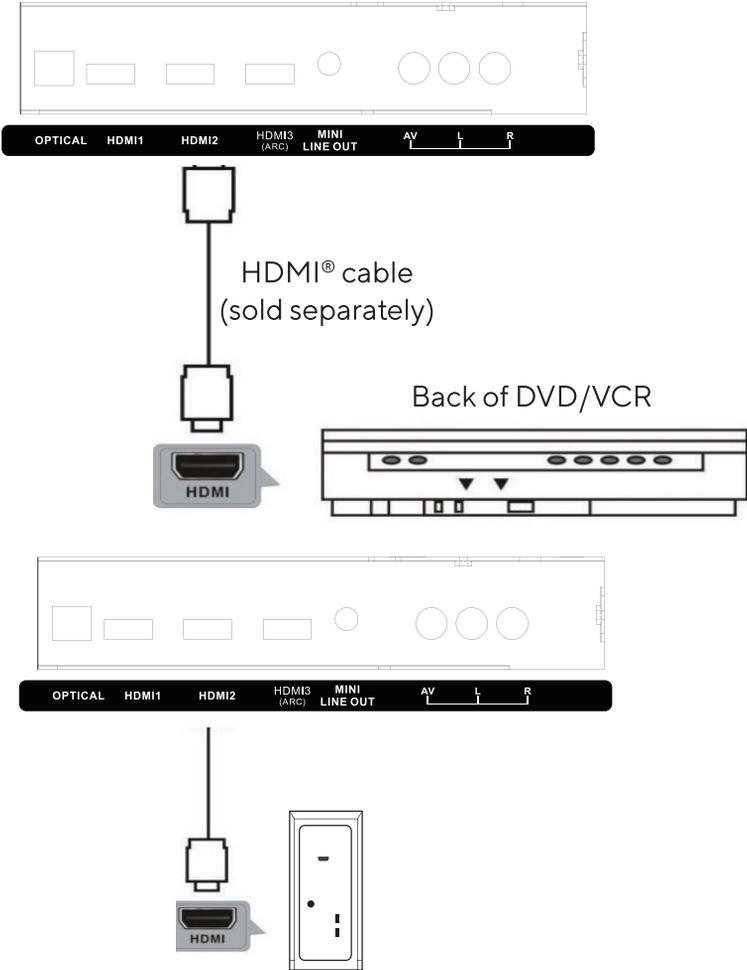

Connecting External Devices


Connecting a gaming console to your TV

Use an HDMI® cable, AV cable and YPbPr cable (sold separately) to connect a gaming console to your TV. Be sure to match the cables to the proper inputs.

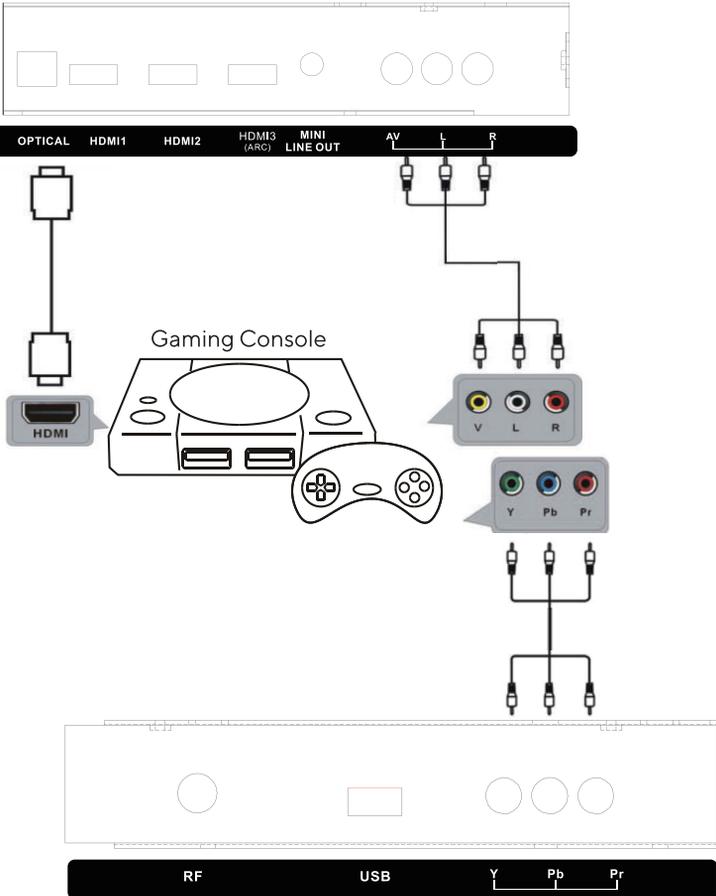



Connecting External Devices

Connecting an external device to your TV via AV

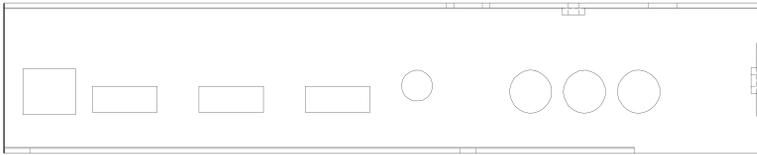

Use the composite audio L/R (white/red) and video (yellow) cables (sold separately) to connect an external device, such as a speaker, to your TV.


Press the SOURCE button on your TV's remote until you reach "AV".

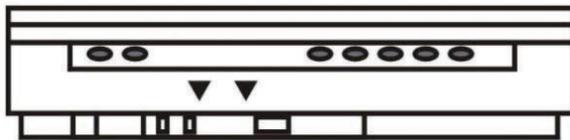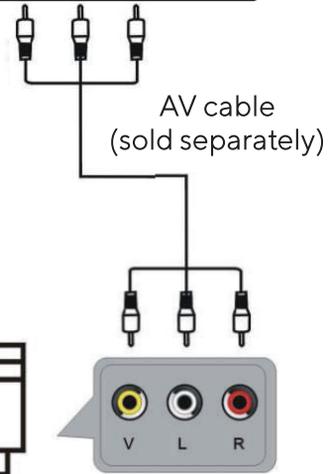

Back of DVD/VCR


Connecting an External Device to Your TV via an Optical Cable

Use an optical cable (sold separately) to connect a soundbar or amplifier to your TV.

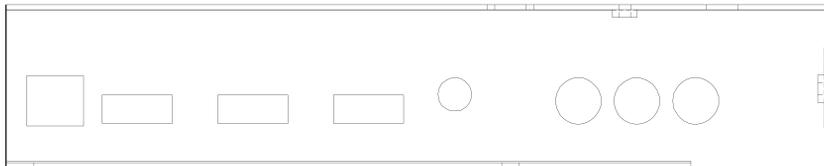

Connecting External Devices

Connecting an External Device to Your TV via YPbPr

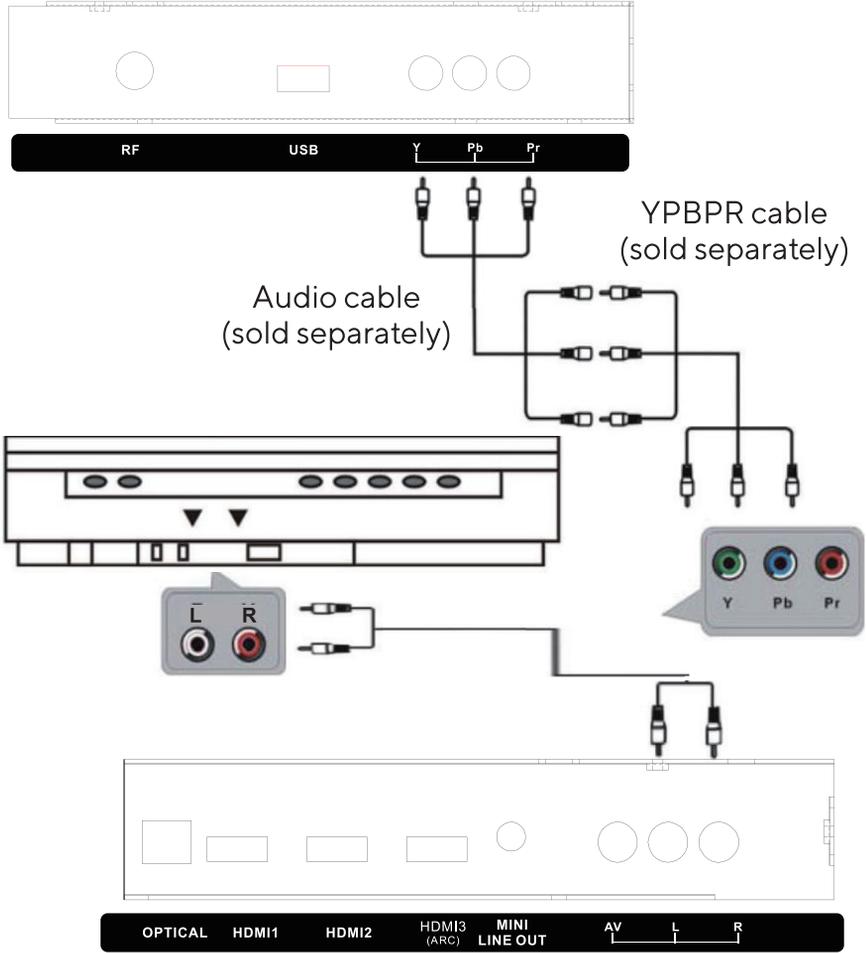

Troubleshooting

TV will not power on (the power indicator does not light up)

Make sure that both ends of the power cable are plugged into the socket properly and that the wall socket is functioning. Be sure to point the remote directly at the IR sensor on the bottom right corner of the TV.

“No Input Signal” appears on the screen

- Check that the signal line is properly connected.
- Check that the connected device is powered on.
- Check that the SOURCE input has been selected and matches the input signal.

The remote control does not function properly

- Check that the battery is not drained. Replace with 1 CR2025 battery.
- Check that the remote control is within the operating range.
- Check that the remote control is pointed to the remote control window on the bottom right corner of the TV.
- Make sure there aren't any objects obstructing the signal from the remote to the remote control window on the TV.

There are flashing spots or stripes on the screen

Try switching off sources of interference, such as appliances, baby monitors and more.

Image color or quality deteriorates

Check that picture settings (brightness, contrast, color, etc.) are adjusted appropriately.

Screen position and size are incorrect

Check that the screen position and size are adjusted appropriately.

Image or color is incorrect

- Check that the signal line is connected properly .
- When connecting a computer to the TV, you may need to change your computer's resolution to obtain the correct image. The computer's output signal may affect the image displayed.

Specifications

Model No.	DRPTV430BC
Screen Size	43" Diagonal
VESA	200x200mm
Aspect Ratio	16:9
Power Supply	AC 100-240V (~50-60Hz)
Power Consumption	≤150W
TV System	NTSC MN, ATV
Audio Output Power	8Ω 8Wx2
Inputs	Antenna Input x 1 USB Port x 1 HDMI® Inputs x 3 Audio In x 1 Video In x 1 AV In x 1 YPbPr In x 1
Outputs	Mini Line Out x 1 Optical Out x 1
Operating Temperature	32° F~113°F
Operating Humidity	20%-80% non-condensing
Waterproof Rating	IP54

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DuraPro customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except on major holidays. DuraPro strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a DuraPro product.

