

INSIGNIA™

QUICK SETUP GUIDE

6 qt. Pressure Cooker Pot

NS-MCRP6NS9 / NS-MCRP6SS9

PACKAGE CONTENTS


- 6 qt. Nonstick or Stainless Steel Pressure Cooker Pot
- *Quick Setup Guide*

FEATURES


- 6-quart capacity replacement pot for your pressure cooker
- Works with Insignia 6 qt. pressure cookers and select other brands
- Dishwasher-safe design makes cleanup easy
- NS-MCRP6NS9 model
 - Aluminum construction heats and cools quickly
 - Nonstick coating helps prevent food from burning
- NS-MCRP6SS9 model
 - Stainless steel construction for long-lasting durability
 - Encapsulated bottom evenly heats your food

USING YOUR PRESSURE COOKER POT

- 1 Make sure you remove any objects from your pot and from inside the cooker.
- 2 Use a dry cloth to remove moisture from the outside of your pot and the heating element inside of your pressure cooker before you start cooking.

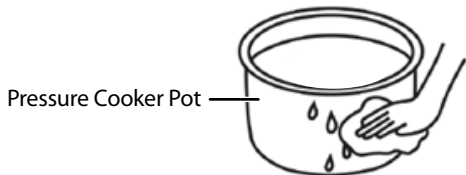

- 3 Place the pot inside the cooker, then rotate the pot slightly to make sure that your pot and the heating element make good contact.

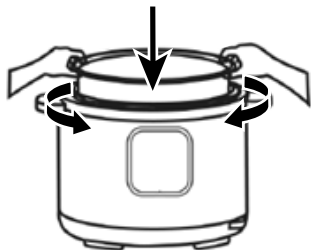

CAUTIONS:

- We recommend that you do not fill your pressure cooker more than half full. Over-filling can clog the vent pipes and create excess pressure. This can cause spillage or damage to your cooker.
- Do not use any sharp or hard objects inside your pot. This can damage your pot.

SPECIFICATIONS

Dimensions (H × W × D):

6.2 × 9.4 × 9.4 in. (15.82 × 24 × 24 cm)

Weight:

Stainless Steel: 1.9 lbs. (850 g)

Nonstick: 1.43 lbs. (650 g)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2018 Best Buy. All rights reserved

Made in China