


ROKU™

Outdoor
Wired Camera

**Quick Start
Guide**

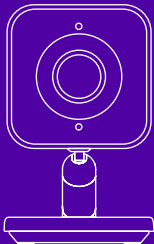

 
What's included

- A** Roku Outdoor Wired Camera
- B** Outdoor power adaptor
- C** Mounting kit
 - 1. Screws and anchors
 - 2. Wire clips
- D** Mounting plate

What you'll need

Phillips screwdriver (if mounting)
Your smartphone
2.4 GHz WiFi network

A




C1



C2




 B




D



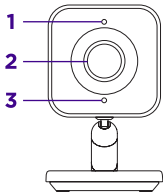


FRONT

- 1 Status light
- 2 Lens
- 3 Microphone

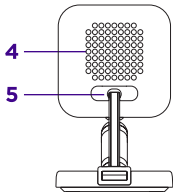

BACK

- 4 Speaker
- 5 Power cable

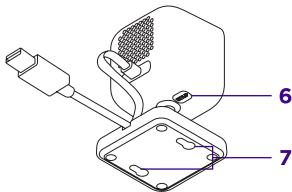


BOTTOM

- 6** Setup button
- 7** Mounting holes
(attach to **D** mounting plate)

Let's get started

STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.

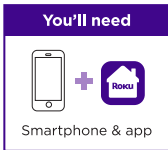

Data rates may apply.

STEP 2: Install your camera

In the Roku Smart Home app, tap the “+” button, “**Add Device**”, then “**Cameras & doorbells**” to find “**Outdoor Wired Camera.**” Follow the instructions to finish setup.

What's that light mean?

Before setup	Status
BLUE - Pulsing	Ready to connect
YELLOW - Slow blinking	Booting up / Updating firmware
WHITE - Fast blinking	Connecting to network

After setup	Status
RED - Blink (3 times)	Error



More features are waiting

Unlock the full potential
of your camera with a
Roku Smart Home Subscription.

Learn more at
go.roku.com/rokusmarthome

Need help?



Setup
videos



Common
questions



Tips and
tricks

Visit go.roku.com/cameras

Roku

© 2024 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.



4100001100_02