

# QUICK SETUP GUIDE

## 39" 1080p 60Hz DLED TV


NS-39DR510NA17

### INCLUDED ACCESSORIES

Remote control and two AAA batteries




### TV stands

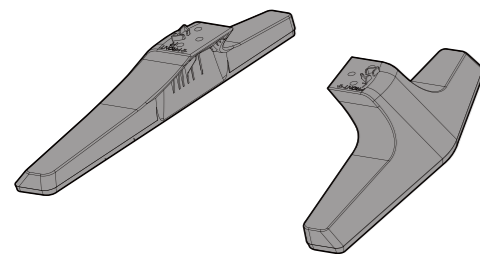

M4 screws (24 mm length) (4 pcs.)




### Power cord

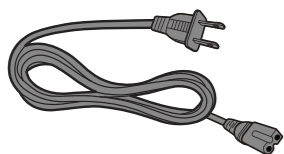

- FIND YOUR USER GUIDE ONLINE!**
- 1 Go to [www.insigniaproducts.com](http://www.insigniaproducts.com).
  - 2 Use the search bar to find **NS-39DR510NA17**.
  - 3 Select **Support & Downloads**.
  - 4 Next to *User Guide*, select the language you want.

**STOP**  
Do not plug your power cord in until all other devices have been connected.


**1 START HERE**  
How do I attach the stands to my TV? (not for wall mounting)  
You'll need: Soft surface and Phillips screwdriver  
Place your TV face-down on a cushioned, clean surface.  
Align the screw holes on the TV stands with the holes on the bottom of your TV, then secure each stand to your TV with two of the provided screws.

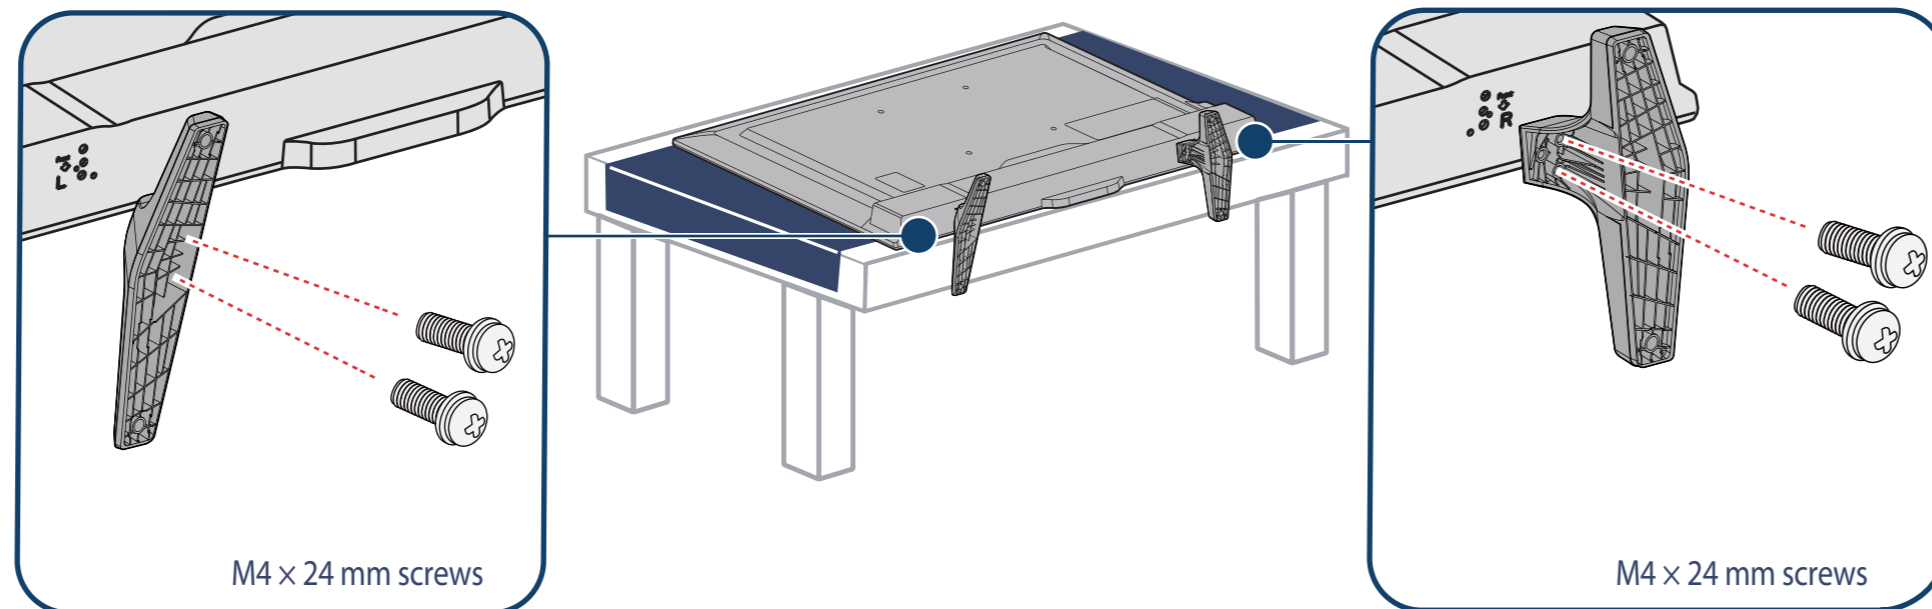


**WALL MOUNT**  
How do I prepare my TV for wall mounting? (not for use with a TV stand)  
You'll need: Soft surface and Phillips screwdriver  
Before you mount your TV, make sure that:

- You remove the stands.
- The bracket supports the weight of your TV.

**A** Carefully place your TV face-down on a cushioned, clean surface.  
**B** See the instructions that came with your wall mount for more information about how to correctly mount your TV.

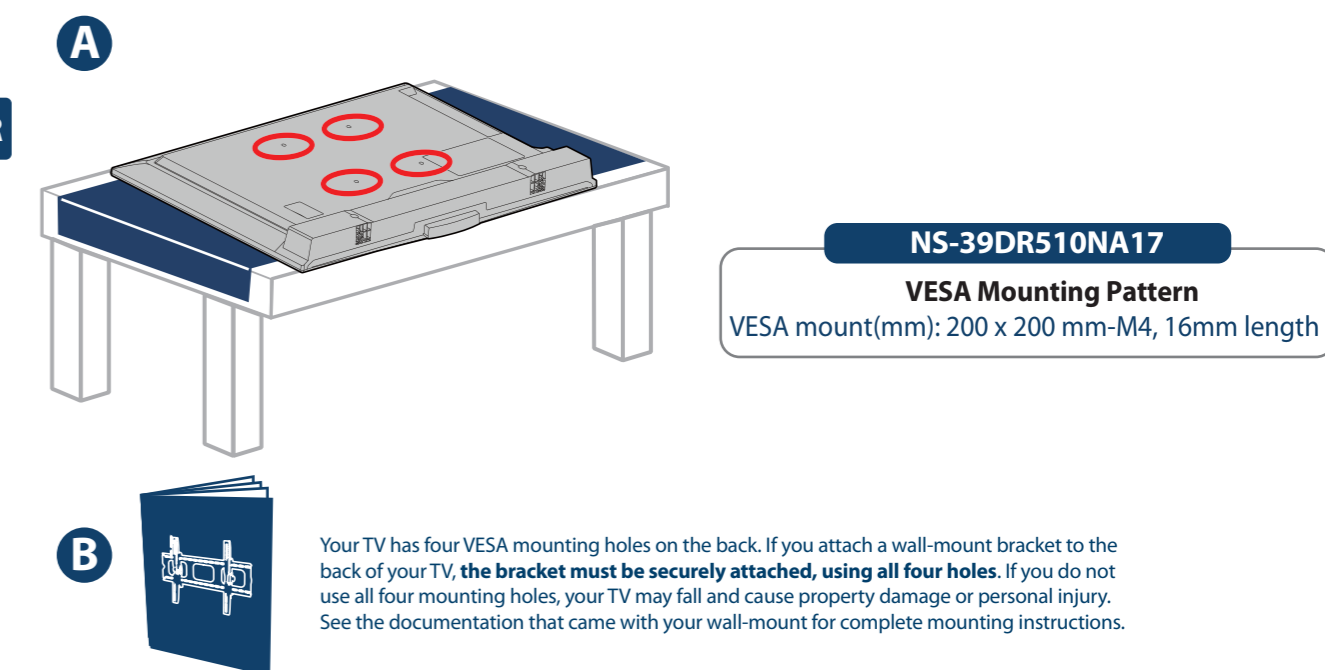


### FEATURES

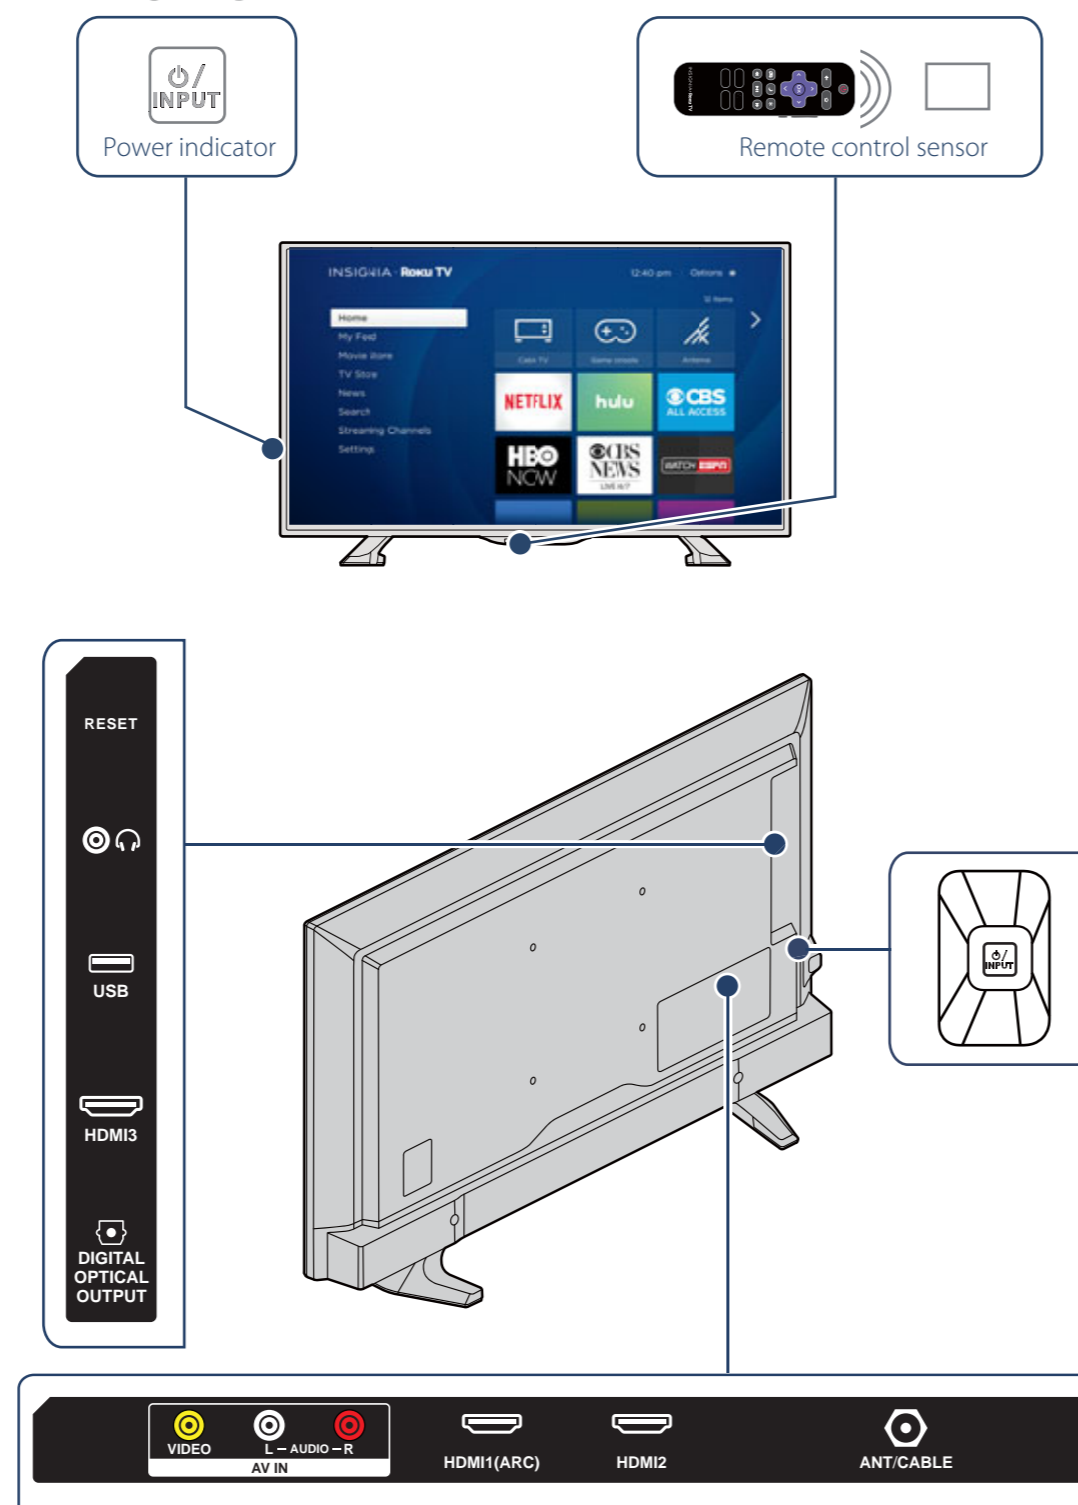


**Note:** Images do not necessarily represent the exact design of your television.

**2 MAKING CONNECTIONS**  
How do I watch TV (cable, satellite, or antenna) or connect a device, such as a DVD or Blu-ray player, game console, or tablet?

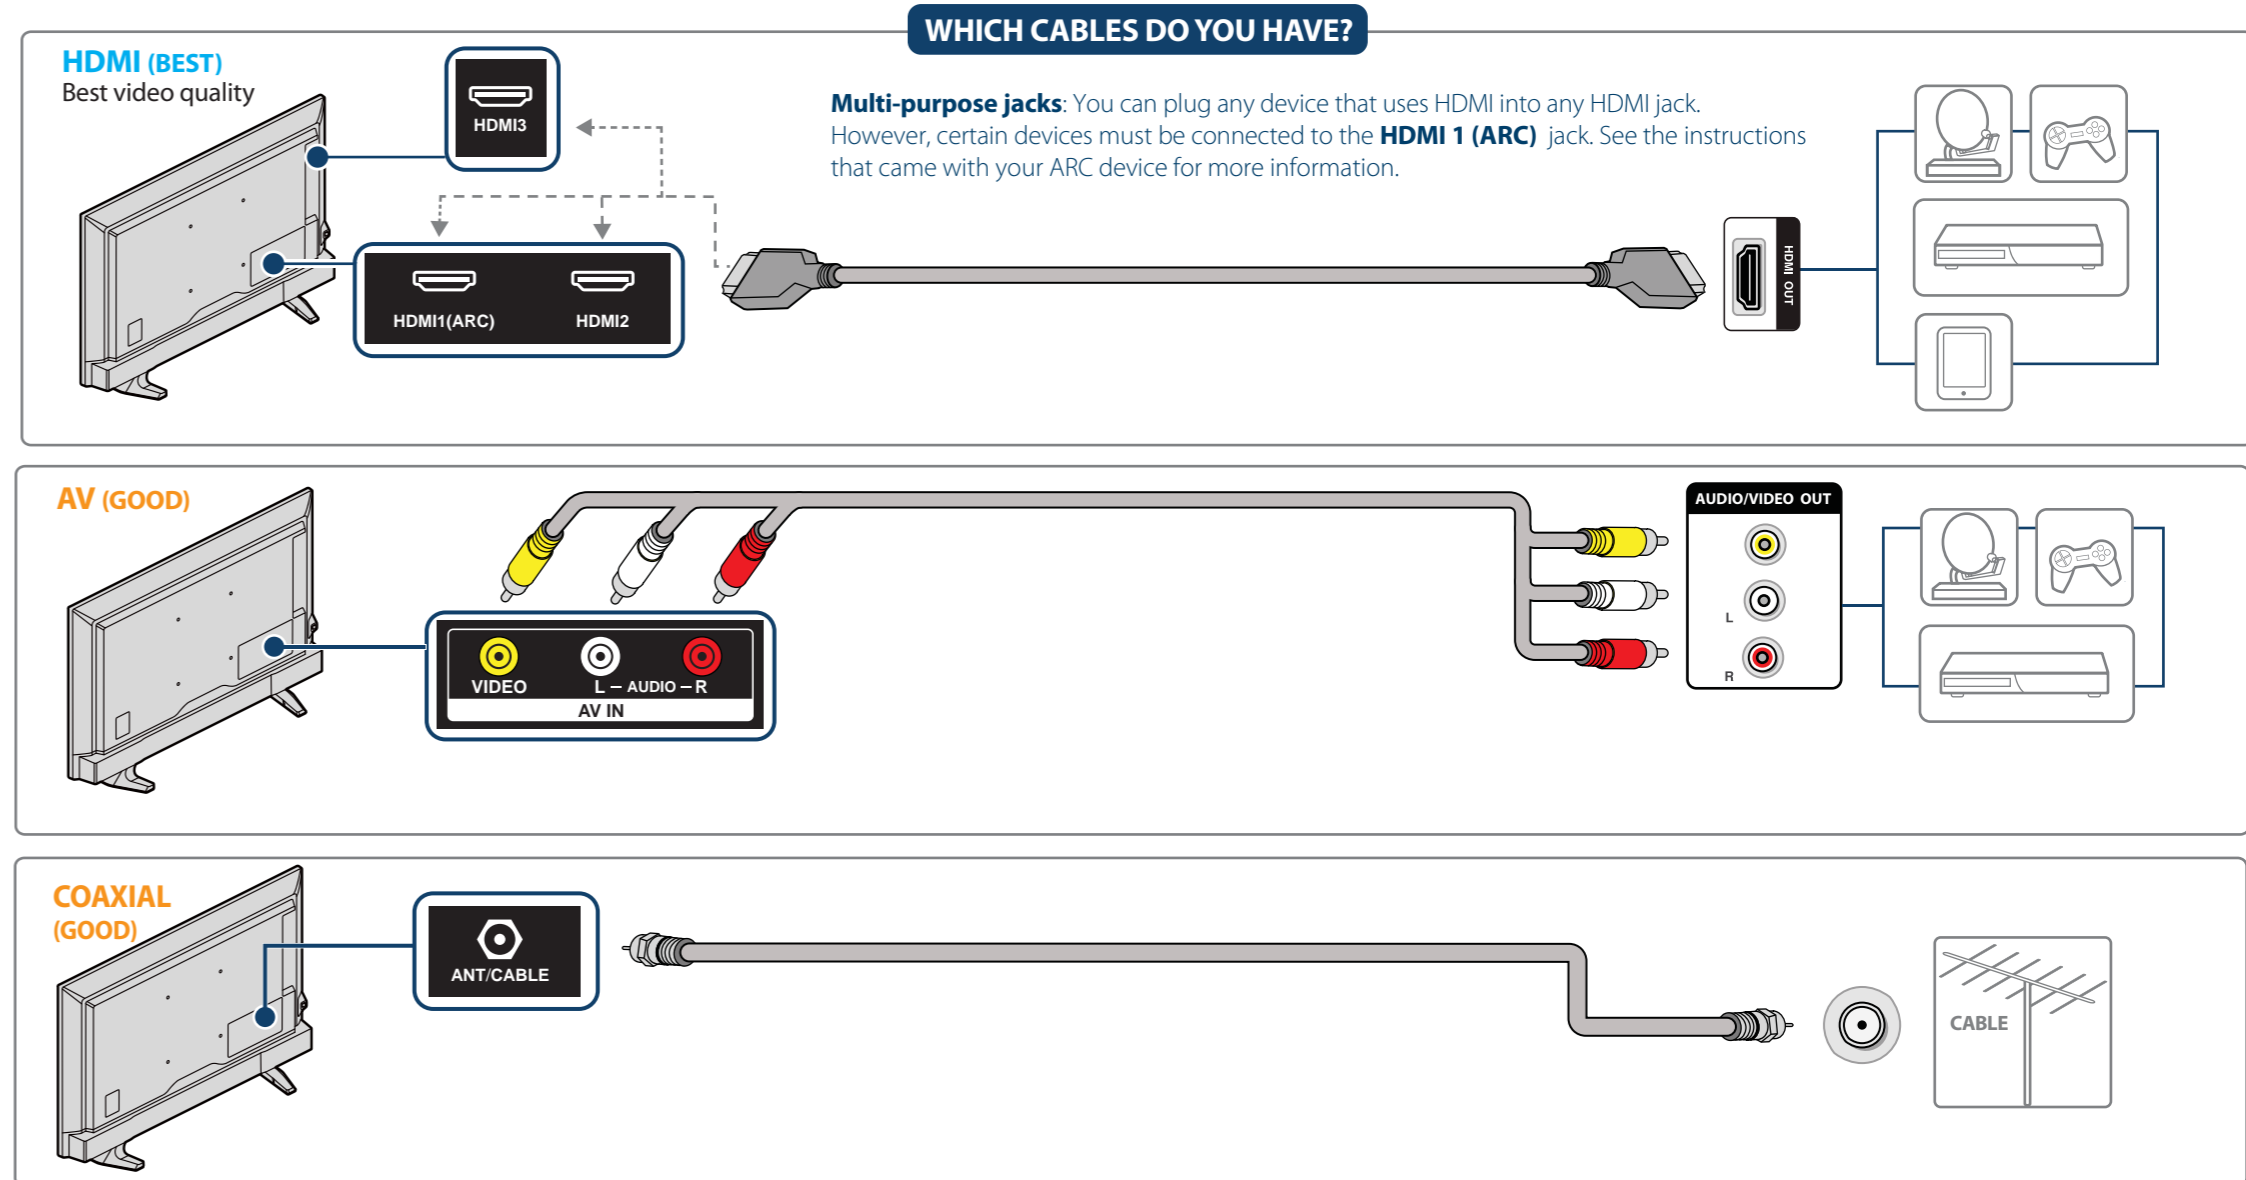

**3 CONNECTING AUDIO DEVICES** How do I connect my TV to external speakers?

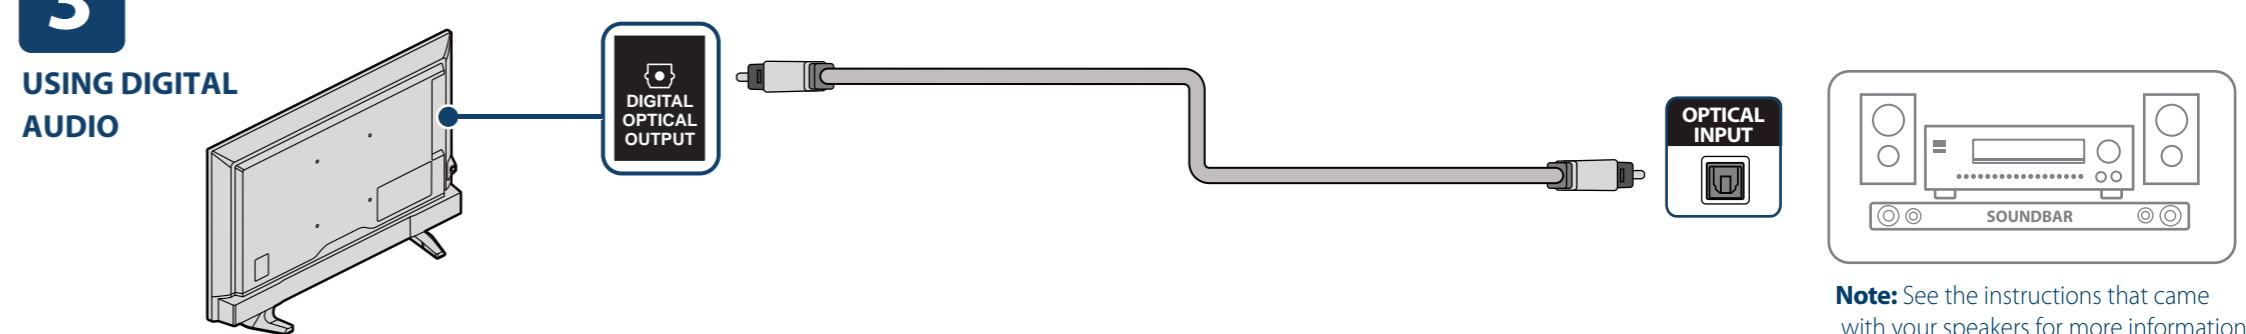


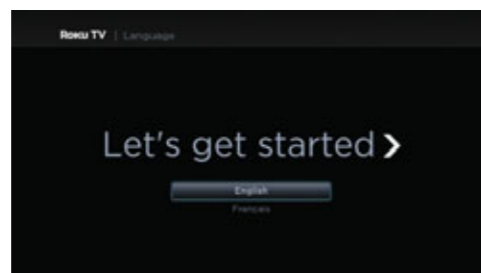
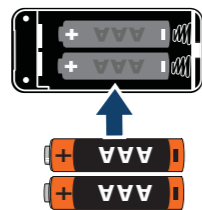
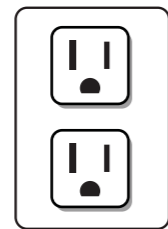
**Note:** See the instructions that came with your speakers for more information.

## 4 TURNING ON MY TV

When can I turn on my TV?

### WHEN YOUR TV IS IN PLACE:

- 1 Plug the power cord into the **AC IN** jack on the back of your TV, then plug the other end into a power outlet.
- 2 Remove the remote control cover and install the batteries.
- 3 Press  (power) on your remote control.
- 4 Follow the on-screen instructions.



## 5 COMPLETE GUIDED SETUP (OPTIONAL)

Establish your network connection.

- 1 Your TV automatically detects your wireless network, so have your network name and password handy and follow the easy on-screen instructions.
- 2 You'll be prompted to create your Roku account online at <https://my.roku.com/link>. Your TV will generate a unique code that links your TV to your new account.  
**Note:** Roku accounts are free, and while a valid credit card number is not required, providing your card information makes renting and purchasing entertainment a breeze.
- 3 After you are connected to your account, your TV automatically updates with the latest software, and you can start streaming immediately.
- 4 If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

 
## 6 OPTIONAL

Watching local broadcast TV  
How do I scan for channels?



If you connected a cable or satellite box, skip this step.

If you connected your TV to an antenna or cable wall jack (no box):

- 1 When the setup wizard is complete, select the **ANTENNA TV** tile  from the Home screen.
- 2 Follow the on-screen instructions.
- 3 Whenever you want to watch local broadcast TV, select this tile.

## CONNECTING BRINGS OUT YOUR TV'S FULL POTENTIAL!

You'll have access to thousands of streaming channels\*.



**Note:** Images do not necessarily represent the exact design of your television.

### Make any night a movie night

Access more than 500,000 movies and TV episodes across major streaming services like Netflix, Hulu, Amazon Video, VUDU, and more. Choose from free, rental, and subscription services.\*

### Stream sports on the big screen

Choose from over 140 sports channels like Watch ESPN, FOX Sports Go, NBA, NFL, MLB, WWE, CBS Sports, and more.\*

### Explore your passions

In addition to popular streaming channels like HBO NOW, SHOWTIME, PBS KIDS, and FOX NOW, your Insignia • Roku TV also offers hundreds of streaming channels to fuel your passions – including fitness, cooking, religion, outdoors, international programming, and much more.


### Enjoy tons of free channels and free trials

Your Insignia • Roku TV has hundreds of popular free channels like Crackle, CBS News, PBS, VEVO, and more. Plus, free trials\*\* to popular subscription services like HBO NOW, SHOWTIME, Netflix, Amazon Video, and Hulu.

\*Subscription or other payment may be required to access certain channels. Content may not be available in all areas in which the Insignia Roku TVs are sold and channel availability is subject to change.

\*\*Cancel before your free trial ends to avoid subscription fees. Credit card may be required. ROKU, ROKU TV, and the ROKU logo are trademarks and the property of Roku, Inc. Other channel logos, brands, and product names are trademarks or registered trademarks of their respective holders.

## USING YOUR REMOTE CONTROL

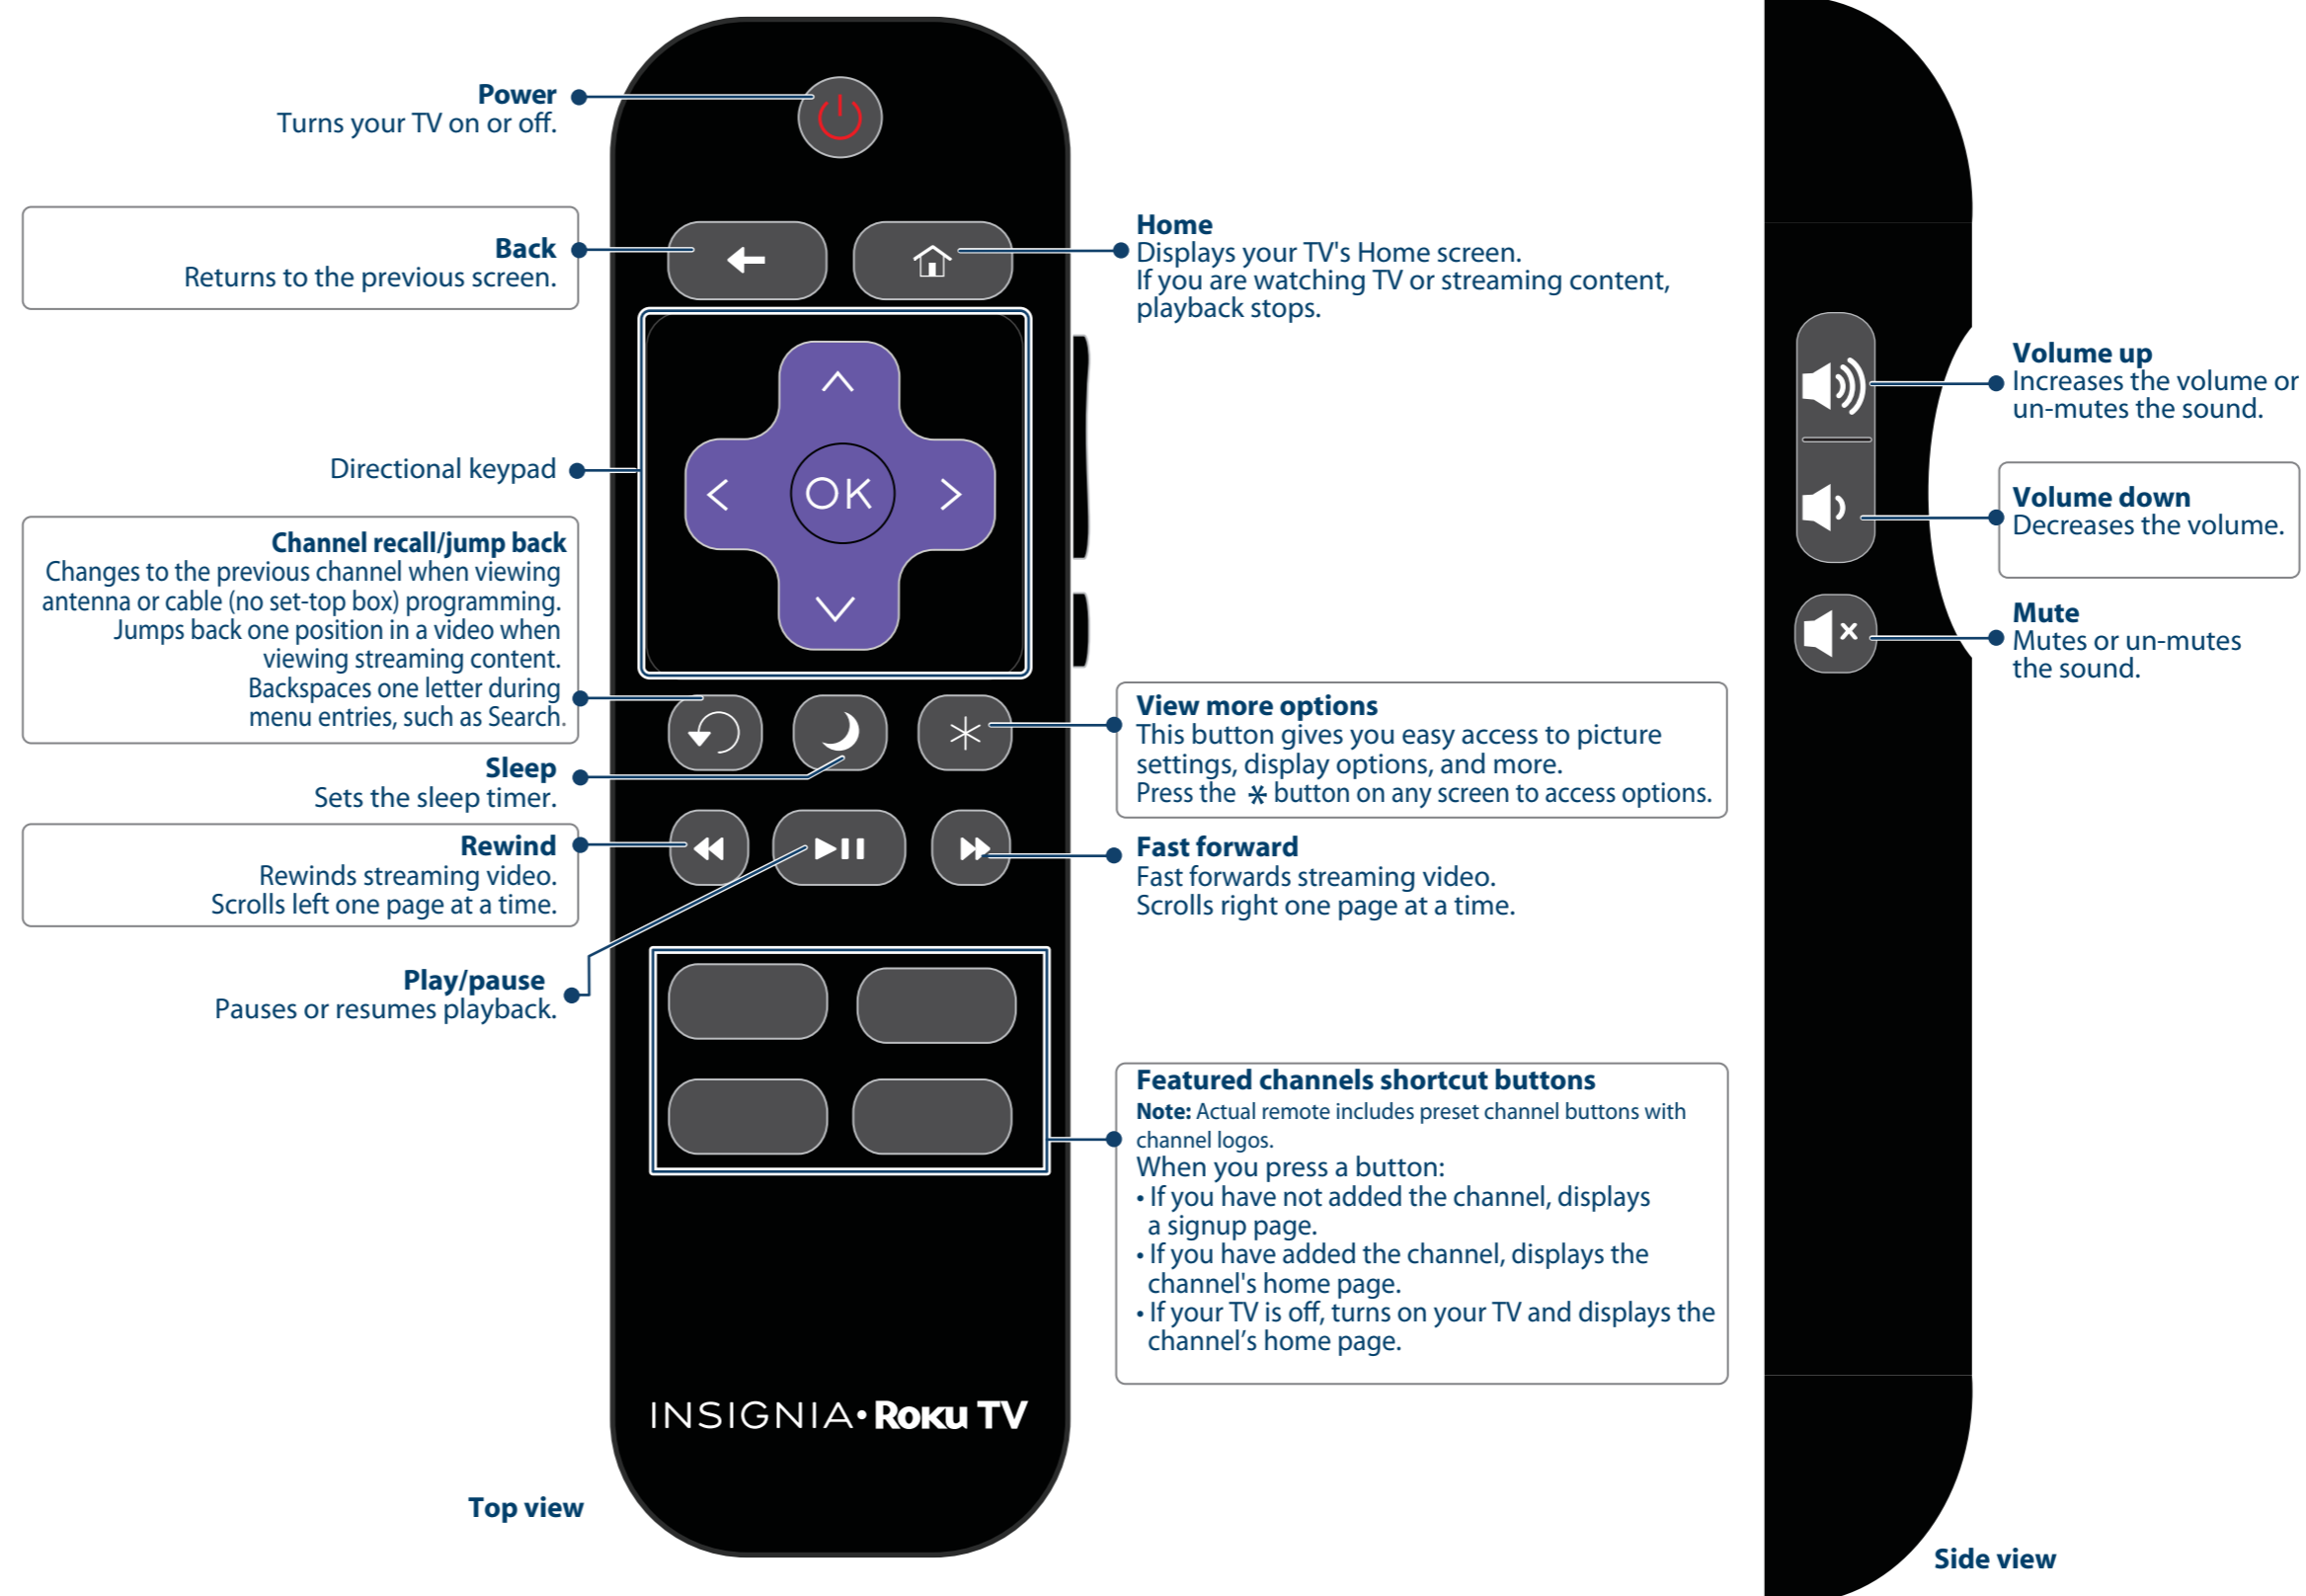

### Using your Cable Set-top Box or Satellite Receiver Remote as a universal remote.

If you prefer to use your cable set-top box or satellite receiver remote as a Universal Remote, please refer to the manual that your cable or satellite service provided. It includes instructions on how to program their remote to your television. You can find codes that work with your Insignia • Roku TV and the most common cable and satellite providers' universal remote controls at [www.roku.com/universalremote](http://www.roku.com/universalremote).

## INSIGNIA • Roku TV

### TROUBLESHOOTING

Having trouble completing the guided setup?

Don't worry, it's usually an easy fix.

If you cannot see a picture on your TV:

- Make sure your TV and the device you want to watch (cable box, Blu-ray player, game console, etc.) are turned on and plugged into a working wall outlet.
- Make sure your power cable is connected.

If you cannot connect to your wireless home network during guided setup:

- Make sure the correct wireless network name is selected.
- Make sure the wireless network password is correctly entered (password is case sensitive).
- Improve the wireless signal by rotating the router slightly (even a few inches can help).

If you cannot hear sound:

- Make sure the TV volume is turned up and not on mute.
- Try only the TV speakers by disconnecting any connection to audio devices (like headphones or audio video receivers).

If the TV remote control isn't working:

- Remove any obstruction and point the remote at the TV's remote control sensor (see FEATURES).
- Try a fresh set of batteries.
- If the status light on the front of your TV flashes once each time you press a remote button, the problem is not with the remote.
- Unplug the TV and plug it back in.

### ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

### NEED ADDITIONAL HELP?

- Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for tips and tutorials on using Roku.
- Check out our **Support Community** at [community.insigniaproducts.com](http://community.insigniaproducts.com) for helpful information from other Insignia TV owners.

### WE'RE HERE FOR YOU

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
For customer service, call:  
**1-877-467-4289** (U.S./Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2018 Best Buy. All rights reserved  
**Made in China**