

LELO



LILY / NEA / YVA / IDA USER MANUAL

BEDIENUNGSANLEITUNG

MODE D'EMPLOI

MANUAL DEL USUARIO


MANUALE DELL'UTENTE

Congratulations on acquiring the LILY / NEA / YVA / IDA Pleasure Object. Before getting more closely acquainted with her, please take a moment to look through this user manual.

LILY / NEA / YVA / IDA OVERVIEW

LILY / NEA / YVA / IDA is a dedicated sensual massager, ergonomically designed to suit the female body's natural curves. She is intended as an adult plaything only and is equipped with several traits that embody the elegance and ease of use that is to be expected from a LELO pleasure object.

The pleasure point houses a discreet vibrator engine and the intuitive two-button interface lets you control vibration intensity and choose stimulation mode. A LED indicates use of the interface and charging activity.

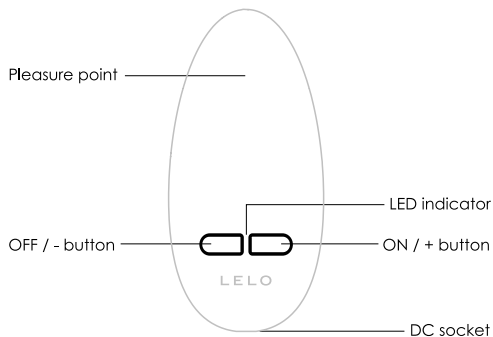

CHARGING

Before charging, make sure the DC socket is free from water or lubricant residue. Water is best removed by, with pouted lips, blowing into the DC socket.

1. Gently insert the DC plug into the DC socket, deep enough to feel a subtle click.
 2. Insert the mains plug into the wall socket. The LED will pulse to indicate that LILY / NEA / YVA / IDA is charging. When she is fully charged (after c. 2 hours) the LED will emit a steady glow.
- Do NOT **use your LILY / NEA / YVA / IDA while charging.**
 - Do NOT **charge for more than 24 hours.**
 - **Only use original chargers provided by LELO.**

If the battery is running low, the LED indicator will prompt you to charge by emitting a red glow, as opposed to white, when an interface button is pushed.


USING YOUR LILY / NEA / YVA / IDA

On / off, vibration intensity and stimulation modes are all controlled with the interface buttons. When either button is pressed, the LED indicates that the interface is active.

- 1. Hold down the + button to activate your LILY / NEA / YVA / IDA. Continue pressing it to increase vibration until you reach the vibration intensity you require.**
- 2. Press the - button to decrease vibration intensity.**
- 3. To turn off your LILY / NEA / YVA / IDA, hold down the - button. Vibration intensity will decrease until she is completely off.**

When transporting your LILY / NEA / YVA / IDA, always lock the interface to prevent accidental activation.

To lock, hold down both buttons for five seconds. The LED will light up and then go dark to indicate LILY / NEA / YVA / IDA is locked. To unlock, repeat the process until the LED lights up. Note that charging will automatically unlock LILY / NEA / YVA / IDA.

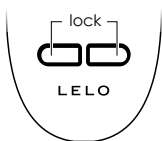

STIMULATION MODES

Your LILY / NEA / YVA / IDA has five programmed stimulation modes. The modes are designed to simulate a variety of massaging strokes and to facilitate the experience that best suits your own mood each time you use LILY / NEA / YVA / IDA.

When you first turn LILY / NEA / YVA / IDA on, she is in continuous vibration mode. To reach the other four modes, hold down the + button until vibration intensity is at maximum. Release, then hold down the + button again. LILY / NEA / YVA / IDA will enter the second stimulation mode and you can then cycle between modes 2-5 by pressing the + button. To return to continuous vibration mode, press the - button.

mode	characteristics
1	continuous vibration
2	extended interval pulsation
3	intermediate interval pulsation
4	short interval pulsation
5	wave pulsation

YVA is handcrafted from stainless steel or 18K gold plate, materials that offer exciting prospects for those inclined to the sensual utilisation of temperature. To warm, hold YVA in your hands or against your skin for a few minutes. To cool, place her in the fridge until her surface temperature meets your needs.

CLEANING, STORAGE AND SAFETY

The lifespan of your LILY / NEA / YVA / IDA will be greatly increased with proper maintenance and care.

LELO recommends that you NOT use a silicone-based lubricant with LILY / NEA, as this could make the silicone permanently tacky. A water-based lubricant is the safest option. If you wish to use a silicone-based lubricant, perform a patch-test first. YVA is suitable for both silicone- and water-based lubricants. Never use massage oil or hand cream as lubricants for either LILY / NEA or YVA.

Always clean LILY / NEA / YVA / IDA thoroughly before and after each use. Wash the body (paying special attention to the pleasure point) with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Avoid submerging and getting water into the DC socket or around the interface buttons. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your LILY / NEA / YVA / IDA in direct sunlight and NEVER expose her to extreme heat.

Store your LILY / NEA / YVA / IDA in a dust-free place and keep her away from toys of other materials.

TROUBLESHOOTING

LED does not pulse when charger is connected?

- Battery is fully charged. Up to 7 hours of pleasure awaits you.
- Battery is drained and will require several minutes to acknowledge charger.
- Charger is not properly connected. Check wall and DC sockets.

LILY / NEA / YVA / IDA does not activate when the + button is pressed?

- Battery is empty. Recharge your LILY / NEA / YVA / IDA.
- Interface dial is locked. Unlock by holding down both buttons for 5 seconds.

LILY / NEA / YVA / IDA cannot be switched off and / or interface buttons do not respond?

- Microprocessor is temporarily malfunctioning. Connect the charger to restore function to normal.

If you experience any other problems with your LILY / NEA / YVA / IDA or if you have any questions regarding her operation, please contact:

CUSTOMERCARE@LELO.COM

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this pleasure object is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by inappropriate waste handling of the product. The recycling of materials will also help conserve natural resources.

For more information about the recycling of your pleasure object, please contact your local household waste disposal service or your place of purchase.

APPLICABLE ACCESSORIES: CHARGER



SPECIFICATIONS

MATERIALS	ABS / stainless steel / 18 K gold plated
FINISH	glossy / pearl
SIZE	75 x 36 x 25 mm
WEIGHT	37 / 112 grams
BATTERY	Li-Ion 240 mAh 3.7 V
CHARGING	2 h at 4.8 V 200 mA
USER TIME	up to 7 hours
STANDBY	up to 90 days
FREQUENCY	150 Hz
MAX. NOISE LEVEL	< 50 dB
INTERFACE	variable interface dial, 5 modes

Disclaimer: Users of this pleasure object use it at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this pleasure object.

Model may be changed for improvements without notice.

© 2009 LELOi AB. ALL RIGHTS RESERVED.
DESIGNED AND DEVELOPED BY LELO SWEDEN.
ASSEMBLED BY LELO PRC.

WEBSITE WWW.LELO.COM

SUPPORT CUSTOMERCARE@LELO.COM