

Package contents

- Wireless sensor bar for Nintendo® Wii™
- *Quick Setup Guide*


You will need:

- 4 AAA batteries


Features

- Receives wireless (IR) signals from wireless Wii controllers
- Extendable sensors for a wider range of play
- Sleep mode and low battery indicators
- Mounts on top or bottom of TV or on the wall

Front view

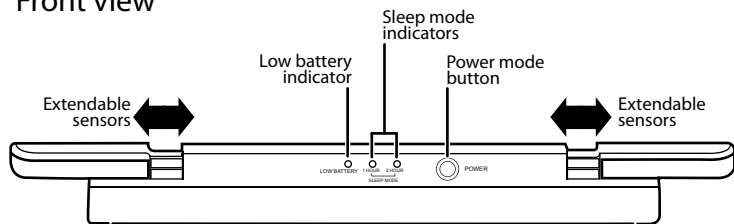


Back view

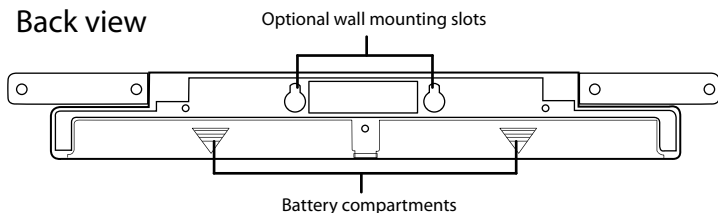


Setting up your sensor

- 1 Remove the covers from the battery compartments on the back of the sensor bar.


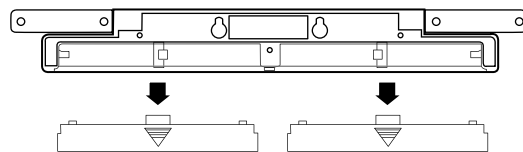


- 2 Insert 2 AAA batteries (not included) into each battery compartment, then replace the covers. Make sure that the + and – symbols on the batteries line up with the + and – symbols in the battery compartment.

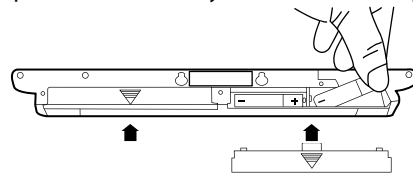

- 3 Mount the bar on the top (A) or bottom (B) of the TV using the provided velcro stickers. You can also mount the bar on a wall by sliding the mounting slots over 1/4" screws (not included) spaced 1.9" apart (center to center).


NOTE: The playable range is about 13 ft. (4 m). You can adjust the bar's sensitivity from your **Wii Options** menu. **Wii Settings, Sensor Bar, Sensitivity**, then adjust the setting.

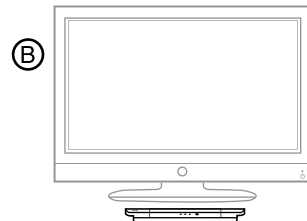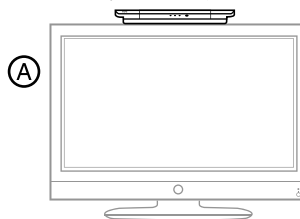

Using the sensor bar

- 1 Press the **POWER** (power/sleep mode) button once to turn on the sensor bar and set the sleep mode to one hour, or press the **POWER** button twice to turn on the sensor bar and set the sleep mode to two hours. The **1 HOUR** or **2 HOUR SLEEP MODE** indicator turns on.


Note: When the sleep time expires (one hour or two hours), the sensor bar and the **SLEEP MODE** indicator turn off. To continue using the sensor bar, press **POWER** button to set the sleep mode again.

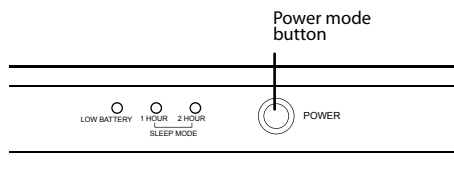

- 2 Set the sensor location information in your Wii settings menu. For instructions, see your Wii's user guide.
- 3 To turn off the sensor bar before the sleep time expires, press and hold the **POWER** button.

Low battery

When the battery power is low, the **LOW BATTERY** indicator flashes. Turn off the sensor bar and replace the batteries.

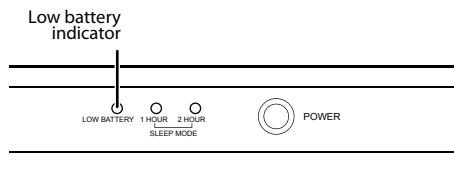

90-day limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service please call 1-800-620-2790
www.rocketfishproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN 55423-3645 USA

© 2011 BBY Solutions, Inc., All Rights Reserved

ROCKETFISH is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Wii is a trademark of Nintendo of America, Inc. All other products and brand names are trademarks of their respective owners.