 





Convertible Speaker Dock

RF-HV3

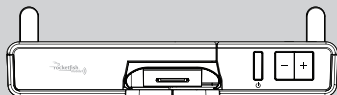

Features

- Certified connector for iPods and iPhones
- Charges iPods and iPhones when docked
- Digital volume control
- 3.5 mm line-in jack for use of other music players

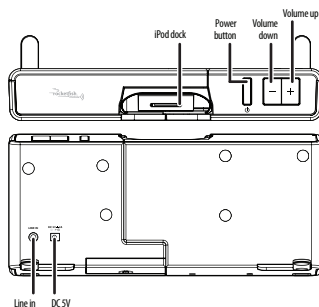

Package contents

- Convertible speaker dock
- Dock adapters for iPods and iPhones (7):
 - iPod Classic (80G/120G version only) (1)
 - iPod Nano 2nd Generation (1)
 - iPod Nano 3rd Generation (1)
 - iPod Nano 4rd Generation (1)
 - iPod Touch 1G/2G (1)
 - iPhone 2G (1)
 - iPhone 3G (1)
- Remote control
- AC adapter
- *Quick Setup Guide*

Connecting power

- Plug the AC adapter into the DC 5V jack on the back of your speaker dock and into a power outlet.

OR

- Insert four AAA batteries (not included) into the battery compartment.

Note: When you operate your speaker dock on battery power, it does not charge a docked iPod or iPhone battery.

QUICK SETUP GUIDE

Docking an iPod or iPhone

- 1 Select and insert the correct adapter for your iPod or iPhone.
Note: The adapters are marked. Make sure the correct dock adapter is used to avoid damage to the dock connector.)
- 2 Insert your iPod or iPhone into the dock.
- 3 Press  to turn on your speaker dock.
- 4 Press  on the remote control or on the docked iPod or iPhone to start playing a music or video file.
- 5 To control playback:
 - Press  to pause or resume playback.
 - Press  to turn off the speaker sound. Press again to turn the sound back on.
 - Press  or  to go to the previous or next file.
 - Press and hold  or  to search backward or forward in a file.
 - Press  (repeat) once to repeat the current file. Press twice to repeat the entire album or playlist. Press three times to turn off the repeat feature.
 - Press  (shuffle) to play files randomly. Press again to turn off the shuffle feature.
- 6 Press  to off your speaker dock.

Troubleshooting

Problem:	Solution:
Sound is not clear or there is no sound	Make sure that the iPod or iPhone is inserted correctly and that you are using the correct adapter.
No power	Make sure that the AC adapter is connected securely and correctly.
Sound is too low or too distorted	Press the VOLUME – button to turn down the volume.
Too much distortion	If you are using batteries, the battery charge may be low. Replace the batteries.
Cannot exit standby mode when playing music from an iPod	Make sure that there is no cable connected to the LINE IN jack.
iPod menu navigation does not work correctly	Make sure that your iPod or iPhone is not in landscape mode

Specifications

- Total 6W output (3W / channel)
- Mid range (40 mm) per satellite
- Distortion: $\leq 10\%$
- S/N ratio: $>65\text{dB}@1\text{W}$
- Frequency response: 200Hz - 16k Hz
- Provided AC: 5VDC @ 2A

Compatibility (iPod & iPhone)

- iPod 1st touch
- iPod 2nd touch
- iPod Classic (80G and 120G version only)
- iPod 4th nano
- iPod 3rd nano
- iPod 2nd nano
- iPhone 2G
- iPhone 3G
- iPhone 3GS

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

One-year limited warranty

Visit www.rocketfishproducts.com for details.

© 2009 Best Buy Enterprise Services, Inc.

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645