

QUICK SETUP GUIDE

Full HD Dual Camera Dash Cam

NS-DCDCHH2

PACKAGE CONTENTS


- Dual Camera Dash Cam
- USB cable
- Vehicle power adapter
- Suction mount
- Quick Setup Guide

FEATURES


- 1080p resolution on front and rear-facing cameras
- G-force sensor automatically starts recording on impact
- Built-in microphone to capture audio
- Loop recording overwrites the oldest footage and prevents you from running out of storage

Refer to the online *User Guide* for more button information.

Back

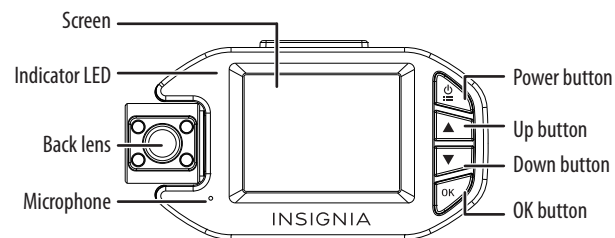

Front

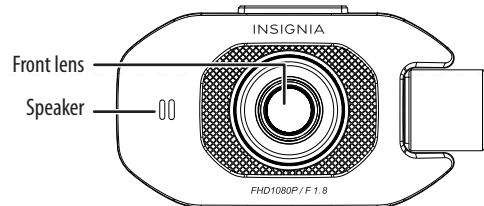

INSTALLING YOUR DASH CAM

Note: Use a card with 8GB to 128GB of memory. We recommend using a card with the highest memory capacity available. Higher memory capacity lets you record more.

- 1 Insert a microSD memory card (8GB to 128GB memory capacity).



- 2 Clean and thoroughly dry the windshield area where you want to mount your dash cam.
- 3 Insert and slide the mounting bracket on the suction cap into the mounting slot on the top of your dash cam.
- 4 Peel the protective film from the mounting bracket and the dash cam lens.
- 5 Position the suction cup on the windshield, then move the mounting bracket switch clockwise until you hear a click.
- 6 Connect the provided USB cable to the USB jack on your dash cam, then thread the cable from your dash cam, around the outer edge of the windshield, and to a 12V vehicle power socket.
- 7 Plug the cable into the vehicle power adapter, then plug the adapter into the power socket and turn on your vehicle. Your dash cam starts automatically.
- 8 Rotate the mounting bracket to adjust the viewing angle as needed.
- 9 Follow the on-screen prompts to set up your dash cam. Make sure that you format the memory card during the setup. If the card is not formatted, it may not record. See your online User Guide for information about dash cam settings.

TURNING ON YOUR DASH CAM MANUALLY

- 1 Press and hold the power button to turn on your dash cam.
 - 2 Press and hold the power button to turn off your dash cam.
- Note:** If you have an SD card installed and if your dash cam is connected to a vehicle power socket, it starts recording automatically when you start your vehicle. You should review your first video to make sure that the camera is positioned correctly and that the video recorded correctly.

RECORDING VIDEO WITH YOUR DASH CAM

- 1 Make sure that your dash cam is turned on.
- 2 Press the **OK** button to begin recording.
- 3 Press the **OK** button again to stop recording.

TROUBLESHOOTING & SPECIFICATIONS

For troubleshooting and specifications information see your online *User Guide*.

IMPORTANT SAFETY INSTRUCTIONS

- Always read the safety instructions and the User Guide carefully. Keep the User Guide for future reference.
- Do not drop or allow forceful impacts to your dash cam, or install it in locations exposed to heavy vibrations.
- Do not disassemble or modify your dash cam in any way. Disassembly or modification may not only void the warranty, but may also cause damage.
- Do not use or store your dash cam in damp locations. Liquid entering your dash cam may cause damage or lead to fires or electric shock.
- Do not operate your dash cam in extreme heat conditions. If your vehicle is parked in a hot sunny climate, let your vehicle cool down before using your dash cam.

LEGAL NOTICES

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3(B)/NMB-3(B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2019 Best Buy. All rights reserved.

Made in China



FIND YOUR USER GUIDE ONLINE!

Go to www.insigniaproducts.com, enter your model in the search box, then press **ENTER**. Next to *Features*, click **Support & Downloads**, then next to *User Guide*, click the language you want.