

 


Memory Box


www.Voice.Gift

Your favorite memories just got more memorable. The Memory Box is a place to keep treasures, share stories and play special songs. Fill it with mementos, keepsakes, notes, photos and jewelry. Then record up to 60 seconds of messages or music that will play something just as personal, too. Take a peek in the mirror under the lid or slide in a photo to view every time you look inside. Collect all your favorite things, keep what's sentimental safe, and make all these treasures more special with the gift of voice and music.

MEMORY BOX

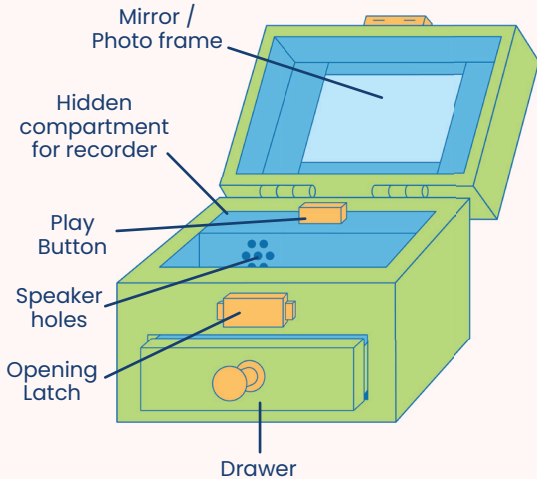


RECORDER

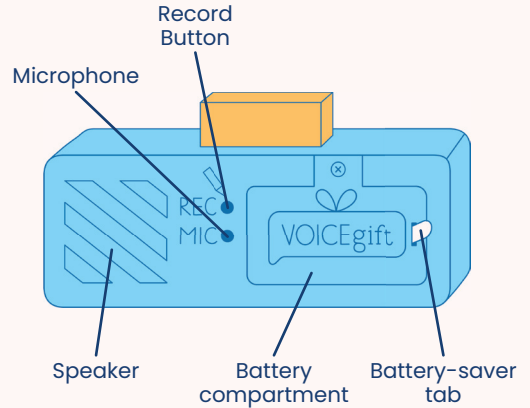


INCLUDES:
• 3 - LR44 batteries

1 Remove Recorder

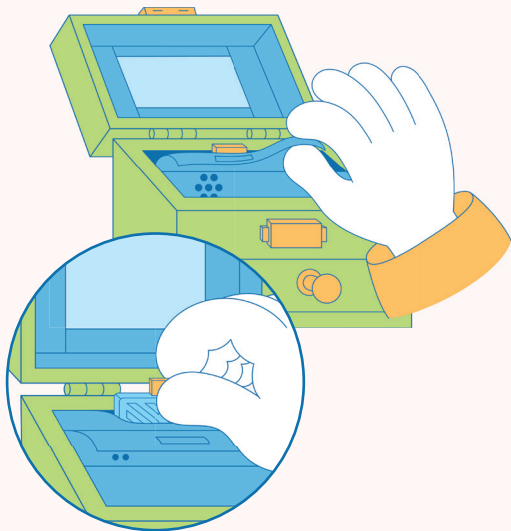

To record messages, remove the recording module from the hidden space behind the back wall of the box. The module is hidden under a magnetic cover. Use your fingers to open the cover and remove the module by grabbing the Gold Play button.


2 Record

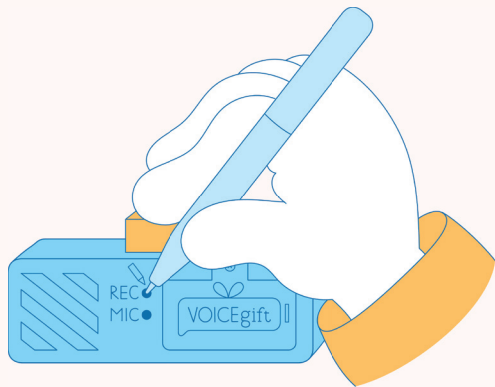

To activate the unit, pull and remove the white battery-saver tab. To record, use a pen to press and hold the recessed REC button. Recording begins when you hear the beep. Speak, sing or record music from a speaker. Release when you're finished recording. For additional messages, press and hold REC again. You can record as many messages as you like, up to 60 seconds.


When you are done recording, simply slide the module back in the hidden compartment, making sure you align the speaker holes.

3 Preview & Play

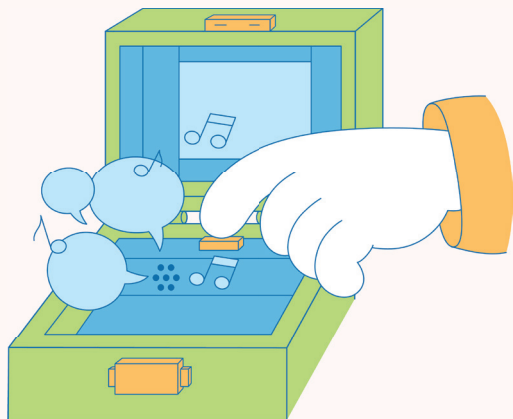


To listen back, press the Gold Play button to hear your first message. Press the button again to hear any additional messages. If you have recorded more than one message, be sure to listen to that last message before gifting, so when that special someone opens the box your first message will play first. You can always re-record at any time. To adjust the recording quality, try talking louder/softer or holding the device closer/further away from your mouth or speaker.

4 Add a Photo

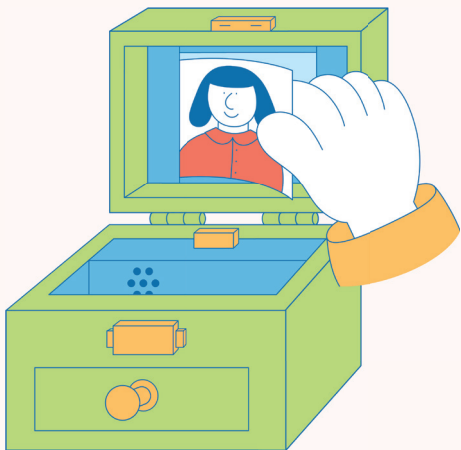

You have the choice of leaving the mirror as-is or adding a standard 4x6 photo over it. To insert a photo or drawing, simply slide one side of the print under the felt border frame and then slide the photo towards the other side so that both edges of the photo are secured under the felt frame.

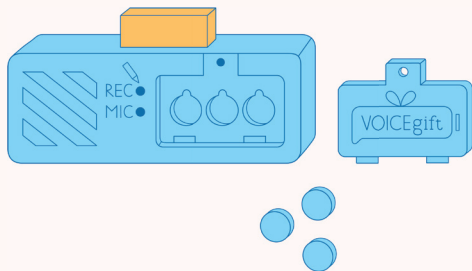

Memory Box includes 3 LR44 batteries and will play messages over 500 times under typical usage. Don't worry, your messages will be saved even after the batteries are changed. To replace, use a small Phillips-head screwdriver to open the child-safe battery door and use a small flat-head screwdriver to pop out the batteries. Batteries must have their positive (+) side facing up.

Check out a how-to video and discover how others are using their Memory Box by scanning the QR code below. This item is not a toy. Not for children under 3 years.



Visit us online at www.voice.gift
Send a message to hi@voice.gift
Follow us [@voicegift](#)



Voice Express Corp.
606 Post Road East
Suite 3-706
Westport, CT 06880

VoiceGift is a registered trademark of Voice Express Corp.
©2023 Voice Express Corp. All Rights Reserved.

