


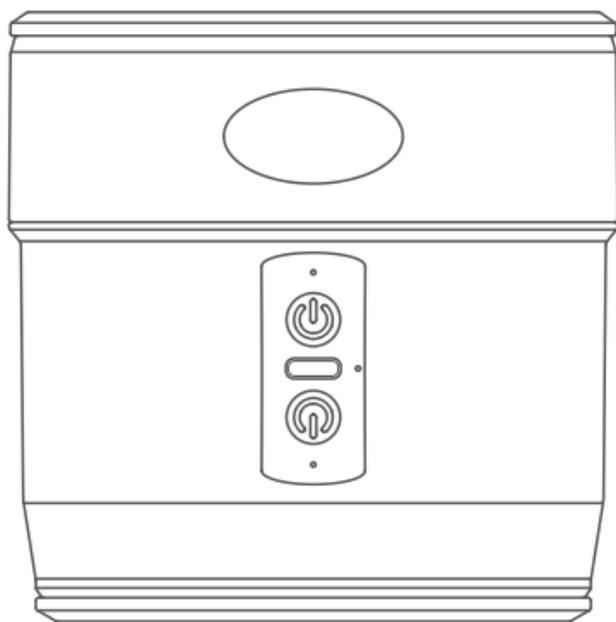

Electric Mason Jar Vacuum Sealer

HS-VS200A



User Manual

- Email: support@easy-era.com -

In the Box

Vacuum Sealer x 1

USB/Type-C Charging Cable x 1


Regular Mouth Lid x 5

Wide Mouth Lid x 5

Lid Opening Tool x 1

User Manual x 1

Product Overview

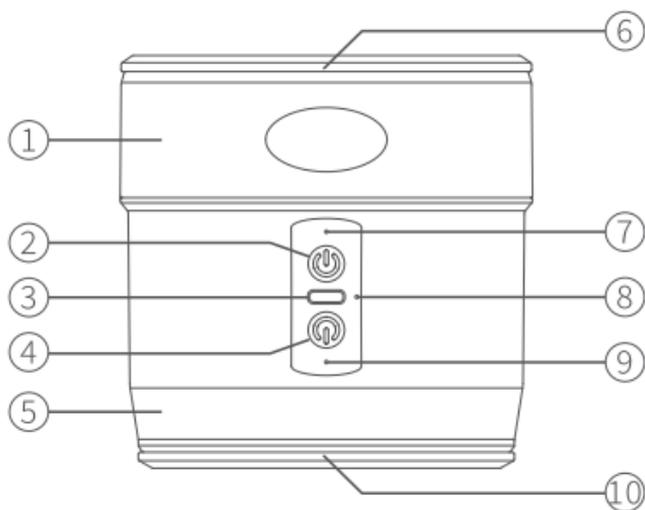

- ① Wide mouth side (for 3.39" wide mouth Mason jar)
- ② Wide mouth start/stop button
- ③ Type-C charging port
- ④ Regular mouth start/stop button
- ⑤ Regular mouth side (for 2.76" regular mouth Mason jar)
- ⑥ Wide mouth dust cover

- ⑦ Wide mouth indicator light
- ⑧ Charging indicator (charging: solid red; fully charged: green; low battery: flashing red)
- ⑨ Regular mouth indicator light
- ⑩ Regular mouth dust cover


Usage

1. Place the food in a Mason jar, ensuring it doesn't exceed the bottom thread of the jar mouth for better vacuum sealing.



2. Clean the Mason jar mouth and attach the lid to it.
3. Select the appropriate vacuum sealer side (regular or wide mouth) and remove the dust-proof cover.

4. Align the vacuum sealer with the jar mouth and press it down vertically until it securely covers the jar. Ensure the soft silicone ring wraps the jar mouth completely and tightly.

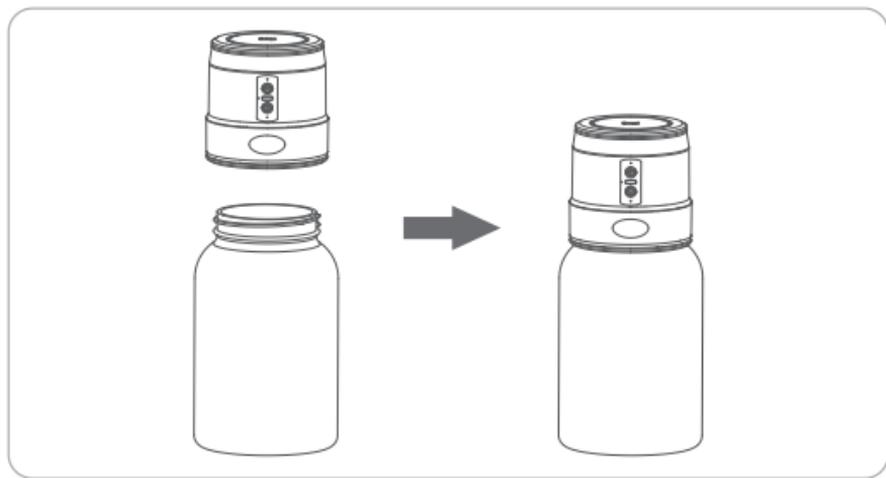

5. Press the corresponding start button. The vacuum sealer will emit 3 beeps when the air inside the jar is fully evacuated, indicating a vacuum environment. If no beeps are heard, it means the air is not completely removed. Continue pumping or check the proper alignment of the vacuum sealer and jar mouth.

Tips:

- * The vacuum sealer will automatically stop after 3 minutes of working.
- * The charging indicator light will flash when the power is low. Please charge in time.

Troubleshooting

1. Wide or regular Mason jar cannot be sealed.

- * Check for any particles or liquid in the sealing area of the vacuum sealer. If present, wipe the area clean before use.
- * Ensure that the sealing silicone ring in the mouth sealing area is properly installed.
- * When using the vacuum sealer, make sure it is pressed vertically to the bottom and the Mason jar mouth is wrapped by the soft silicone ring of the vacuum sealer. If unsure, repeat the process to ensure proper alignment.
- * When sealing liquid items, keep the liquid below the jar mouth bottom thread to achieve a reliable sealing effect.

2. The jar lid or soft silicon ring gets pulled off after vacuuming.

When removing the vacuum sealer after vacuuming, avoid pulling it off forcefully. Instead, hold the Mason jar with one hand and the vacuum sealer with the other hand. Shake it gently from side to side and gradually pull it out vertically to prevent the cover or silicone ring from coming off.

Safety Instructions

1. The operating voltage of this product is 3.7V. Please ensure it is fully charged before use (charging voltage: 5V).
2. Do not sterilize any accessories of this product in a microwave oven to avoid damage from heat deformation.
3. Avoid submerging the vacuum sealer in water or other liquids and refrain from rinsing it under water or other liquids. Do not clean all parts at a temperature above 60°C/140°F.
4. Avoid using steel wool, abrasive detergents, or corrosive liquids (such as gasoline or acetone) to clean the product.
5. Do not put any parts of this product in the dishwasher.
6. This product is not waterproof.
7. Ensure your hands are dry before plugging or unplugging the charging cable.

Specifications

Product Name	Electric Mason Jar Vacuum Sealer
Charging Voltage	5V
Charging Current	1A
Rated Power	<5W
Product Material	ABS, Food grade silicon
Charging Time	3 hours