

Cuisinart Cordless Stainless Steel Electric Knife w/ Carving Fork

Cuisinart®

PowerCut Cordless Electric Knife



All-in-One Versatility
Perfect for slicing meats, bread, fruits and vegetables and filleting fish.



Storage Case

AC Adapter
Specially designed to charge lithium ion batteries fast.

bpa^{free}



Serrated Steel Blade
Carves meat and slices bread effortlessly. Safety sheath included.



Straight Steel Blade
Premium blade slices fruits, vegetables, cheese and fish. Safety sheath included.

Worry-Free Safety Lock
Lock/unlock feature instantly secures the knife the moment the trigger is released.

Fully Rechargeable – No Cord Needed!
Two lithium ion batteries – a total of 7.2 volts deliver 20 minutes of full-power performance on a single charge.

Stainless Steel Accent

Blade Lock

Power Button

Charging Indicator Light
See at a glance when batteries are low, charging, or ready.

You wanted an edge in the kitchen -- and you've got one in this powerful electric knife. Quickly carve that Thanksgiving turkey, Christmas ham -- even hard cheeses, breads, fruits, and veggies -- so you can spend less time cutting and more time eating. From Cuisinart.

- Includes cordless electric knife, serrated blade, straight-edge blade, carving fork, two rechargeable 3.9V batteries, AC adapter, and case
- Cuts up to 20-minutes on a single charge
- 30-minute quick-charge
- One-touch on/off
- Safety lock/unlock
- Stainless steel construction
- Measurements: Handset 9.5" x 1.75" x 2.5"; Serrated blade 11" x 0.75" x 2"; Straight-edge blade 10" x 0.75" x 2"; Fork 11" x 0.65" x 0.5"; Case 6" x 14.25" x 3.25"; weighs 3.09 lbs
- UL listed; 18-month Limited Manufacturer's Warranty

FEATURES AND BENEFITS

Two unique blades offer more options than ever. Combined with the convenience of cordless operation, this is a knife you may find yourself using every day!

1. **Blades:**
Two full size blades
A) Serrated blade for meat, poultry and even crusty artisan breads.
B) Straight edge blade with support piece for slicing fruits, vegetables, cheeses and fish. Cut outs on blade help prevent ingredients from sticking.
2. **Blade Release Buttons (only 1 shown)**
Push both at the same time to easily insert, remove or change blades.
3. **On/Off Control:**
One-touch, pressure-activated on/off trigger control for simple operation. Convenient for left- or right-hand use.
4. **Lock/Unlock Safety Switch:**
Eliminates knife being turned on accidentally.
5. **Handle:**
Elegant ergonomic handle reflects look and feel of fine cutlery.
6. **Power Indicator/Charging Light**
7. **Case**
8. **Electrical Cord/Charge Plug/Insert:**
5-foot cord for maximum flexibility.
NOTE: Knife does not operate when plugged into charger.
9. **BPA free (not shown):**
All materials that come in contact with food are BPA free.

