

 
FCC INSTRUCTIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

-- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

-- Instructions shall caution users that modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

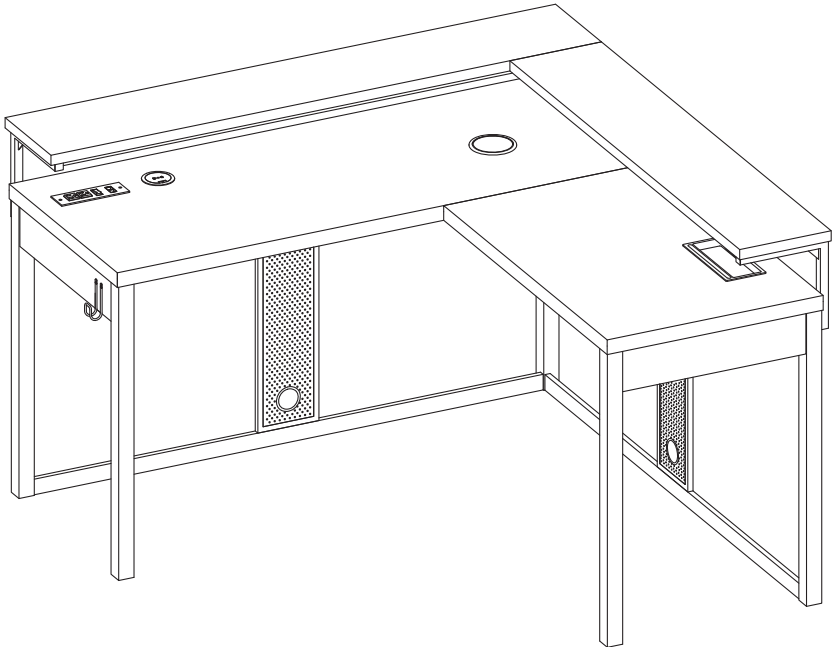

WARNING

1. Use this product only one person at a time.
2. Do not use this product unless all bolts screws and knobs are securely tightened.
3. Check that all bolts screws and knobs are tight every three months or as needed.
4. Do not overturn back tilt knob when decreasing tension.
5. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
6. Do not use product as a stepladder.
7. Use this product for its intended purpose only.
8. Use mild detergent only for cleaning.

OSP FURNITURE LIMITED PRODUCT WARRANTY

Design Lab Products

 
- 3 years on gaming desks and chairs
- Upholstery is not warranted against routine scratching and scuffing

**All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of Office Star Products. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a two year warranty on all parts applies. Fabric and foam is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*


It is the customer's responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by Office Star Products.

Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time.


CAM LOCK INSTALLATION

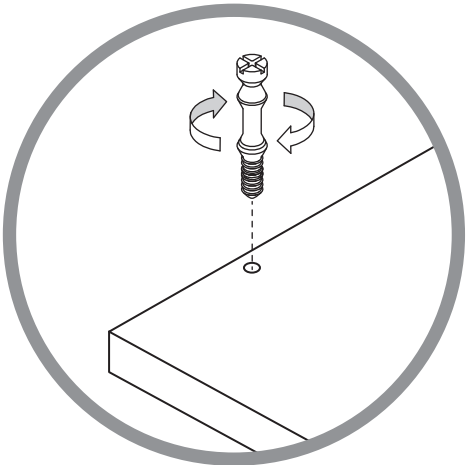

Screw Cam Screw in. Fully Tighten.

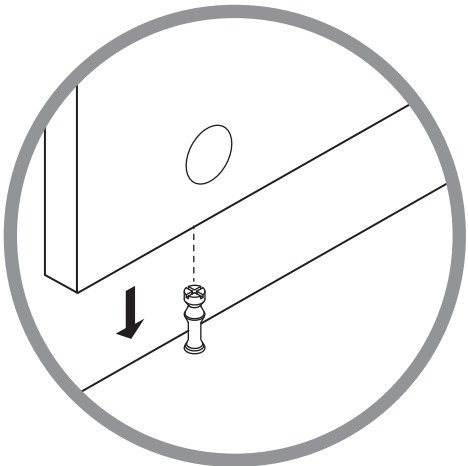 

Align hole in panel with Cam Screw.

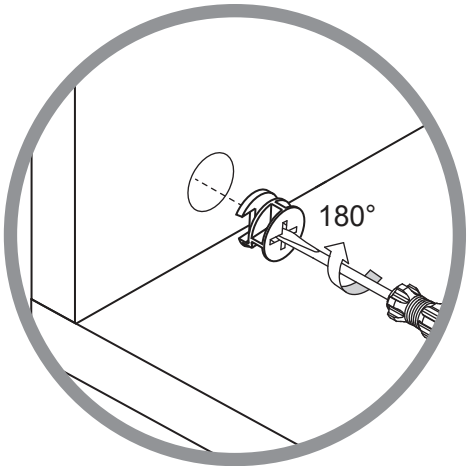 


Screw Cam Nut in. Turn clock-wise until you feel Cam Nut securely fasten to Cam Screw. Fully tighten Cam Nut.

HARDWARE LIST


NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
A		Glue	Ø	1 PC
B		Wooden Dowel	Ø	8 PCS
C		Cam Screw	Ø	17 PCS
D		Cam Nut	Ø	17 PCS
E		Allen Wrench	Ø	1 PC
F		Allen Bolt	6 x 12 x 10mm	15 PCS
G		Allen Bolt	6 x 25 x 10mm	4 PCS
H		Allen Bolt	6 x 32 x 10mm	16 PCS
I		Allen Bolt	6 x 45 x 10mm	4 PCS
J		Wood Screw	4 x 12 x 8mm	2 PCS
K		Wood Screw	3.5 x 12 x 6mm	2 PCS
L		Flat Head Allen Bolt	6 x 32 x 10mm	13 PCS

 Phillips Screwdriver also needed for assembly (not provided).










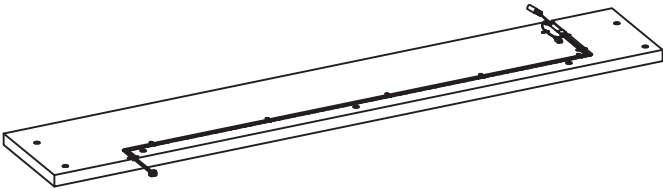


PARTS

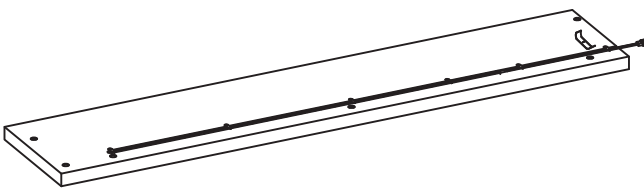 




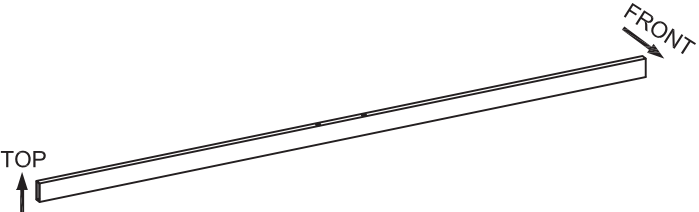
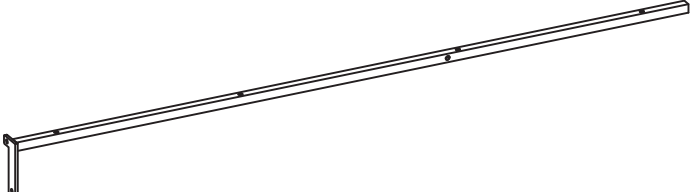
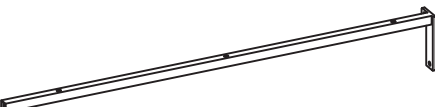
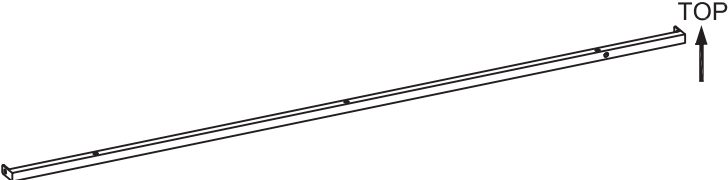
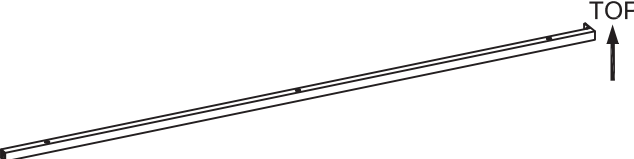



(1) Left Top Shelf (1 PC)

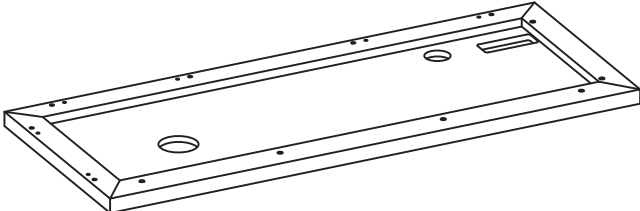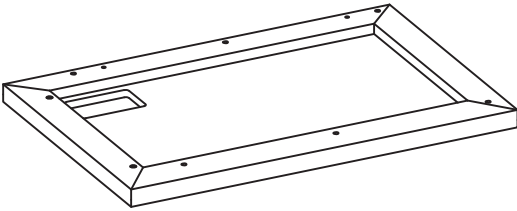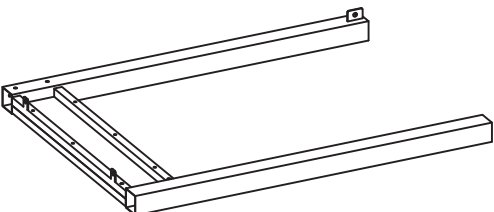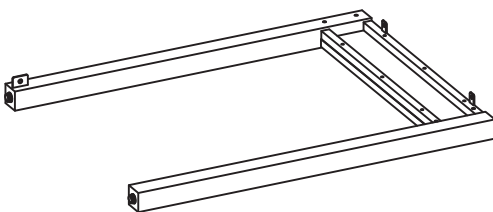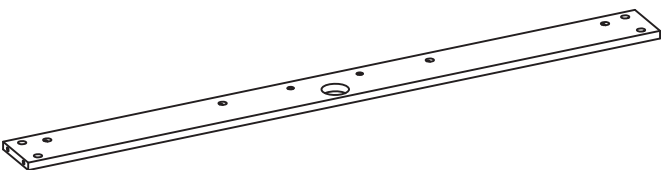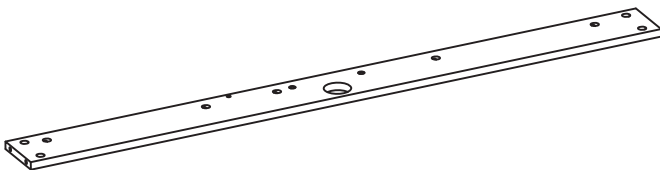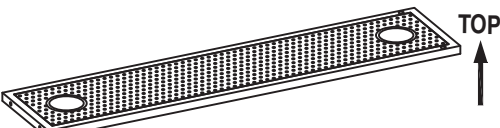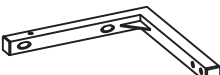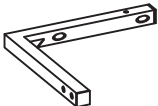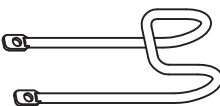


(2) Right Top Shelf (1 PC)

PART	
	
(3) Left Desktop (1 PC)	(4) Right Desktop (1 PC)
	
(5) Left Side Frame (1 PC)	(6) Right Side Frame (1 PC)
	
(7) Left Back Panel (1 PC)	(8) Right Back Panel (1 PC)
	
(9) Rear Frame (2 PCS)	(10) Left Upper Frame (1 PC)
	
(11) Right Upper Frame (1 PZ)	(12) Accessory Hook (1 PC)
	
(13) Cup Holder (1 PC)	(14) Wireless Charger (1 PC)

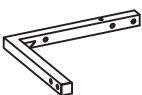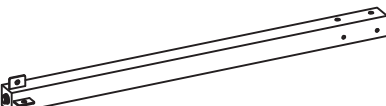
PARTS	
	
(15) Power Outlet (1 PC)	(16) Remote Control (1 PC)
	
(17) Middle Upper Frame (1 PC)	(18) Rear Leg (1 PC)
	
(19) LED Power Supply (1 PC)	(20) Rear Lower Crossbar (2 PCS)
	
(21) Left Front Crossbar (1 PC)	(22) Right Front Crossbar (1 PC)
	
(23) Left Upper Crossbar (1 PC)	(24) Right Upper Crossbar (1 PC)
	
(25) Storage Tray (1 PC)	

LDT5454GLD (SF)
LOADOUT L-SHAPED GAMING DESK
ASSEMBLY INSTRUCTIONS

 STEP 1

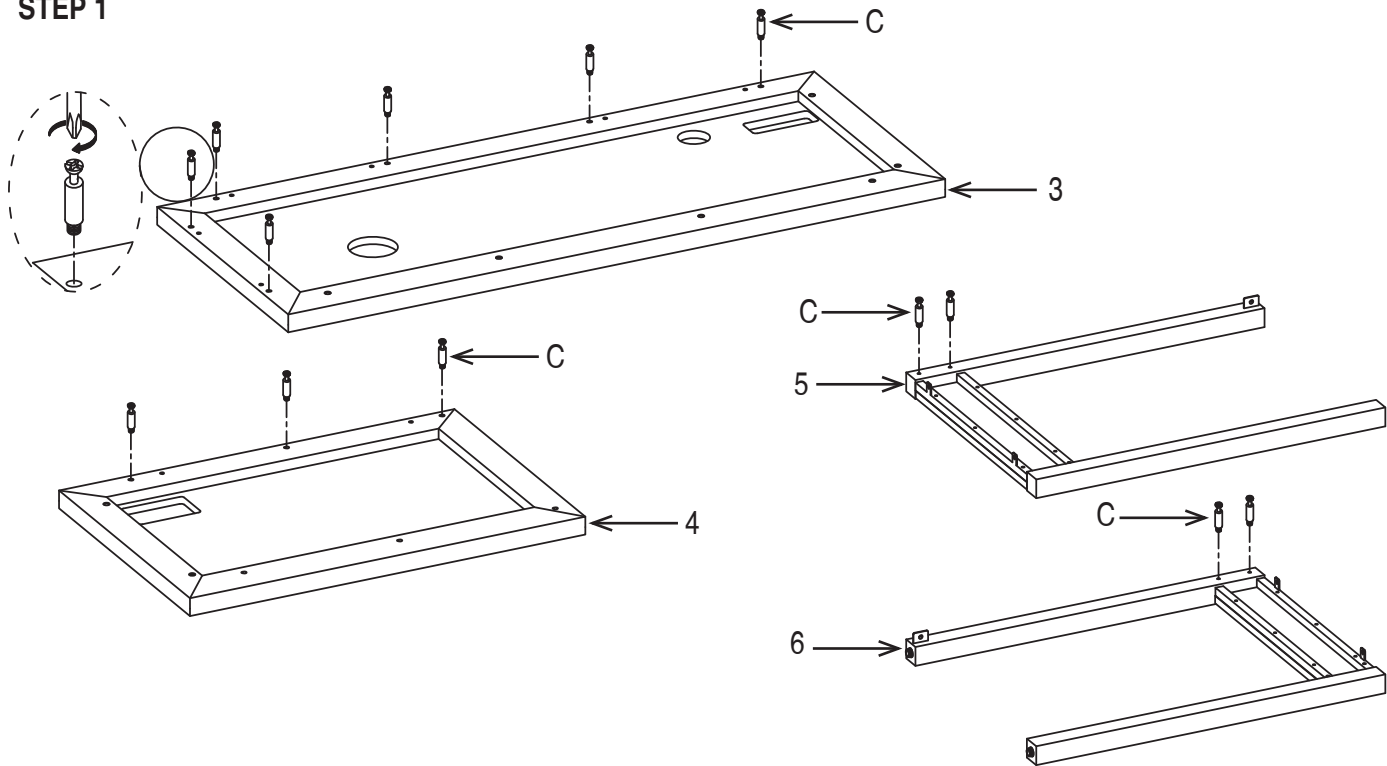

 STEP 2

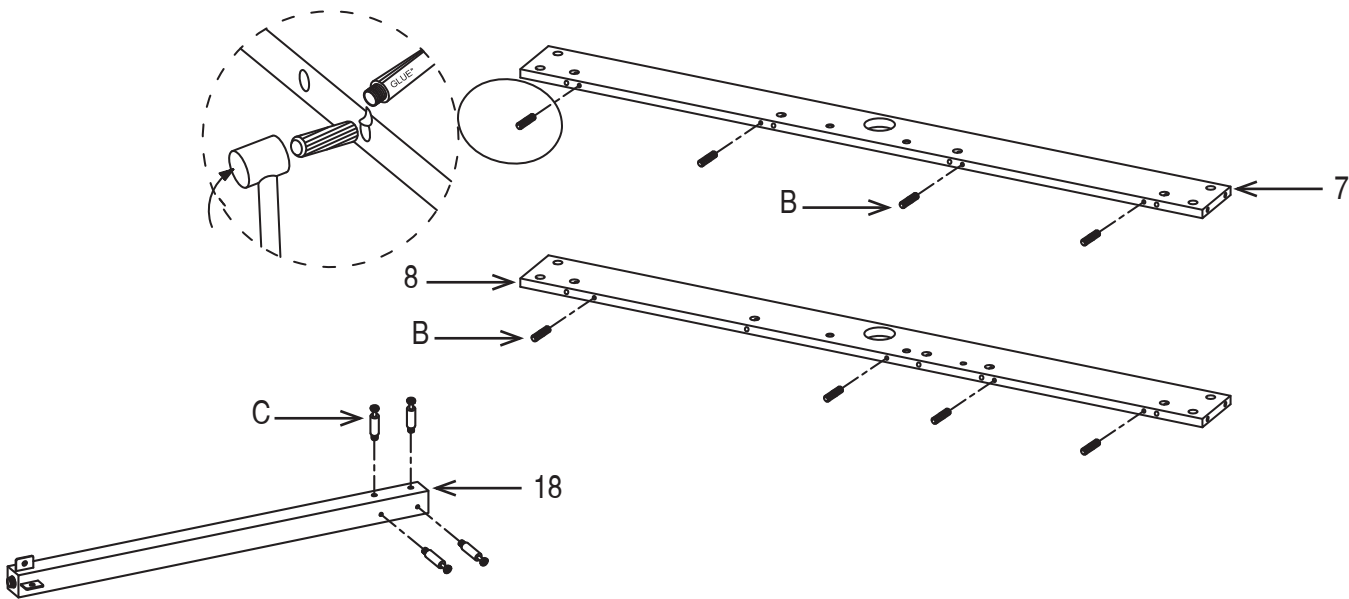


Remove all the parts from carton, separate them into part numbers indicated on the list and make sure part quantities are correct.

STEP 1 Screw in six Cam Screws (C) into Left Desktop (3), three Cam Screws (C) into Right Desktop (4) and two Cam Screws (C) into both Left Side Frame (5) and Right Side Frame (6). **FULLY TIGHTEN ALL CAM SCREWS (C).**


STEP 2 Insert four Wooden Dowels (B) into both Left Back Panel (7) and Right Back Panel (8). Use a small amount of Glue (A) for each dowel hole. Screw in four Cam Screws (C) into Rear Leg (18). **FULLY TIGHTEN ALL CAM SCREWS (C).**

LDT5454GLD (SF)
LOADOUT L-SHAPED GAMING DESK
ASSEMBLY INSTRUCTIONS

 STEP 3

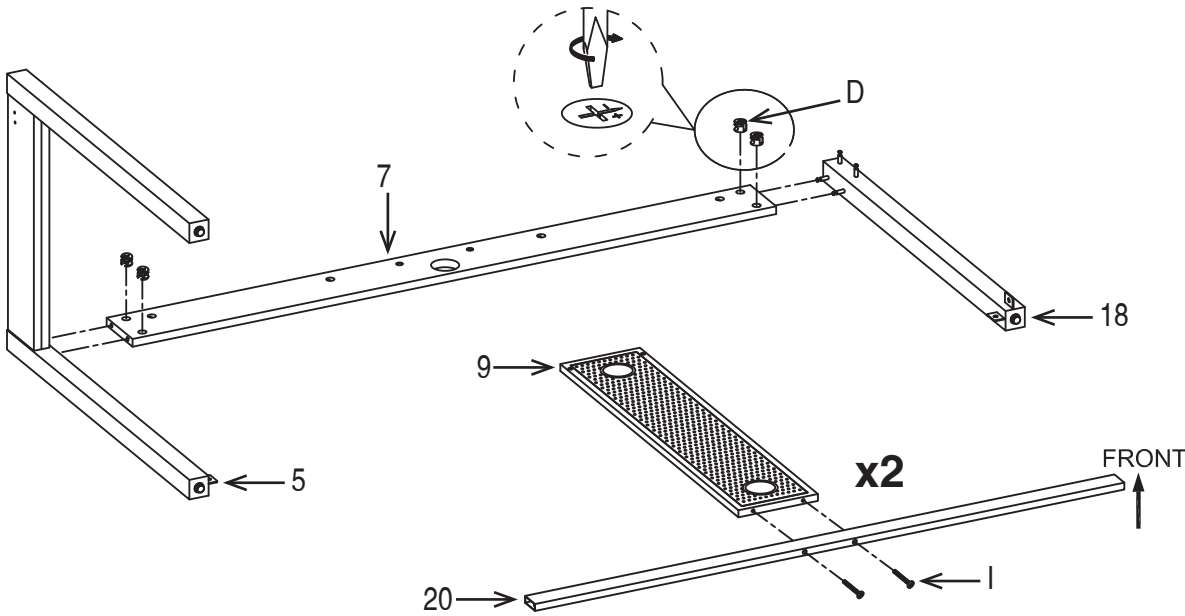

 STEP 4

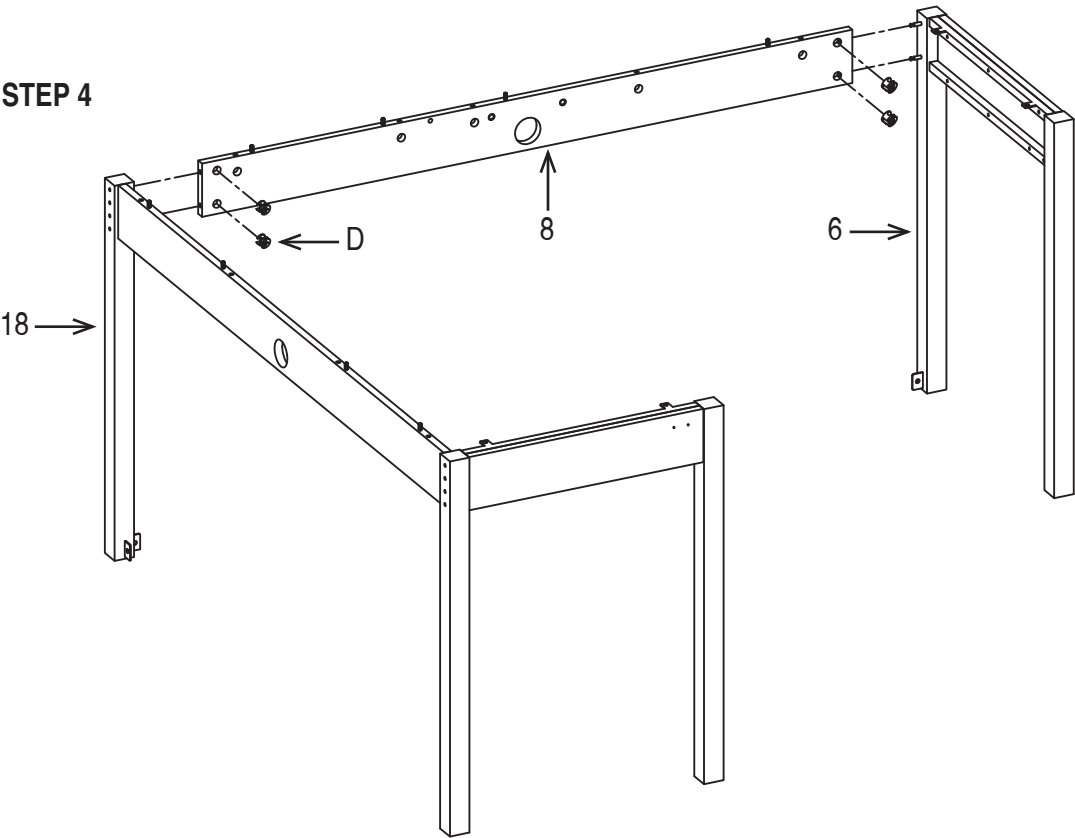


STEP 3 Attach Left Side Frame (5) and Rear Leg (18) to Left Back Panel (7) and secure using four Cam Nuts (D). **FULLY TIGHTEN CAM NUTS (D).** Attach Rear Lower Crossbar (20) to Rear Frame (9) using two Allen Bolts (I). **FULLY TIGHTEN ALLEN BOLTS (I).**


STEP 4 Attach Right Back Panel (8) between Right Side Frame (6) and Rear Leg (18) and secure using four Cam Nuts (D). **FULLY TIGHTEN CAM NUTS (D).**

LDT5454GLD (SF) LOADOUT L-SHAPED GAMING DESK ASSEMBLY INSTRUCTIONS

 STEP 5

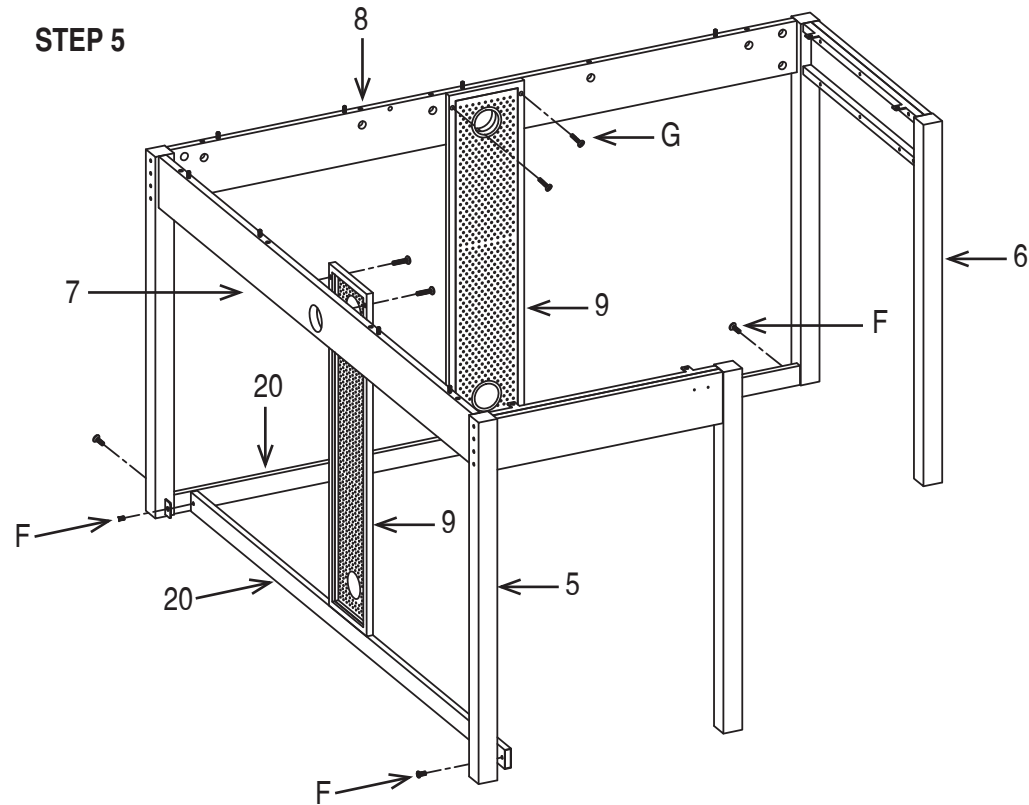

 
STEP 6

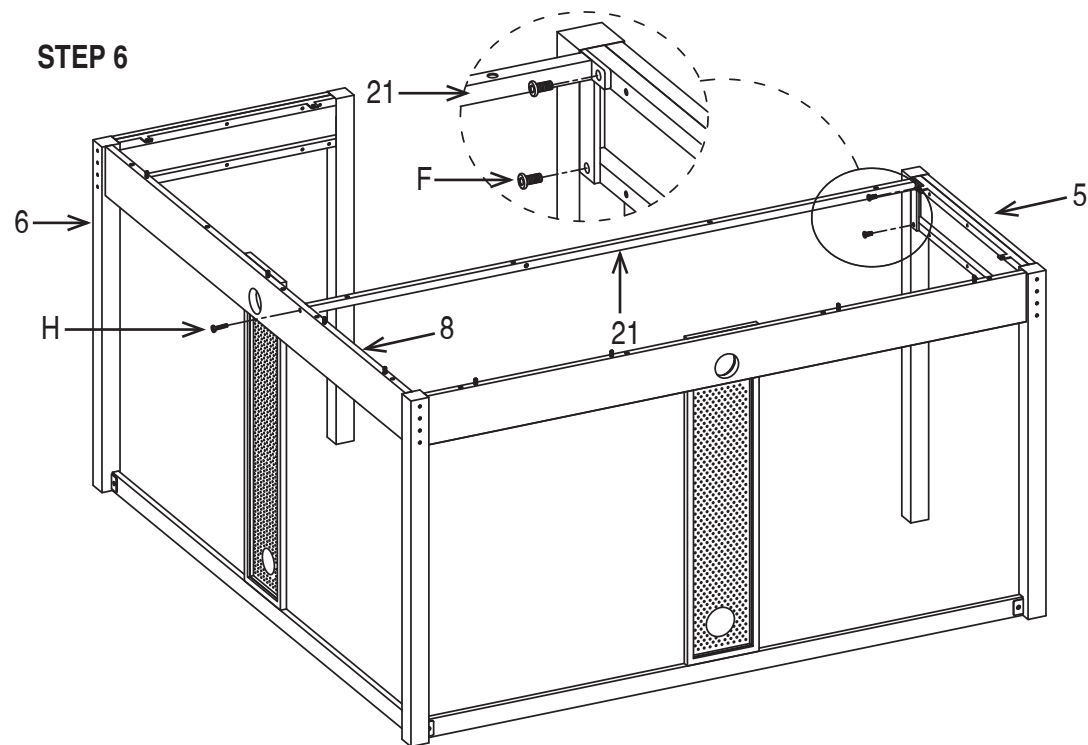


STEP 5 Secure top end of Rear Frames (9) to Left Back Panel (7) and Right Back Panel (8) using two Allen Bolts (G) for each Rear Frame (9). Secure Rear Lower Crossbars (20) using two Allen Bolts (F) for each Rear Lower Crossbar (20). **FULLY TIGHTEN ALL BOLTS (F & G).**
STEP 6 Secure Left Front Crossbar (21) between Left Side Frame (5) and Right Back Panel (8) using two Allen Bolts (F) and one Allen Bolt (H). **FULLY TIGHTEN ALL ALLEN BOLTS (F & H).**

LDT5454GLD (SF) LOADOUT L-SHAPED GAMING DESK ASSEMBLY INSTRUCTIONS

 STEP 7

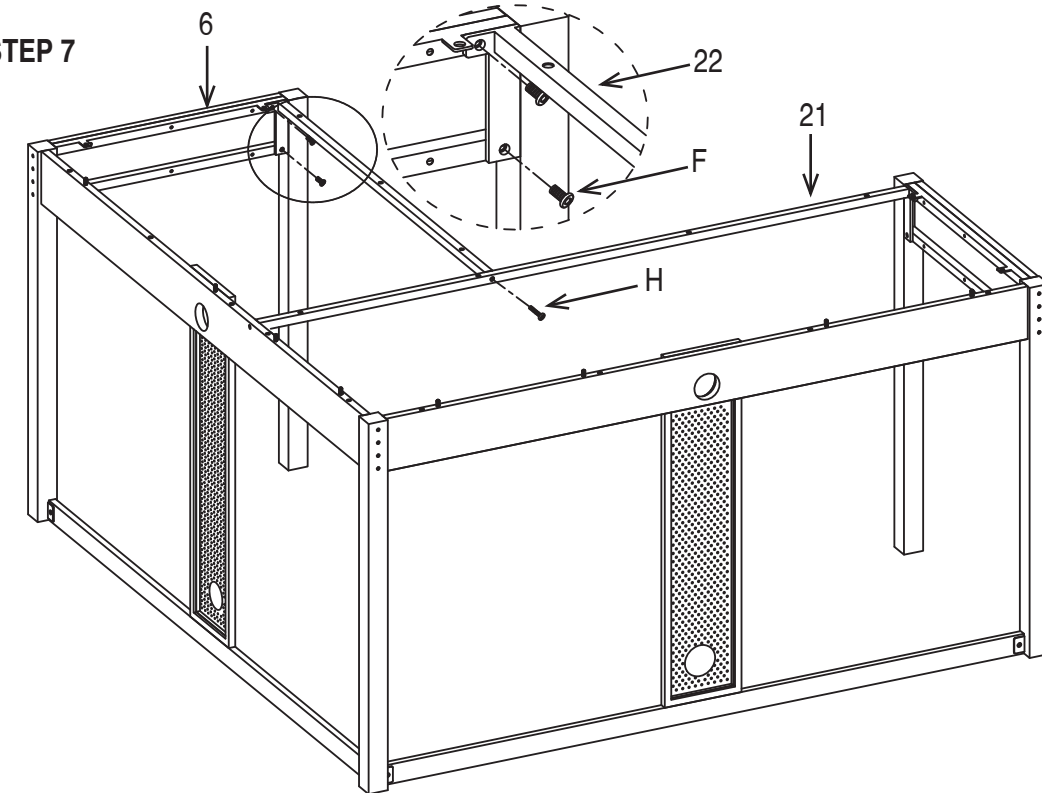

 
STEP 8

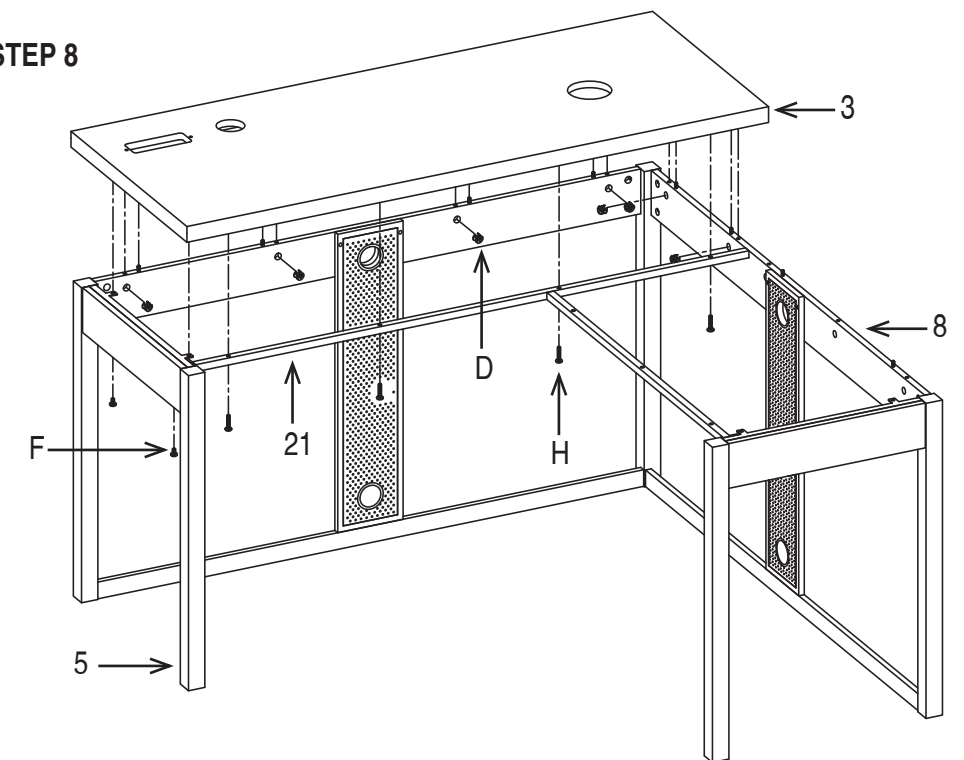


STEP 7 Secure Right Front Crossbar (22) between Right Side Frame (9) and Left Front Crossbar (21) using two Allen Bolts (F) and one Allen Bolt (H). **FULLY TIGHTEN ALL BOLTS (F & H).**
STEP 8 Attach Left Desktop (3) to assembly and secure to Right Back Panel (8) using six Cam Nuts (D). Secure to Left Side Frame (5) using two Allen Bolts (F) and secure to Left Front Crossbar (21) using four Allen Bolts (H). **FULLY TIGHTEN ALL CAM NUTS (D) AND ALL ALLEN BOLTS (F & H).**

LDT5454GLD (SF)
LOADOUT L-SHAPED GAMING DESK
ASSEMBLY INSTRUCTIONS

 STEP 9

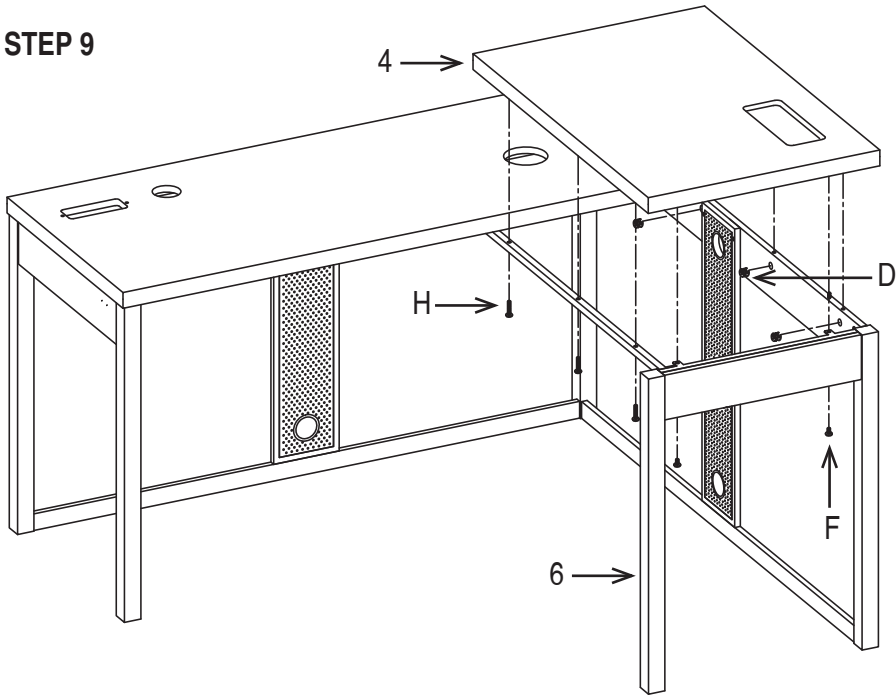

 
STEP 10

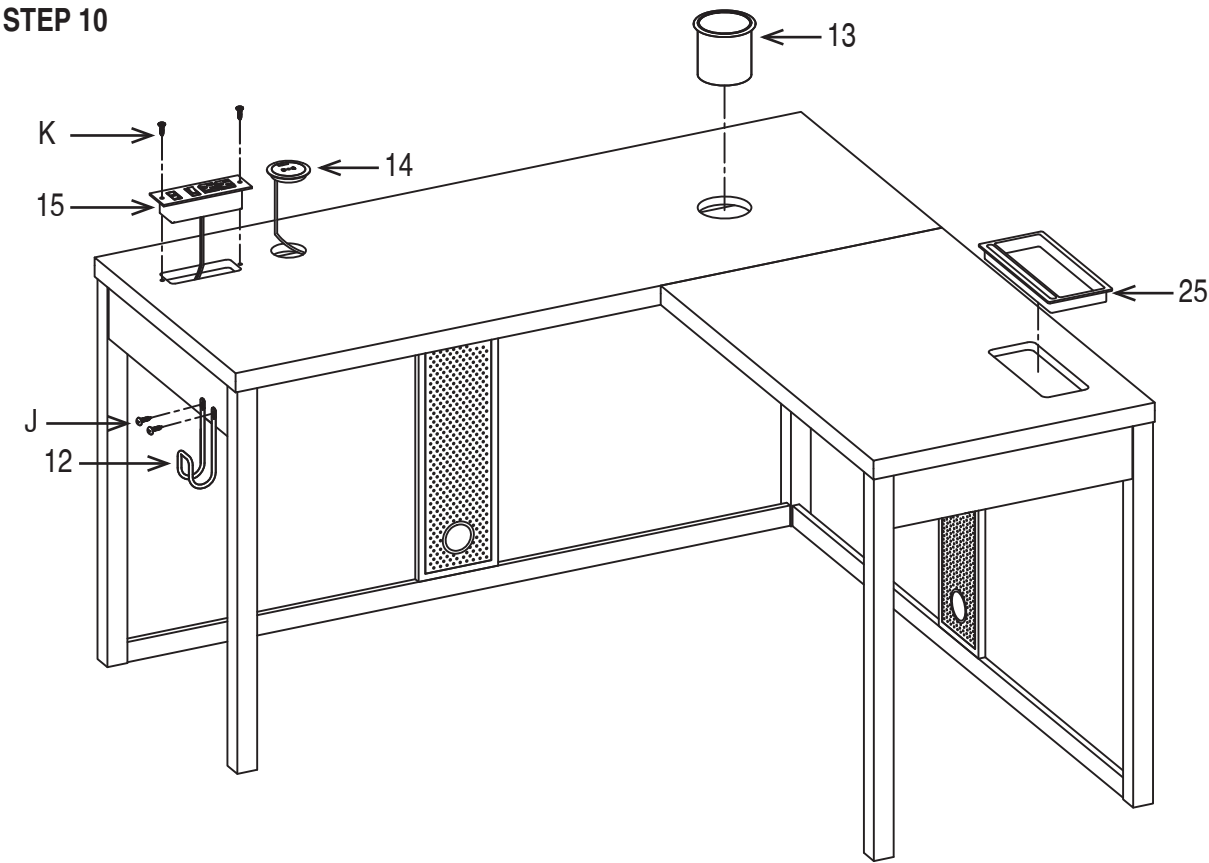


STEP 9 Attach Right Desktop (4) to assembly and secure to Left Back Panel (7) using three Cam Nuts (D). Secure to Right Side Frame (6) using two Allen Bolts (F) and secure to Right Front Crossbar (22) using three Allen Bolts (H). **FULLY TIGHTEN ALL CAM NUTS (H) AND ALL ALLEN BOLTS (F & H).**
STEP 10 Attach Cup Holder (13), Wireless Charger (14) and Storage Tray (25) to desktop. Secure Power Outlet (15) to desktop using two Wood Screws (K). Secure Accessory Hook (12) to side of desk using two Wood Screws (J). **FULLY TIGHTEN ALL WOOD SCREWS (J & K).**

LDT5454GLD (SF)
LOADOUT L-SHAPED GAMING DESK
ASSEMBLY INSTRUCTIONS

 STEP 11

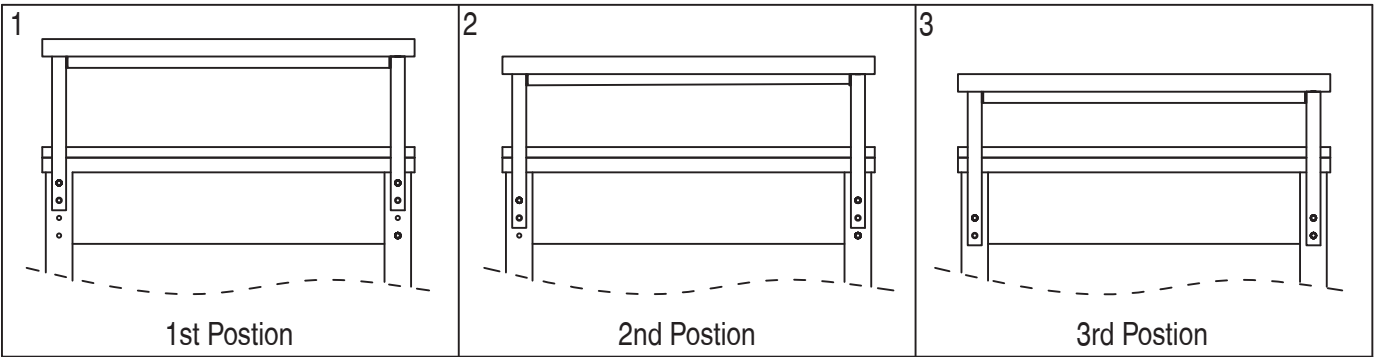

 
NOTE: There are *THREE* different positions for the Add-On Shelves as show in Figure 1.
Please decide your preferred height at this time

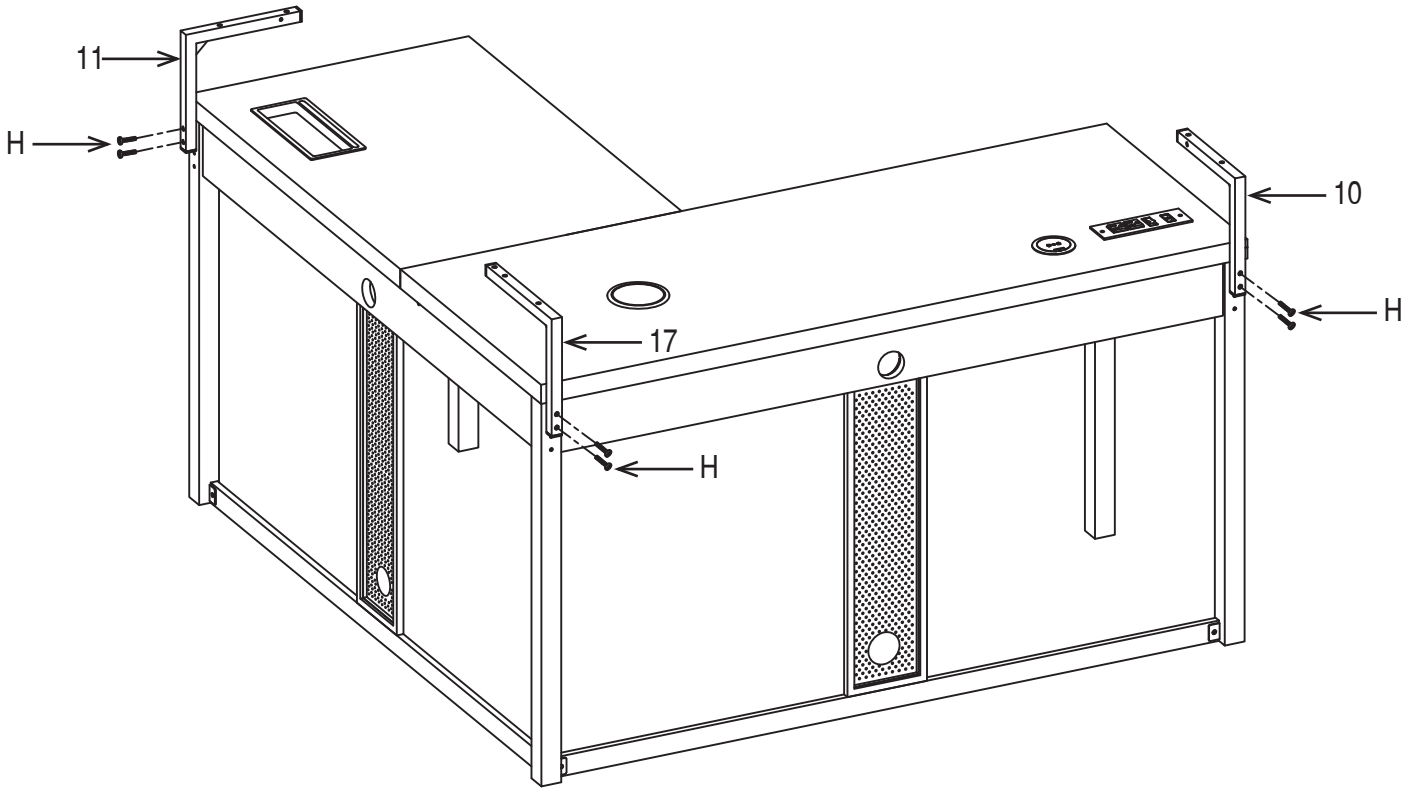


STEP 11 Secure Left Upper Frame (10), Right Upper Frame (11) and Middle Upper Frame (17) to rear of assembly using two Allen Bolts (H) for each frame. **FULLY TIGHTEN ALL ALLEN BOLTS (H).**

LDT5454GLD (SF) LOADOUT L-SHAPED GAMING DESKSK ASSEMBLY INSTRUCTIONS

 STEP 12

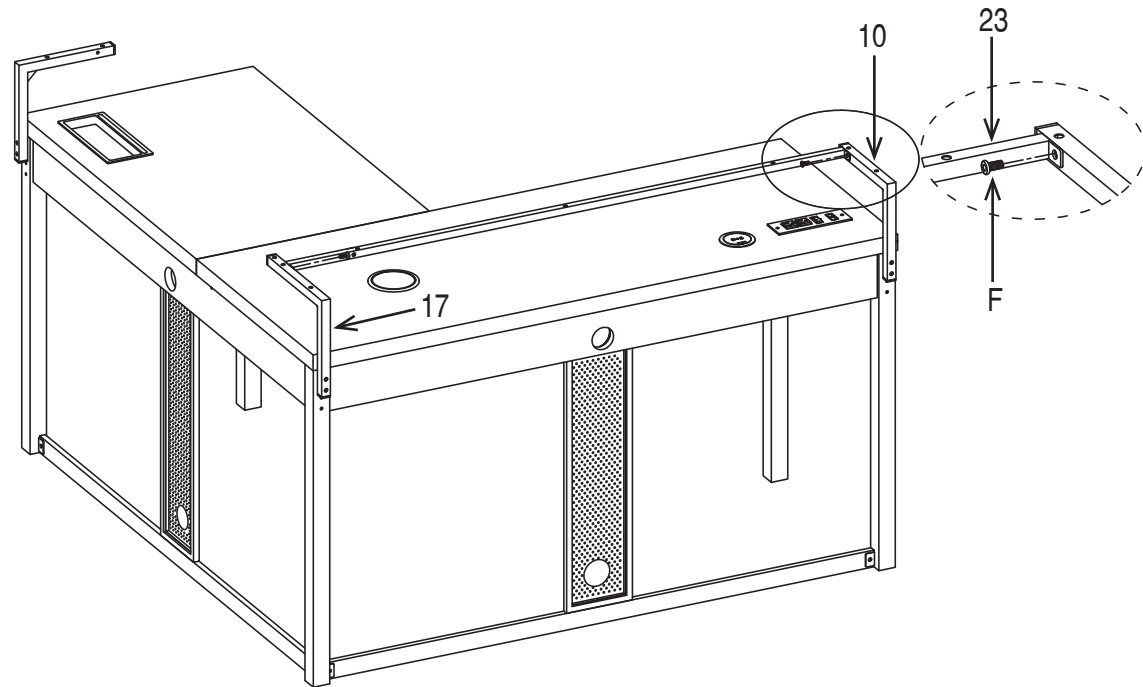

 STEP 13

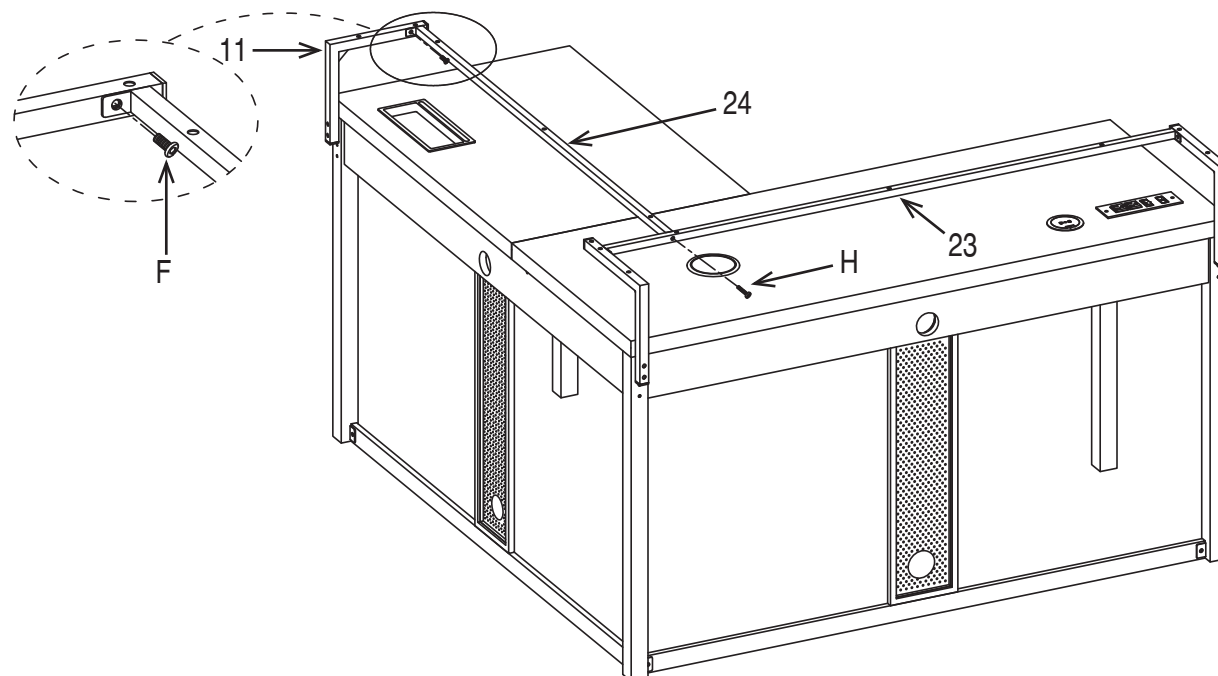


STEP 12 Secure Left Upper Crossbar (23) between Left Upper Frame (10) and Middle Upper Frame (17) using two Allen Bolts (F). **FULLY TIGHTEN ALLEN BOLTS (F).**


STEP 13 Secure Right Upper Crossbar (24) between Left Upper Crossbar (23) and Right Upper Frame (11) using one Allen Bolts (F) and one Allen Bolt (H). **FULLY TIGHTEN ALLEN BOLTS (F & H).**

LDT5454GLD (SF) LOADOUT L-SHAPED GAMING DESK ASSEMBLY INSTRUCTIONS

 STEP 14

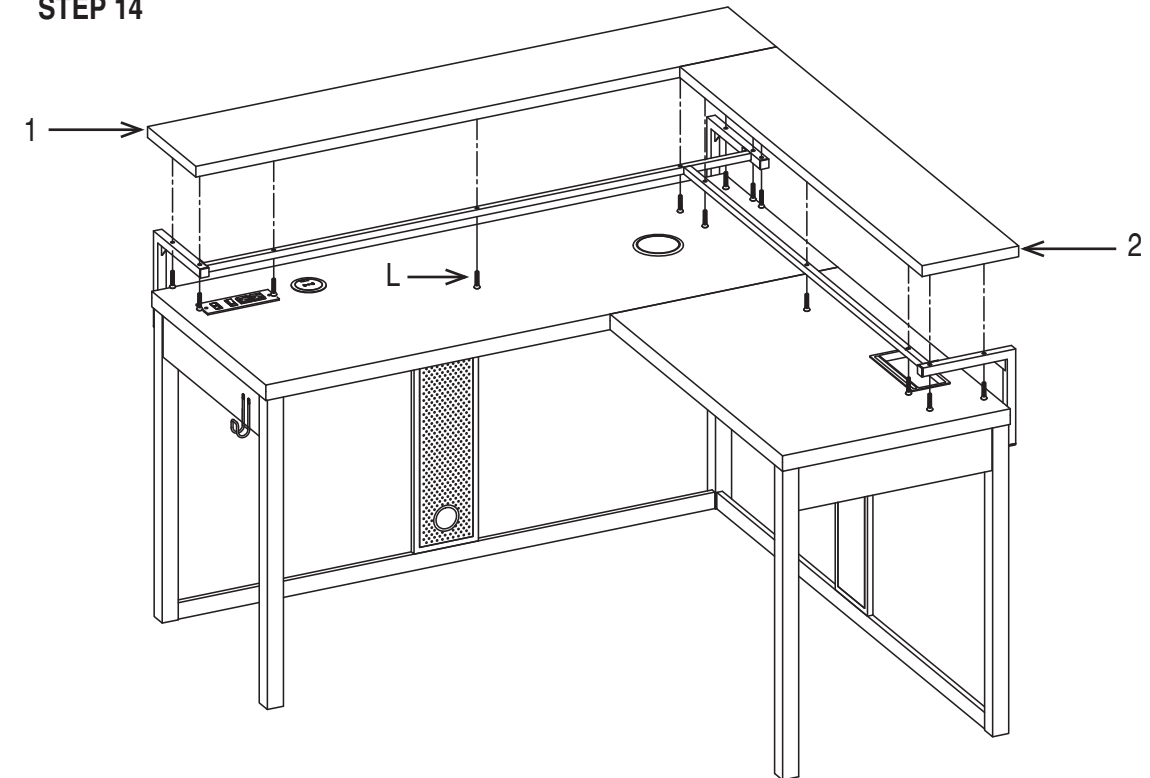

 STEP 15

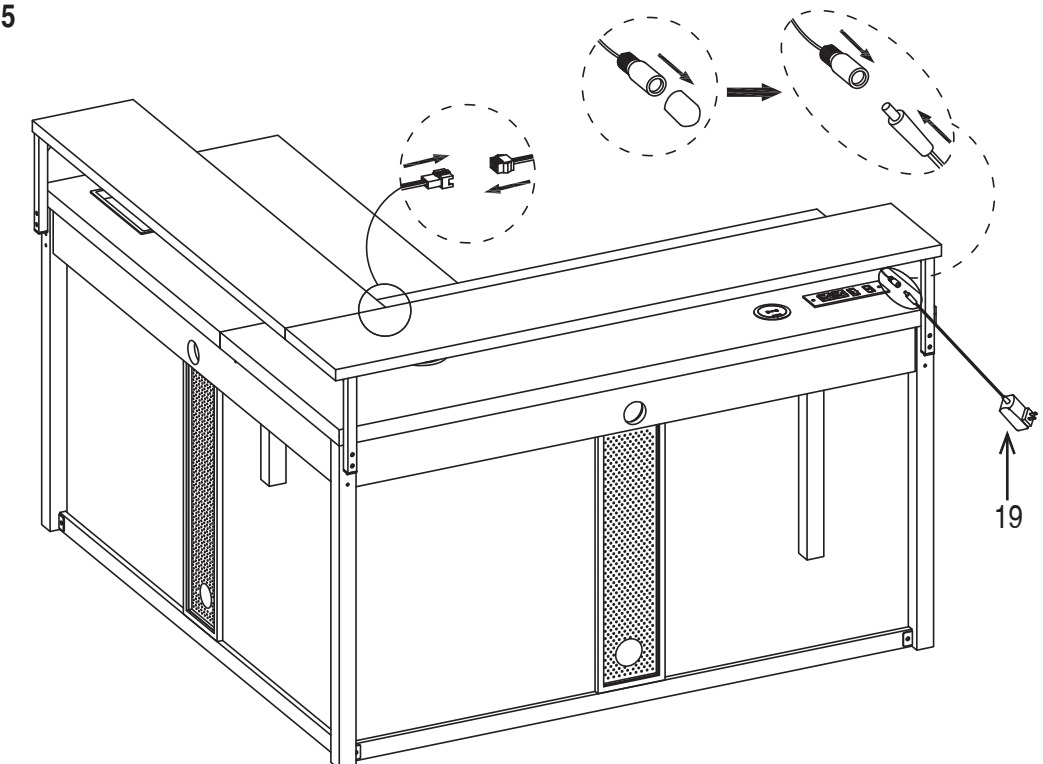


STEP 11 Secure Left Top Shelf (1) and Right Top Shelf (2) to assembly using thirteen Flat Allen Bolts (L). **FULLY TIGHTEN ALL FLAT ALLEN BOLTS (L).**

STEP 15 Connect cords of Left Top Shelf (1) and Right Top Shelf (2). Connect cord of Left Top Shelf (1) to LED Power Supply (19).

WIRELESS CHARGER - SAFETY WARNINGS & INSTRUCTIONS FOR USE

Your desk includes wireless charging capabilities using the wireless charger as shown. Please carefully follow the instructions and safety warnings below before using the wireless charger with your supported device.

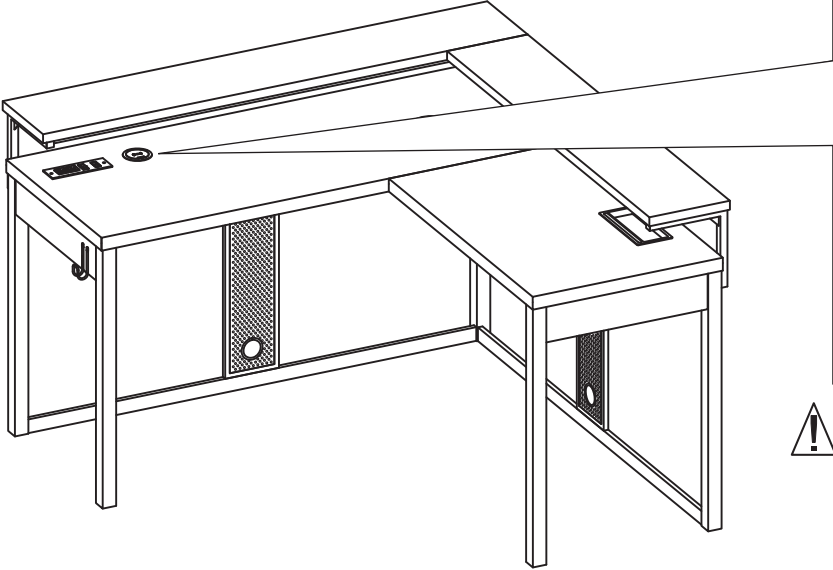


Voltage: 5V / Input: 5V/1.5A
Output (USB Port): 5V/1A
Output (Wireless): 5W

Wireless Charging Surface


USB Charge Port

NOTE: The wireless charger included supports most devices with wireless charging capabilities. Please consult your device's OEM instruction manual for proper wireless charging use, safety warnings, and limitations. Stop using the wireless charger IMMEDIATELY if your device becomes hot. Improper use of the wireless charger, using non-compatible devices, or tampering with the wireless charger in any way may cause device failure, damage, or injury.


SAFETY WARNINGS - PLEASE READ FIRST

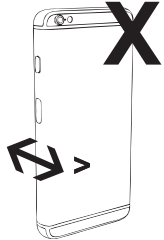


Devices with **cases thicker than 4mm** may not allow wireless charging. Remove the case from the device or use the USB port for wired charging instead.

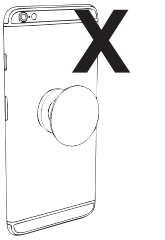

Devices with **rings, kickstands, or finger grip accessories** will not allow wireless charging. Remove the accessories or use the USB port for wired charging instead.

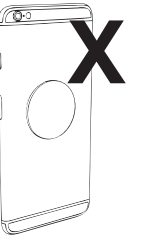


DO NOT attempt to wireless charge devices with metallic cases, metallic attachments, or magnetic attachments. Remove the device from such cases or use the USB port for wired charging instead.



DO NOT allow any metallic foreign objects or liquids to come in contact with the wireless charger. Only devices that support wireless charging should be put on the wireless charger surface.


To Power ON the Wireless Charger

Plug the USB cable from the bottom of the wireless charger into any powered USB 2.0 port, or any 5V power adapter that accepts a USB plug.

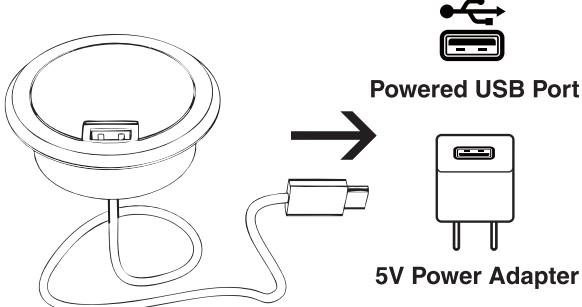

Powered USB Port


5V Power Adapter

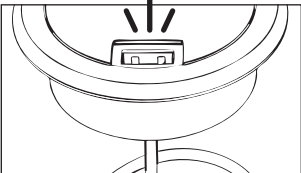

USB Port on wireless charger will light up RED once powered on. The charger is now ready to use.


Using the Wireless Charger

 To charge your device using wireless charging, place the device centered on the wireless charger face and wait for the device to indicate it has begun charging.

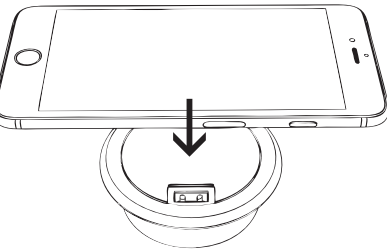

Using the USB Charge Port

 To charge your device using USB charging port, plug in your device's USB charging cord into the USB port as shown and wait for the device to indicate it has begun charging.

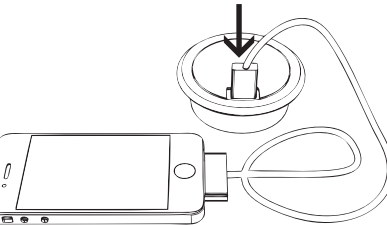

LED LIGHT REMOTE CONTROL - INSTRUCTIONS FOR USE

Your desk includes an integrated LED light strip with customizable RGB LED lights. The lights are controlled using the included LED Remote Control. Please refer to the Button Feature Diagram below for an outline of the remote's functions. A Troubleshooting FAQ is also included below for frequently asked questions and general usage troubleshooting. This remote uses a single CR2025 3V Lithium coin battery, located in the pull out battery tray tab on the back-bottom edge of the remote.

LED Light Remote Control: Button Feature Diagram

Preset FIXED Red, Green, Blue (RGB) and White Color Section:

To select a preset color, simply press the desired color button within each of the RGB color mixtures to set the LED light color. The LED lights will change to a FIXED (Solid) color based on the selection.

Programmable Do-it-Yourself (DIY) Section:

To save your own custom FIXED LED light color, follow the steps below:

- Press any DIY # Button ONCE. The LED lights should change to solid white color.
- Use any of the RGB DOWN arrows to REMOVE that respective color from the color mixture. To ADD a color back to the color mixture, use the respective RGB UP arrows.
- When you have reached the desired custom LED color, press the SAME DIY # button that you selected in Step 1. The custom LED color is now saved, and can be recalled by pressing the DIY # button.

Pause/Play Multi-Color Effects

LED Power On/Off

NOTE: The LED lights should automatically power ON when the LED Power Supply is connected to a power outlet.

Speed Section: Increase/Decrease transition speed of effects from the Multi-Color RGB Effects Section.

Multi-Color RGB Effects Section (Press to Select):

- **AUTO:** Automatically cycle through all RGB color ranges, while alternating between the "FLASH" and "FADE7" effects.
- **FLASH:** Cycle through all RGB color ranges, with an abrupt flashing transition effect between colors.
- **FADE7:** Cycle through all RGB color ranges, with a smooth fading transition effect between colors. See "Speed Section" for additional customization.
- **FADE3:** Cycle through only Red, Green, Blue colors, with a smooth fading transition between colors. See "Speed Section" for additional customization.
- **JUMP7:** Cycle through all RGB color ranges, with an abrupt transition from one color to the next. See "Speed Section" for additional customization.
- **JUMP3:** Cycle through only, Red, Green, Blue colors, with an abrupt transition between colors. See "Speed Section" for additional customization.

LED Brightness INCREASE/DESCREASE

REMOVE CLEAR TAB

NOTE: When using the remote for the first time, you will need to pull the clear plastic tab out from the battery tray to activate it from storage mode. The remote will now function as shown.

TROUBLESHOOTING FAQ

Problem:	Solution:	Also Check:	Also Check:
Q: LED Lights won't turn on?	Press the Power ON/OFF button	Double check that the LED Power Supply is connected to the LED strip on the desk and the power supply is plugged into a power outlet.	Remove the clear tab from the battery tray on first use. After prolonged usage, the battery (CR2025-3V Lithiumm) may need to be replaced.
Q: DIY lights will not program?	When first programming the DIY section, the lights will start off white. Hold DOWN any of the RGB colored arrows firmly until you see the light begin to shift in color. Once a color range has been removed, it is easier to begin customizing the DIY color. Make sure to press the SAME DIY # button you first pressed during the programming process to save the custom color		