

Programming UltraLITE – Printable Instructions

Clearing the “Main” Headset

When programming a *repaired or replaced* unit, the “Main” headset needs to be **Cleared** before a “Remote” UltraLite or UltraPAK can be paired. Follow the steps below to clear the “Main”. All Remote headsets should be “OFF” before starting this process.

1. Install battery in “Main” headset and turn power switch “ON”.
2. Press and **hold** programming button (Blue LED) on “Main” headset for five seconds. The LED will begin flashing blue/red.
3. Press the programming button (Blue LED) 7 times. The LED will begin to blink blue. The “Main” headset is now cleared and is ready to be paired to a Remote headset or UltraPak belt pack.

-Start at step 2 of “Ultralite / UltraPak Programming Instructions” below

****Watch program video [HERE](#).**

UltraLite / UltraPak HD Programming Instructions

1. Install battery in “Main” headset and turn power switch “ON”. The blue LED will flash blue.
2. Install battery in “Remote” UltraLite / UltraPak.
3. Press and hold programming button (Blue LED) on “Main” headset for five seconds. LED will begin flashing blue/red. This indicates that the “Main” is ready to link to a “Remote” UltraLite / UltraPak.
4. On the “Remote” UltraLite / UltraPak, press the volume DOWN arrow 3 times and then press and HOLD the volume UP arrow. Once the LED on the remote flashes red/blue, release the volume UP arrow.
5. The pairing process can take from 5-30 seconds. When the “Main” unit links to the “Remote” UltraLite / UltraPak the LED will flash twice quickly, then turn solid blue. The “Main” headset will go from a flashing LED to a solid LED. When both LED’s are solid blue, the units are linked together.
6. To program additional UltraLite / UltraPaks, press and hold the programming button on the “Main” for five seconds until the blue LED begins flashing blue/red then repeat steps 4 and 5.

*Each “Main” headset can have a maximum of 4 remote UltraLite /UltraPak paired.

****Watch program video [HERE](#).**