



Electric Razor


MODEL: RS1901

Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep in a safe place for future reference.

CAUTION

1. Use this appliance only for its intended use as described in this manual.
2. Don't use this product if it isn't working correctly, if it has been dropped or damaged, or dropped into water.

DESCRIPTION

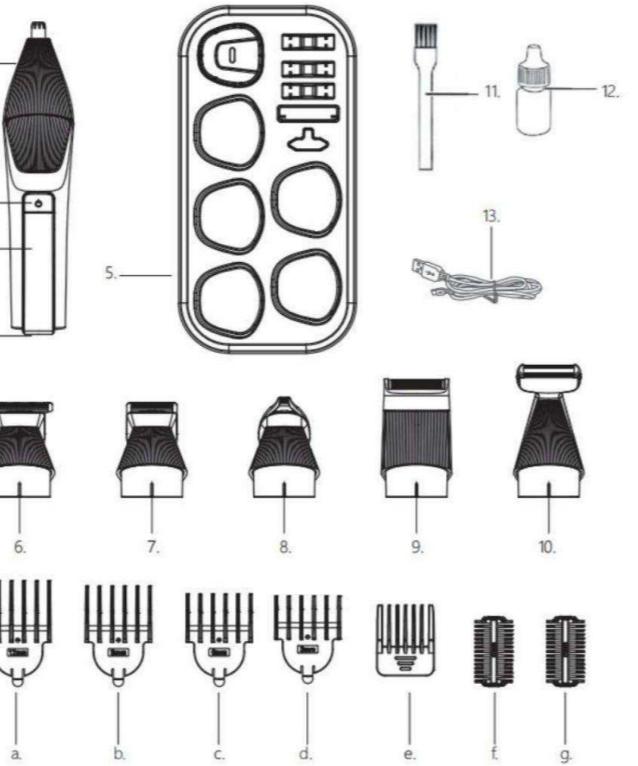

1. Nose/ear trimmer
2. ON/OFF switch
3. Charge/working/status display
4. USB Charging Port
5. Stand Base
6. Full size trimmer
7. Precision trimmer
8. Design trimmer

9. Micro shaver
10. Body trimmer
11. Cleaning brush
12. Lubricating oil
13. USB cable
14. 5 guide combs a-d, for full size trimmer
15. 1 guide comb e for Precision trimmer
16. 2 guide combs f,g for Body trimmer

SPECIFICATION

Products: intelligent body care kit
Model: RS1901
Charging time: 2 hours
Use time: 80 minutes
Input: DC 5V1A

GETTING STARTED

1. Charging your personal groomer. Before using your personal groomer for the first time, charge for 2 hours.
2. Ensure the product is switched off.
3. Connect the charging adaptor to the product and then to the USB port. The charging indicator will light up.

HOW TO MATCH THE APPLIANCE

1. Ways of matching appliance

- 1.1 When changing the parts, first use the finger put the part in the right position. Put the heads parts directly to the body align with the lock and press the parts. (fig.2)
- 1.2 Remove the heads parts as shown in the picture. (fig.1)

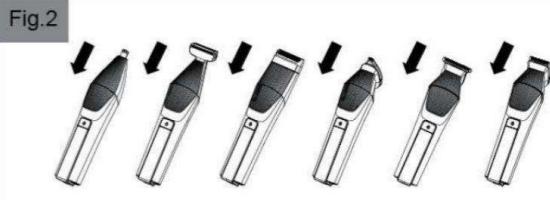
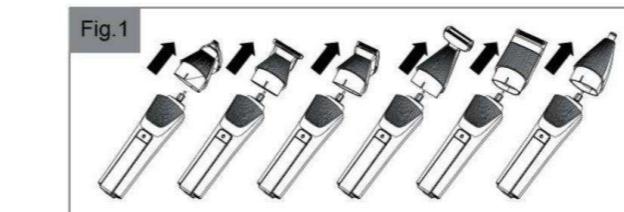


Fig.2

1.3 Match the full size trimmer positioning comb from front to back balanceably to lock with heads parts. (fig.3)
There are four positioning combs with four levels as below.

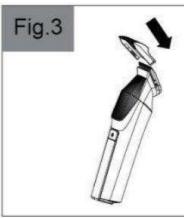


Fig.3

2. Ways of matching precision trimmer comb
3. Ways of matching full size trimmer comb

No.	Level	length(mm)
1	1	1
2	2	2
3	3	3
4	4	4

No.	Level	length(mm)
1	1	3
2	2	6
3	3	9
4	4	12

3. Choose different 4 levels positions for precision trimmer positioning comb from up and down. (fig.4-5)

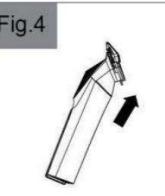


Fig.4



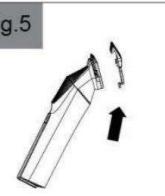


Fig.5



WAYS OF CLEANING THE APPLIANCE

When cleaning the appliance, just separate the appliance, as the pic shows. Then use the cleaning brush, clear the dust by cleaning the inside parts.(fig.6-7)

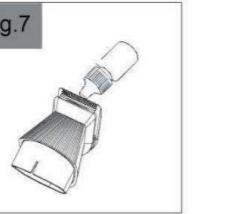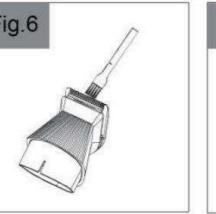

WAYS OF CHARGING THE APPLIANCE

- 1.Usb cable charge and very convenient.(fig.8)
- 2.Insert the appliance plug directly into the body.(fig.9)

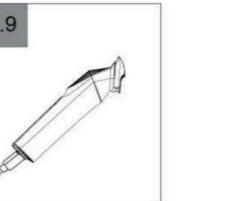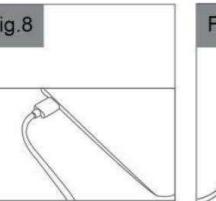

HOW TO USE

1. To thin and taper the beard/moustache.
 - 1.1 Attach a guide comb to full size trimmer, if you are trimmer for the first time start with the maximum trimming length setting.
 - 1.2 Turn the unit on.
 - 1.3 Place the flat top of the trimmer comb against the skin.
 - 1.4 Slowly slide the personal groomer through the hair, Repeat from different directions as necessary.
 - 1.5 If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.
2. To define the beard/moustache line.
 - 2.1 Hold the personal groomer with precision trimmer blade facing you.
 - 2.2 Start with edge of beard/moustache line and gently lower trimmer blade desired locations in facial area and away from beard in neck area.

3. Trimming edge of sideburns.

- 3.1 Hold the personal groomer with precision trimmer blade facing you.
- 3.2 Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
4. Using the micro shaver trimmer
- 4.1 Hold the groomer so the micro shaver gently touches your face in a 45 degree angle. Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

Note: the micro shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of our electric shavers.

5. To remove hair from nose and ear

- 5.1 Attach nose trimmer attachment.
- 5.2 Insert the personal groomer gently into nostril or ear.
- 5.3 Gently move the groomer in and out of the nostril or ear and at the same time rotate.
- 5.4 Avoid inserting the cutting unit more than 6mm into your nostril or ear.
6. Attaching and removing the trimmer comb attachment.

Note: always ensure the personal groomer is switched off before changing any attachments.

- 6.1 Tips for best results
- 6.2 Beard, moustache and sideburn hairs should be dry.
- 6.3 Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows.
- 6.4 Remove trimmer comb attachment if you are defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.

CARE FOR YOUR PERSONAL GROOMER

Cleaning and maintaining your personal groomer

- 1.1 After each use
- 1.2 Turn the personal groomer off.
- 1.3 Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.
2. Cleaning cautions
- 2.1 Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.

2.2 Cleaning should only be done with a soft brush, such as the brush supplied with the product.

- 2.3 Only use the light-grade oil supplied or sewing machine oil on the blades.
- 2.4 Do not use harsh or corrosive cleaners on the units or their blades.
- 2.5 Do not submerge in water as damage will occur.

3. Storage

- 3.1 Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140 f (60°C).
- 3.2 Do not wrap the cord of the charging adaptor around the appliance.

4. IMPORTANT SAFETY INSTRUCTIONS

- 4.1 Warning-to reduce the risk of burns, electrocution, fire, or injury to persons:
- 4.2 An appliance never be left unattended when plugged into a power outlet.
- 4.3 Keep the power plug and cord away from heated surfaces.
- 4.4 Make sure the power plug and cord do not get wet.
- 4.5 Do not plug or unplug the product with wet hands.
- 4.6 Do not use the product with a damaged cord. A replacement can be obtained via our international service centres.
- 4.7 Charge, use and store the product at a temperature between 15°C and 35°C.
- 4.8 Always unplug from the mains when cleaning. Only use the parts supplied with the appliance.
- 4.9 Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.