

QUICK SETUP GUIDE

Mini Heater

NS-HTCBK7

Congratulations on your purchase of this high-quality Insignia product. Your NS-HTCBK7 represents the state of the art in mini ceramic heaters and is designed for reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read all instructions before using this heater.
- 2 This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3 BECAUSE OF THE HOT SURFACE, DO NOT LET CHILDREN NEAR THIS HEATER WHEN IT IS OPERATING.
- 4 Always unplug heater when not in use.
- 5 Do not operate any heater with a damaged cord or plug, after the heater malfunctions, or has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6 Do not use outdoors.
- 7 This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8 Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

- 9 To disconnect heater, turn controls to off, then remove plug from outlet.
- 10 Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11 To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12 A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 13 Use this heater only as described in this guide. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14 Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or re-locatable power tap (outlet/power strip).
- 15 Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.16 AWG minimum size and rated not less than 1500 watts.

 
SAVE THESE INSTRUCTIONS

PACKAGE CONTENTS


- Mini heater
- *Quick Start Guide*

FEATURES

- Adjusts automatically, based on ambient temperature
- Built-in fan circulates the heat
- Built-in timer sets the amount of time the heater runs before it turns off.
- Adjustable temperature control
- Quiet operation
- Light weight, convenient to carry and move
- Double over-heating protection
- Compact size, suitable for home and office
- Automatically turns off if it tips over

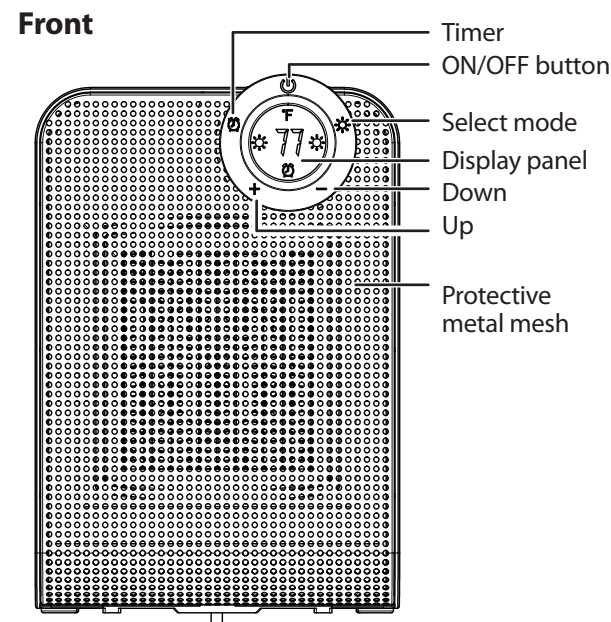


Back

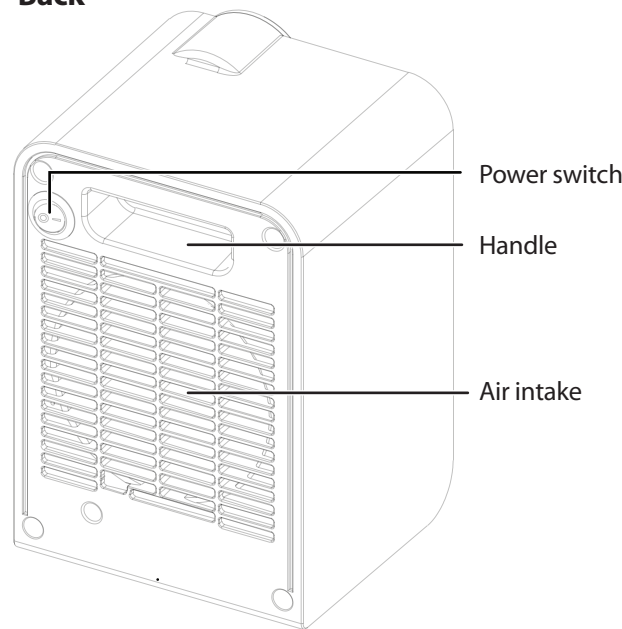 

PREPARING YOUR HEATER

 - 1 Remove your heater from the package and place it on a level surface, such as a desktop or the floor.
- 2 Plug the power cord into a standard 120V wall outlet.
- 3 On the back of your heater, press in the  side of the power switch. Your heater goes into standby mode and °F appears on the display panel.

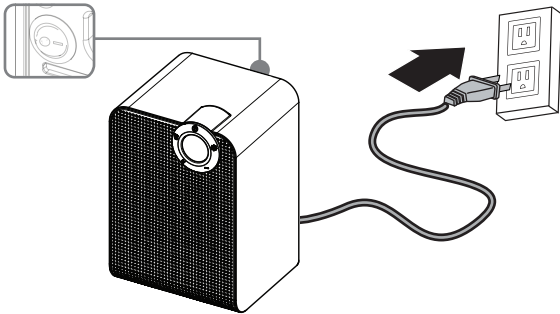


TURNING YOUR HEATER ON OR OFF

- 1 Press  to turn on the front of your heater. The heater and fan turn on.
 - 2 Press  again to turn off (standby mode) your heater.
- NOTE:** To test the tip over protection, pick up your heater while it's operating. Your heater and the LED should both turn off. Put your heater down and the LED should turn on. If you want to turn on the heater, press .

SETTING THE TEMPERATURE

You can adjust the temperature between 50° ~ 95°F (10° ~ 35°C).

 - 1 Press the  to select fan, low, or high mode.

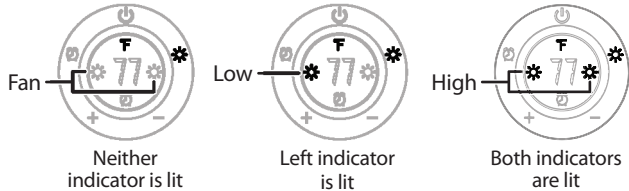

- 2 Press + or – to increase or decrease the temperature. The temperature setting flashes for 5 seconds, then lights solid. Your setting is saved.

 


NOTE: Your heater may switch between **Fan**, **Low**, and **High** modes to maintain the temperature you selected. For example, if you set the temperature 3° above the room temperature, you heater works in **Low** mode. If you set the temperature 6° or more above the room temperature, your heater works in **High** mode. Otherwise, you heater works in **Fan** mode.


SETTING THE TIMER

You can set the timer to turn off your heater after a specified time (between 1 ~ 8 hours).

- 1 Press . The clock icon turns on.

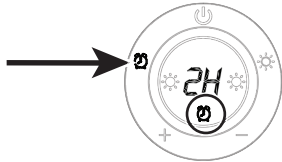

 - 2 Press  to select from 1 to 8 hours. The timer setting flashes for 5 seconds, then lights solid. Your setting is saved.

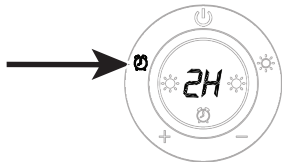

- 3 To turn off the timer before it expires, press  until **0H** is displayed.

CLEANING YOUR HEATER

Important: Your heater has no user-serviceable parts. Do not disassemble. This will void your warranty. Unplug the heater before you attempt to clean it.

- Clean your heater with a soft cloth, moistened with water. Do not use chemical cleaners. Allow to dry thoroughly before using.
- Vacuum the air intake grill with your vacuum's brush attachment every few weeks, for optimal performance.

TROUBLESHOOTING

- If the heater isn't working, make sure that it's plugged in and that the power outlet is providing power. Check your household circuit breaker/ground fault interrupter, and reset if necessary.
- Make sure that the power cord is in good condition. If the cord is cut or frayed, do not use the heater until you have it repaired.
- If the heater runs repeatedly for several minutes and then shuts off, clean your heater.

SPECIFICATIONS

Description	Mini heater
Model No.	NS-HTCBK7
Voltage/Frequency	120V AC
Power	1500W
Frequency	60Hz
Output Power	1500W
Product size	9.6 x 6.5 x 6.2 in. (24.5 x 16.5 x 15.7 cm)
Product weight	3.6 lbs (1.6 kg)

ONE-YEAR LIMITED WARRANTY

For complete warranty, visit www.insigniaproducts.com.

CONTACT INSIGNIA

For customer service, call 1-877-467-4289
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved.
Made in China