 


1. Supervise el uso de este aparato cuidadosamente cuando esté usado por, sobre o cerca de niños o personas con alguna discapacidad.
 2. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante.
 3. No utilice este aparato si no funciona correctamente, si estuviese dañado o después de que se hubiese caído o caído al agua. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.
 4. No utilice este aparato con gomas o cuchillas usadas sin demora. Esto prolongará la vida de su aparato.
 2. Cierre el compartimiento de la pila.
 3. Su aparato está listo.

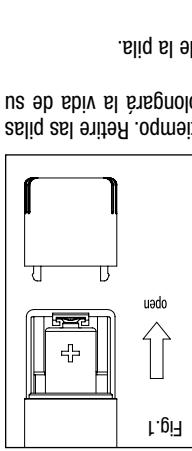

1. Para instalar la pila, abra el compartimiento de la pila ubicado en la parte trasera del aparato. Coloque la pila en el compartimiento de la pila. Nunca tire las pilas al fuego, excepto mediante incineración controlada. Esto podría causar una explosión. Nunca intente cargar una pila no recargable. Esto podría presentar un riesgo de pérdida de electrolito, incendio o explosión.
CÓMO CAMBIAR EL CABEZAL
 Sostenga el aparato firmemente y gire el cabezal (Fig. 2). Retire el cabezal. Instale el cabezal deseadado, haciendo coincidir la marca "I" con "II" en el cuerpo del aparato (Fig. 2). Retire la marca "I" con el deseadado, haciendo coincidir la marca "I" con "II" en el cuerpo del aparato. Esto prolongará la vida de su aparato.
 3. No utilice este aparato si no funciona correctamente, si estuviese dañado o después de que se hubiese caído o caído al agua. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.
 4. No utilice este aparato con gomas o cuchillas usadas sin demora. Esto prolongará la vida de su aparato.
 2. Cierre el compartimiento de la pila.
 3. Su aparato está listo.

ADVERTENCIA—

DEL AGUA MANTENGALO ALEJADO SOLAMENTE PARA USO DOMÉSTICO DE USARLO INSTRUCCIONES ANTES LEA TODAS LAS IMPORTANTES MEDIDAS DE SEGURIDAD INSTRUCCIONES

* No lo use en la ducha. Para limpiarlo, simplemente enjuague la cuchilla en agua corriente.
 4. Para encender el aparato, deslice el interruptor hacia arriba (ON).
 5. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
 6. No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
 7. Cambie todas las pilas al mismo tiempo.
 8. Limpie los contactos del aparato y los de las pilas antes de instalar éstas.
 9. Siempre respete los signos de polaridad (+/-) al instalar las pilas si no va a usar el aparato durante un largo período de tiempo.
 11. Retire las pilas usadas sin demora.
 12. Guarde las pilas nuevas en su paquete original, lejos de los objetos de metal los cuales podrían provocar un cortocircuito. Nunca introduzca delicadamente la punta del cabezal en el canal del oído. Nunca suavemente el aparato de la superficie externa de la oreja para alrededor del canal del oído. Guíe el aparato con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza "I" con la flecha. Para sujetar el cabezal, gírelo en sentido horario hasta que la marca "I" coincida con el círculo (Fig. 3).
 1. Después de limpiar el cabezal, sacúdalo para secarlo.
 4. Vuelva a instalar el cabezal, haciendo coincidir la marca "I" con la flecha. Para sujetar el cabezal, gírelo en sentido horario hasta que la marca "I" coincida con el círculo (Fig. 3).
 5. Guía para las cejas

RESOLUCIÓN DE PROBLEMAS INSTRUCCIONES

Si su aparato no funcionase correctamente: 1. Asegúrese de que la pila no está instalada. Cerciórese de que la pila está debidamente cargada. 2. Asegúrese de que el aparato esté encendido. 3. Revise las cuchillas y límpielas si fuera necesario, usando el cepillo de limpieza provisto. 4. Si esto no soluciona el problema, regrese el aparato a un centro de servicio autorizado (véase la información de garantía).

PERSONAL GROOMING KIT



Conair wants to thank you for choosing our personal grooming kit. We know it will provide you with years of reliable service.



LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

 
To obtain service under this warranty, return the defective product to the service center listed below that is listed on back, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

PG2 PERSONAL TRIMMER

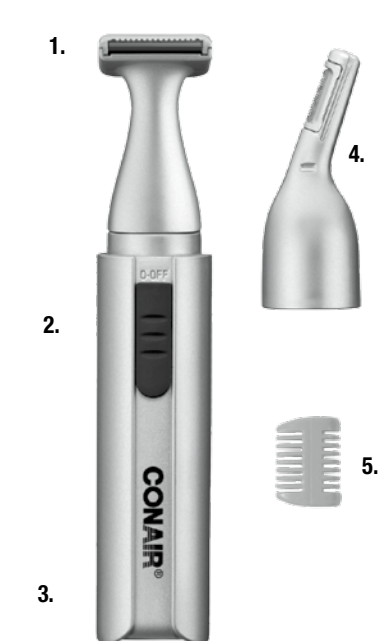


- All-purpose 20mm trimmer attachment
- On/off slide switch
- Battery compartment on back
- Angled detail trimmer attachment for nose, ears & eyebrows
- eyebrow comb attachment

CLEANING YOUR TRIMMER

Make sure trimmer is off.

- To remove the trimmer head for cleaning, turn the head counter-clockwise until the "I" mark aligns with the "arrow" mark, then lift the head gently (Fig. 6).

- Only rinse the head under water (Fig. 7). For proper functioning of the unit, the handle can not touch or be immersed in water.

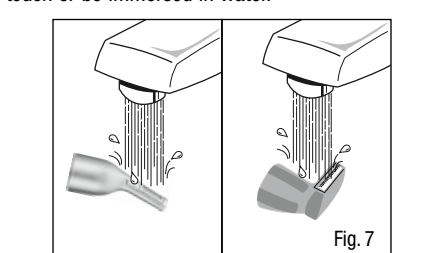


- After cleaning, make sure to shake dry the head before replacing it to the body.


- To reassemble the head onto the body, align the "I" mark on the head with the "arrow" mark on the body and then turn clockwise until the "I" mark aligns with the "circle" mark on the body (Fig. 8).

COMB GUIDE (only to be used on eyebrows)

The eyebrow attachment has two settings; approximately 2mm (S) and 4mm (L). (Fig. 4). Choose the desired length.

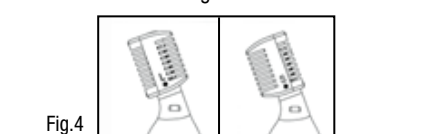

Place the comb guide over the Vertical Trimmer attachment head. (Fig. 5). Ensure you have aligned the arrow on the Vertical Trimmer attachment head with the correct length setting on the comb guide. Switch the trimmer 'ON'. Move the comb guide through the hair you wish to remove following the direction of hair growth until you reach the desired length.

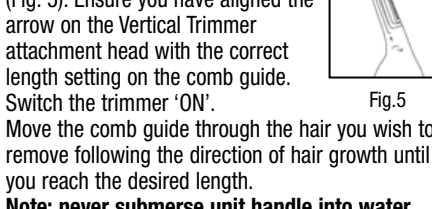

TAKING CARE OF YOUR TRIMMER BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades, then rinse blades under water only and store the trimmer in its storage stand until the next use.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

TO TRIM NECKLINE & SIDEBURNS

Attach the all-purpose 20mm trimmer attachment to the trimmer handle. Hold the trimmer blade against the skin at the length desired and move the trimmer downward.



TO TRIM NOSE HAIR

Attach the angled detail trimmer head to the trimmer handle. Turn unit on. Gently insert trimmer head into nostril. Gently move trimmer in and out of the nostril to remove unwanted hair. Avoid inserting the trimmer more than 1/4" to ensure safe trimming.

TO TRIM EAR HAIR

Attach the angled detail trimmer head to the trimmer handle. Turn unit on. Gently insert trimmer head no more than 1/4" into outer ear canal. Gently move trimmer around the outer ear to remove unwanted hair extending beyond the outer ear. Guide the trimmer around the outer surface of ear to trim protruding hairs. Never insert trimmer more than 1/4" into ear canal.

TO TRIM EYEBROWS

Attach the angled detail trimmer to the trimmer handle. Turn unit on. To shape and define, move the trimmer without the eyebrow comb attachment slowly so as not to cut any hair you do not intend to trim. Once shaped and defined, you may thin out the hair using the eyebrow comb attachment.

*Do not use in the shower. To clean simply rinse trimmer blade under faucet.

- To use your trimmer, push On/Off switch upwards to "On" position.
- After you finish using your trimmer, push down on the On/Off switch to turn the trimmer off.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment, which is not to be used for an extended period of time.
- Remove used batteries promptly.
- Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
- Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

GETTING STARTED TO SWITCH TRIMMER HEADS

Hold the handle of the trimmer while turning the trimmer head counterclockwise until the "I" mark is aligned properly with the "arrow" mark (Fig. 2). At this point you should be able to easily lift the trimmer head from the handle. To use a new trimmer head on the unit, properly install the head into position making sure the "I" mark is aligned with the "arrow" mark, turn clockwise until the "I" and "circle" marks are aligned (Fig. 3) and lock into position.


TROUBLESHOOTING

There are several things to look for if your trimmer fails to operate:

- Be sure the trimmer is turned ON.
- Make sure that the battery is properly placed in the battery compartment. Test the battery to be sure it is working.
- Check the blades to see if they are clogged with hair clippings; if so, use a cleaning brush to remove hair.
- If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

OPERATING INSTRUCTIONS

- To insert battery, remove compartment cover at the back of the unit by pulling straight down (Fig.1). Insert one AA alkaline battery, negative end up. (Alkaline batteries will ensure the best performance and longest life for your appliance.) If you are not going to use the unit for a long period of time, or if the battery is dead, remove the battery from the unit. Remove used batteries promptly. This will increase the life of your trimmer.
- After inserting the battery, replace the battery compartment.
- Now your unit is ready to be used.

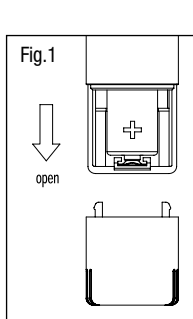

11PG126426
 Modelo PG2
 IB-11079
 ©2011 CONAIR CORPORATION
 Centro de servicio
 Conair Corporation
 Service Department
 7475 North Glen Harbor Blvd.
 Glendale, AZ 85307
 Para registrar su producto, visítenos en:
www.conair.com/registration
 Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

GARANTÍA LIMITADA DE DOS AÑOS
 Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.
 Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio Indicado con su recibo de compra y un cheque o giro postal de US\$5.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.
CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.
 CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIERA OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños esperables, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.
 Gracias por comprar la cortadora multiuso de Conair. Le proporcionaremos años de servicio confiable.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

- Use close supervision when the appliance is used by, on, or near children or individuals with certain disabilities.
- Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer.
- Never operate the appliance if it is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
- Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

SAVE THESE INSTRUCTIONS

1. Use close supervision when the appliance is used by, on, or near children or individuals with certain disabilities.
 2. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer.
 3. Never operate the appliance if it is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
 4. Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.



CORTADORA MULTIUSO

READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

- Use close supervision when the appliance is used by, on, or near children or individuals with certain disabilities.
- Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer.
- Never operate the appliance if it is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
- Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

SAVE THESE INSTRUCTIONS

1. Use close supervision when the appliance is used by, on, or near children or individuals with certain disabilities.
 2. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer.
 3. Never operate the appliance if it is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
 4. Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.