

INSIGNIA™

QUICK SETUP GUIDE

32" 720p LED TV


NS-32N101NA22

ACCESSORIES

Remote control and two AAA batteries



TV stands

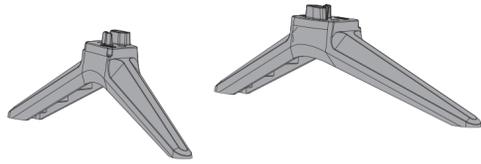

M4 screws (12 mm length) (4 pcs.)




STOP
Before using your new product, please read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- 2 Use a Phillips screwdriver and the four provided screws to secure the stands to your TV.

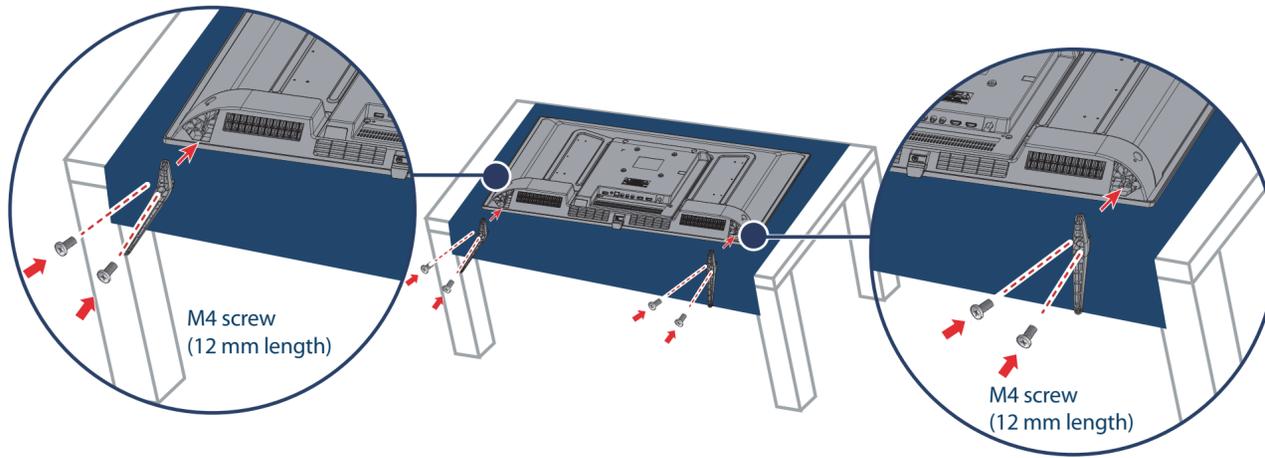


WALL MOUNT

Before you mount your TV, make sure that:

- You remove the stands.
 - The wall-mount bracket supports the weight of your TV.
- See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.


Note: Wall-mount screws are not included.

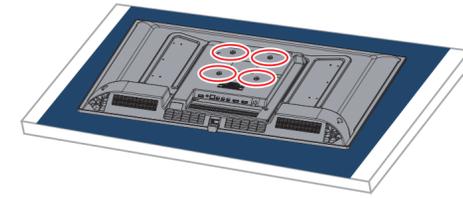

VESA Mounting Pattern


100 × 100 mm
Screws: type M4, 10 mm minimum length depending on the wall-mount.

FEATURES

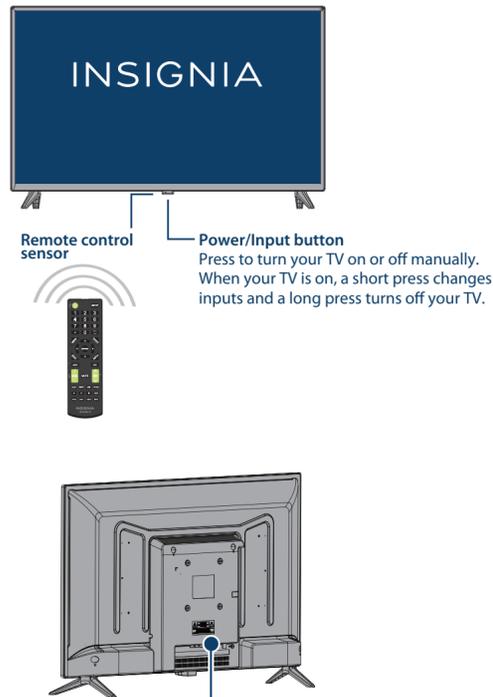

Remote control sensor

Power/Input button
Press to turn your TV on or off manually. When your TV is on, a short press changes inputs and a long press turns off your TV.

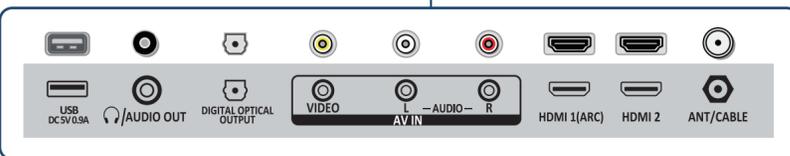

Note: Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

HDMI (best video quality)



HDMI OUT

DIGITAL OPTICAL OUTPUT

/AUDIO OUT

HDMI 1 (ARC) HDMI 2
HDMI OPTIONS

DIGITAL AUDIO

You can use the **DIGITAL OPTICAL OUTPUT** jack or the **HDMI 1 (ARC)** jack.
Note: If you need to change the digital audio format, go to the **Home** menu, select **Settings**, then select **Display & Sounds**. Select **Digital Audio Output**, then select **Digital Audio Format** and change the setting to **PCM** or **Dolby Digital**.

ANALOG AUDIO

Coaxial (good video quality)

AV (good video quality)



AUDIO/VIDEO OUT
L R


VIDEO L - AUDIO - R
AV IN

ANT/CABLE


Connect an antenna to access live over-the-air TV.

3 TURNING ON YOUR TV

1 Plug the power cord into a power outlet.

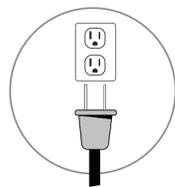

2 Remove the remote control cover and install the batteries.

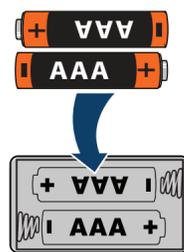

3 Press  on your remote.


4 Follow the on-screen instructions.



FIND YOUR USER GUIDE ONLINE

- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-32N101NA22**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

USING YOUR REMOTE CONTROL

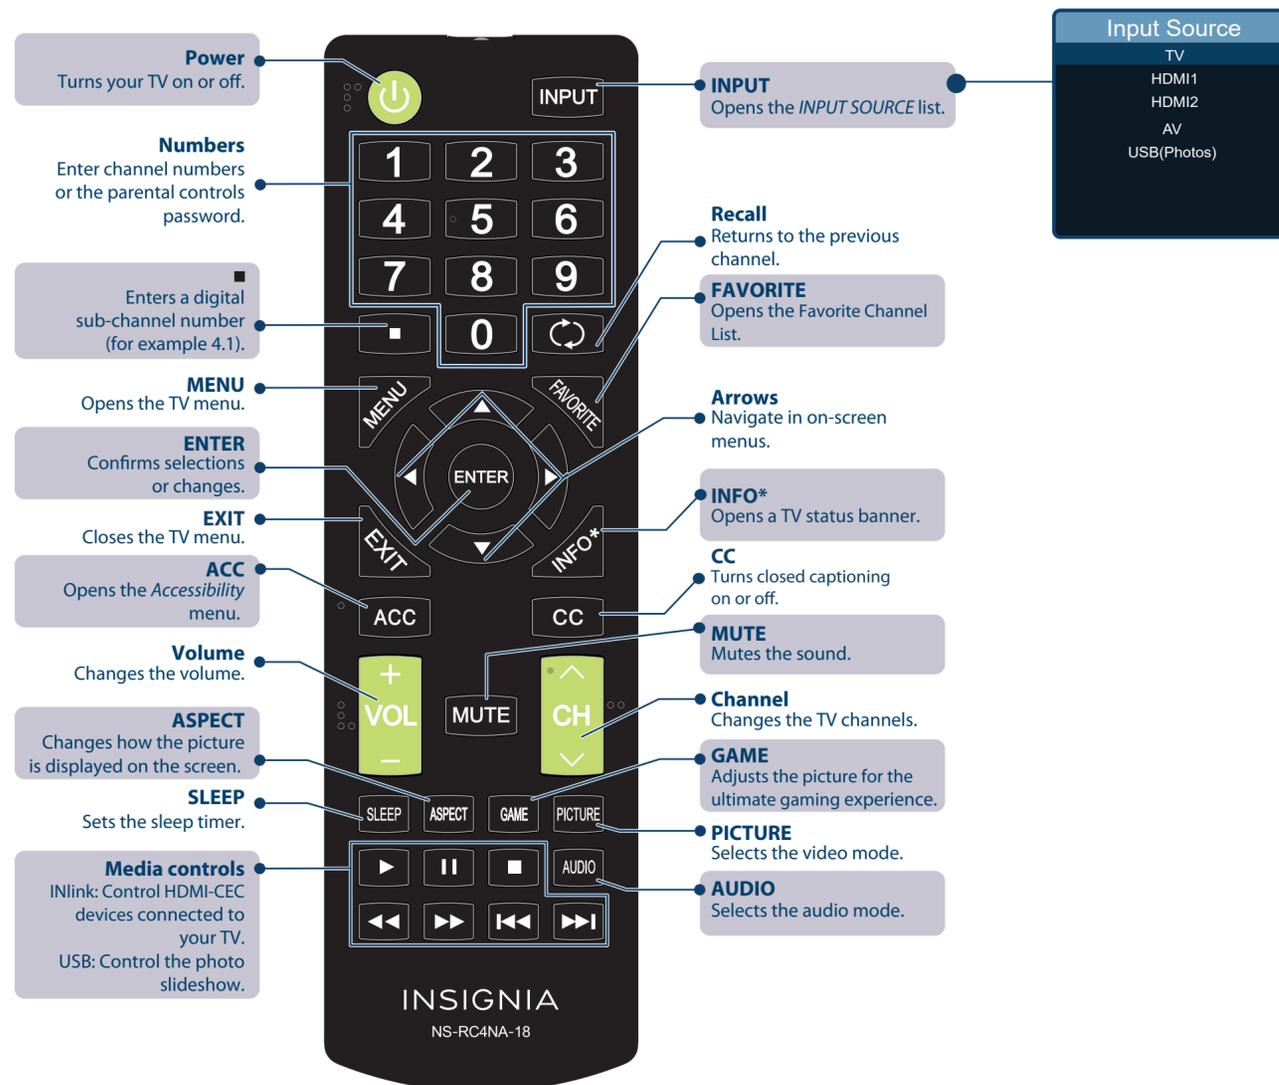

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you want to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes.

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com
For customer service, call:
1-877-467-4289 (U.S./Canada)



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS, Inc.
DTS, TruSurround and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries.
© 2020 DTS, Inc. ALL RIGHTS RESERVED.

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.