

INSIGNIA™

QUICK SETUP GUIDE

All-In-One Travel Converter

NS-MTC1875 / NS-MTC1875-C

Before using your new product, please read these instructions to prevent any damage.

PACKAGE CONTENTS

- Converter
- Five adapter plugs
- World Map
- Quick Setup Guide



BE CAREFUL!

Check out these important safety instructions to keep yourself and your devices safe.


- Before using the converter/adapter, check the product you intend to connect to the converter/adapter for the manufacturer's voltage and wattage rating, which should be located on the product.
Caution: Adapters alone do not convert voltage. To avoid damaging your device, use adapters with the voltage converter when appropriate.

- The converter is designed to be used only for 10 minutes or less.
- Do not leave the converter/adapter in the power outlet when not in use.
- Do not continue to use the converter/adapter if it is not working properly, has been damaged, or dropped in water
- This converter should be used with single-voltage appliances.
- No grounding. This product is for use with unearthed or double-insulated appliances only.

Warning: This product is intended for adult use. This product is NOT intended for use by unsupervised children. Choose proper settings and plug in this product before directly supervising children using devices connected to this product.

Do not use the converter for electronic controlled appliances.

MAKING SURE YOUR DEVICE IS COMPATIBLE

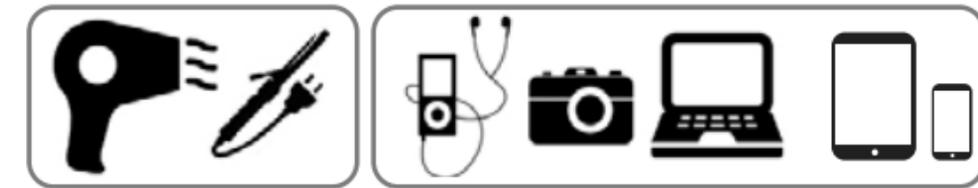

High setting Low setting

- 1 Determine the voltage of the power outlet you want to use. See the table on the back for common voltages.
- 2 Check the voltage of the device you want to connect to the power outlet.
- 3 Compare the power outlet voltage to your device's voltage, then use the following table to decide whether to use an adapter plug only or an adapter plug with the converter.

Note: The voltage of some devices will be a range. If your power outlet voltage is in the range of your device's voltage (for example, a 120–240V device and a 240V power outlet), you do not need the converter.


The power outlet voltage is:	Instructions:
<ul style="list-style-type: none">• The same as your device's voltage• In the range of your device's voltage• 100V and your device is 120V• In a country with 110–120V AC	Use only an adapter plug.
<ul style="list-style-type: none">• Greater than your device's voltage• In a country with 220–240V AC	Use an adapter plug and the converter. Continue to step 4.
<ul style="list-style-type: none">• Less than your device's voltage	Your device is not compatible. Do NOT use this converter/adapter with your device.

Notes:

- Use only an adapter plug for dual-voltage devices (those listed as 110V/220V AC, 120V/240V AC).
 - Use only an adapter plug for devices such as laptop computers and battery chargers because they automatically adjust to 110V or 220V power.
- 4 Check the wattage of your device.

If you use an adapter plug with the converter:

Device wattage is:	Instructions:
0–25W	Set the converter to the low wattage setting. See "Using your converter/adapter" for further instructions.
26–1875W	Set the converter to the high wattage setting. See "Using your converter/adapter" for further instructions.

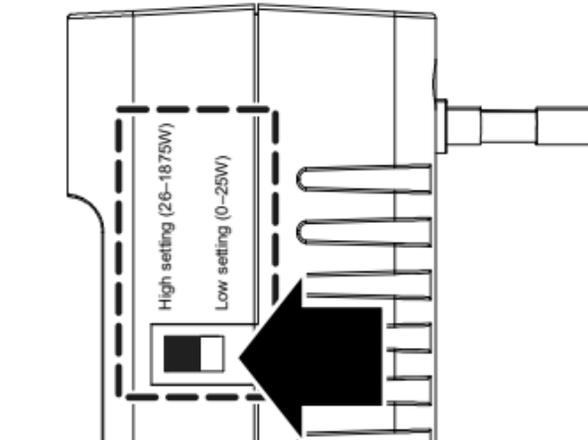

USING YOUR CONVERTER/ADAPTER

Warning: Make sure that you have picked the correct converter/adapter combination for your device before use. An incorrect combination could damage your device. For indoor use only.

Using only an adapter plug:

- 1 Make sure that your device is compatible and that you do not need the converter before use. Incorrect use could damage your device.
- 2 Find the power outlet you want to connect your device to in the table to the right, then select the appropriate adapter plug.
- 3 Connect the adapter plug to your device, then connect it to a power outlet.

Using an adapter plug with the converter:

- 1 Make sure that your device is compatible and that you need the converter before use. Incorrect use could damage your device.
- 2 Check the device's rating plate for watts and select the correct watt setting on the converter.
- 3 Find the power outlet you want to connect your device to in the table to the right, then select the appropriate adapter plug.

4 Connect the adapter plug to the converter.

5 Connect your device to the converter, then connect it to a power outlet.

Using the low setting (devices that use less than 25W):

The low setting can be used for long periods of time on products with electronic circuitry that are 0–25 W (for example, battery chargers and radios).

Using the high setting (devices that use 26–1875 W):

DO NOT use the HIGH setting for electronic circuitry products. The high setting is designed to be for 10 minutes or less.



Plug types	Outlet types	Location	Voltage
A	Flat parallel blades	Japan	100V
		Parts of North America and Caribbean	120V
		Parts of South America, Caribbean, and China	240V
B	Round thin pin	Parts of Middle East, Africa, Asia, Caribbean	120V
		Southern Europe, parts of Middle East, Africa, Asia, Caribbean	240V
C	Flat angled blades	Australia, New Zealand, and Fiji	240V
D	Round thick pins	Northern Europe	240V
E	3-prong blades	Great Britain, Ireland, parts of Africa, Hong Kong, and Singapore	240V

TROUBLESHOOTING

My converter/adapter or device is humming

- It is normal to hear a humming sound from your converter/adapter or device.

My device stopped working

- If your device has a built-in thermostat, it may have shut off prematurely.
- Make sure that you have selected the correct settings.
- Wait for your device to cool down, then resume normal operation.

My device is working slowly

- Some devices may operate slower in foreign countries that use 50 Hz of current (the U.S. operates on 60 Hz).

I don't know my device's voltage or wattage

- Check on your device, its power adapter, or in its manual.
- To calculate wattage, multiple voltage by amps (for example, 120V × 3 A = 360 W).
- Contact the device's manufacturer.

SPECIFICATIONS

Adapter: 100–240VAC, 8A Max. 50Hz

Converter:

- **Input:** 220–240VAC, 50Hz
- **Output:** 100–120VAC, 1875W Max. 50Hz
- **Low wattage setting:** 0–25 watts
- **High wattage setting:** 26–1875 watts

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.
Made in China