

CHEFMAN®



VersaBrew

**SINGLE SERVE
COFFEE MAKER**

USER GUIDE

Now that you have purchased a Chefman® product you can rest assured in the knowledge that as well as your 1-year parts and labor warranty you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT

 USA **888-315-8407**

 **customerservice@chefman.com**

MODEL: RJ14-SKG



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.



Contents

- 1** Introduction
- 2** Safety Instructions
- 4** Features
- 5** Operating Instructions
- 6** User Maintenance
- 7** Terms and Conditions
- 8** Warranty Card

Introduction

Congratulations!

You have made an excellent choice with the purchase of this quality Chefman® product. By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Chefman®.

We want you to be completely satisfied with your purchase so this Chefman® product is backed by a comprehensive manufacturer's 1-year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 1-year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt). This guarantee is in addition to your statutory rights. Your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse and force majeure.

This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever. In case of questions or technical problems please email customerservice@chefman.com or call the following toll-free help line number: 888-315-8407, Monday – Friday 9am to 5pm EST.

If the appliance has to be returned to us, it must be packed correctly as we cannot accept any responsibility for damage caused in transit.

IMPORTANT SAFEGUARDS

SAFETY INFORMATION

This appliance is for **HOUSEHOLD USE ONLY**.

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll- free customer assistance number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
8. Do not use outdoors or in a damp area.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect the appliance, turn control to off , then remove plug from wall outlet.
12. Do not use this appliance for anything other than its intended use.
13. Scalding may occur if the lid is removed during the brewing cycles.

IMPORTANT SAFEGUARDS (cont'd)

14. To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance. No user serviceable parts inside. Call our toll-free customer assistance number for repair.

Warning: VersaBrew Single Serve Coffee Maker is never to be used on a range top.

Warning: Hot steam.

Caution: To reduce the risk of scalding, do not open lid when coffee is brewing.

Warning: To reduce the risk of fire or electric shock, do not remove bottom cover. No user-serviceable parts inside. Repair should be done by authorized service representative.

Warning: After brewing is finished turn off the appliance.

SAVE THESE INSTRUCTIONS

Features




1. Coffee grounds filter
2. Capsule Receptacle for both K-Cups and Coffee Ground Filter
3. Lid
4. Water shower head
5. Water tank
6. Brew button
7. Indicator light
8. Spout

Operating Instructions

USING YOUR COFFEE MAKER

Remove packing materials and read all instructions carefully before use. Before first use, run the machine with water and no coffee to ensure the unit is clean. Do not immerse the unit in water.

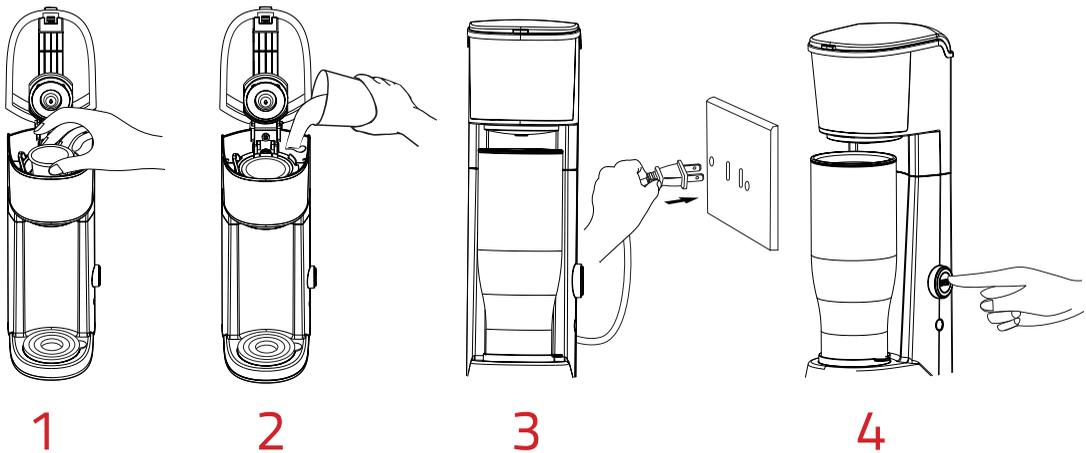

STEP 1: Place K-Cup or provided permanent coffee ground filter* into receptacle.

STEP 2: Add water to tank located behind capsule receptacle, under water shower head and close lid until you hear a clicking sound.

STEP 3: Connect unit to power supply.

IMPORTANT: Do not plug in this unit before water is added to tank.

STEP 4: Firmly press the 'BREW' button and enjoy!

*Fill provided coffee ground filter with ground coffee and close until it clicks. Place filter into the receptacle by aligning the "front" of the filter and the receptacle facing the user. No filters may be used other than the one provided. May cause injury to persons and damage to unit.

NOTE: The unit is equipped with an overheat protection feature. Before your 2nd brew, fill the tank with cold water and wait 5 minutes before brewing again. We recommend using a new batch of fresh coffee for best results each time.

CAUTION: To avoid potential scalding, do not open lid while unit is in operation. We recommend not keeping your unit plugged in overnight or for long periods of time.

User Maintenance

CLEANING YOUR COFFEE MAKER

Proper maintenance will ensure years of service from your appliance. Clean the appliance after every use. This appliance contains no user serviceable parts and requires little maintenance.

Warning: Unplug the appliance and let it cool down completely before cleaning.

Caution: Do not immerse the coffee maker, or the power cord with plug into water or any liquids. Do not use abrasive pads or alcohol.

- Take out the permanent filter and receptacle from the coffee machine.
- Clean the housing with a clean, damp cloth.
- Use baking soda or a mild cleaning agent to remove stains in the receptacle. If stains are hard to remove, soak the receptacle overnight with a water/detergent mixture and clean afterwards.
- Make sure all parts are completely dry after washing and before use.
- After cleaning, reassemble the coffee maker.

Note: Do not dry the inside of the water tank with a cloth, as lint may remain.

Terms and Conditions

CHEFMAN LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. CHEFMAN LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN LLC will repair or replace the same effecting all necessary parts replacements for a period of three years from the date of purchase. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® VersaBrew Single Serve Coffee Maker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® VersaBrew Single Serve Coffee Maker should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply email customerservice@chefman.com or call our toll-free number 1-888-315-8407 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 873 Route 45, Suite 101, New City, NY 10956.

To facilitate the speed and accuracy of your return, please enclose \$15.00 for shipping and handling of the product. Please only pay by money order.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CHEFMAN is a registered trademark of PLUS ITS CHEAP, LLC.

Warranty Card

CHEFMAN®

VersaBrew Single Serve Coffee Maker

Your details:

Name: _____

Address: _____

 _____ Email: _____

Date of Purchase*: _____

*We recommend you keep the receipt with this warranty card

Location of Purchase: _____

Description of Malfunction:

Return your completed warranty card to:

RJ Brands
873 Route 45
Suite 101
New City, New York
10956

AFTER SALES SUPPORT

 USA 888-315-8407

 customerservice@chefman.com

MODEL: RJ14-SKG

Phone lines available Monday to Friday, 9am-5pm EST

1-YEAR LIMITED WARRANTY



To log-in to ClubChefman.com follow the below steps:

1. Enter www.clubchefman.com into your web browser.
2. Click on "Sign Up Now".
3. Fill in the required information as prompted.

NOTE: "Place of Purchase" refers to the store at which you purchased your coffee maker.

4. Sign in using your User Name and Password.

CLUB CHEFMAN ACCESS CODE: 58811603

CHEFMAN®

Follow Us



RJBRANDS.COM | CLUBCHEFMAN.COM | CHEFMAN.COM