

QUICK SETUP GUIDE

# Everyday Adventures Accessory Kit for GoPro®

NS-DGPK15

FEATURES

- Compatible with most GoPro cameras, including the HERO and Session lines (camera must be in housing or frame to allow attachment to accessories). Also compatible with other equipment adapted to the standard GoPro mount.
- Perfect for carrying, storing, securing, and using your GoPro camera. Accessories allow for use on cars, boats, and bikes, as well as handheld, freestanding, or head mounting.

PACKAGE CONTENTS

- Accessories for GoPro (see table)  
**Note:** Place your GoPro inside its housing (included with or attached to your GoPro, not included with this kit) to mount with these accessories.
- Quick Setup Guide

ITEM	DESCRIPTION
	Use to secure your GoPro to your head. Attach your GoPro using the thumb screw. Adjust the head strap mount to fit comfortably and securely. Can be worn backwards for a unique perspective.
	Use to attach your GoPro to cars, boats, or other vehicles. Screw the tripod to GoPro mount adapter (see below) into the mount holder, then attach your GoPro using the thumb screw. Press the suction cup to your vehicle's surface, then push the lock down. <b>Note:</b> Attach the safety cable to prevent your GoPro from falling.
	Use with the suction cup and bicycle handlebar mount or any other standard tripod.
	Use in any situation where you risk losing your GoPro if it falls (for example, while boating or biking). Connect directly to your GoPro and a fixed object such as a boat railing, sideview mirror, or other suitable location. <b>Note:</b> Do not attach the safety tether cable to your body, clothing, or safety gear.

ITEM	DESCRIPTION
	Use to get a shot down low, up high, of yourself, or nearly anything else. The detachable tripod stores inside the handle for convenience and versatility.
	Use to attach the GoPro camera to handlebars, seatposts, ski poles, and more. Use with the Tripod to GoPro mount adapter.
	Use to secure your GoPro to mounts or adapters in this kit or as replacements for other accessories. <b>Note:</b> Thumb screws will come attached to other accessories. They can be removed and used where they are needed.
	Use to carry your GoPro and a few essential accessories. Contains a spot for one Hero or Session camera, memory cards and batteries, as well as a wide range of GoPro accessories. The front open slot is intended for the triple flex handle with tripod. <b>Note:</b> To maintain portability, not all of the included accessories will fit in this case. The intended use is on the go where all accessories might not be required.

**Note:** The accessories, except the Semi-soft carrying case, are water resistant, but they must be rinsed with clean, fresh water and allowed to dry completely after use. Items used in salt water must IMMEDIATELY be rinsed with clean, fresh water and dried after use. User is responsible for ensuring that the attached camera is waterproof.

HOW TO USE THE TRIPLE-FLEX HANDLE WITH TRIPOD

- This ultra-versatile mount is a three-in-one design. It can be used as a camera grip, an extension arm, or a tripod for ultra-versatility and a variety of shots.  
**Note:** To protect your fingers from being pinched in case the unfolded arm closes suddenly, press and hold the silver safety button to fully close the mount once open. The button does not need to be pressed to open the mount.



- The handle can be detached from the arm and used as a lightweight camera grip.

- 1 Rotate the locking thumb screw counterclockwise.
- 2 Remove the extension arm and the locking thumb screw from the handle.
- 3 Place the camera onto the handle, and then rotate the thumb screw clockwise to secure the camera to the handle.


**Note:** Use a new thumb screw (included) when attaching the camera.



- The folding arm is perfect for POV or follow-cam footage, and it makes it easy to capture selfies without the mount appearing in the shot.




- Inside the handle is a small tripod that can be removed and used on its own or combined with the handle.

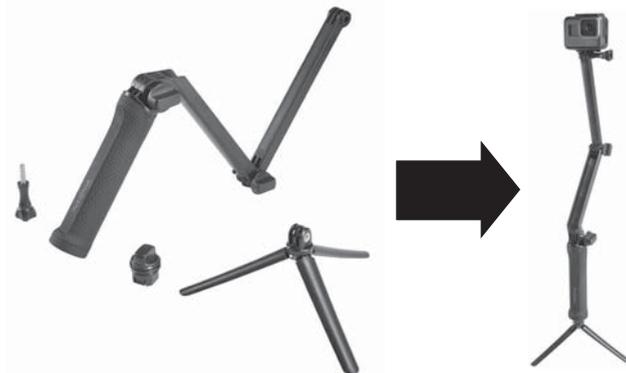

## REMOVING THE INTEGRATED TRIPOD FROM THE HANDLE

### How to remove the integrated tripod

- 1 Rotate the notch at the base of the handle counterclockwise to loosen the integrated tripod.
- 2 Remove the integrated tripod from the handle.

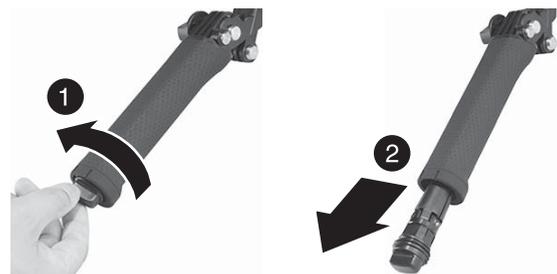


### How to use the integrated tripod individually

- 1 Remove the top of the integrated tripod. (This may take a bit of effort.)
- 2 Unfold the tripod arms.
- 3 Place the camera onto the handle, and then rotate the thumb screw clockwise to secure the camera to the integrated tripod.



### How to use the integrate tripod with the handle

- 1 Push the notch on the integrate tripod into the base of the handle.
- 2 Rotate the integrated tripod clockwise.

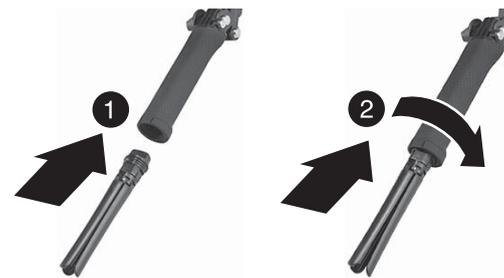

- 3 Unfold the tripod arms.

**Note:** In certain positions, the arm will not be stable and the camera will fall over. Carefully test your configuration and do not trust the tripod to keep your camera secure in case of bumps, wind, or shifting surfaces.



## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

GOPRO, HERO, Session, the GOPRO logo, and the GoPro Be a Hero logo are trademarks or registered trademarks of GoPro, Inc.

INSIGNIA is a trademark of Best Buy and its affiliated companies  
 Distributed by Best Buy Purchasing, LLC  
 7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
 ©2017 Best Buy. All rights reserved.

**Made in China**