




# INSTRUCTION MANUAL

MODEL: YC1

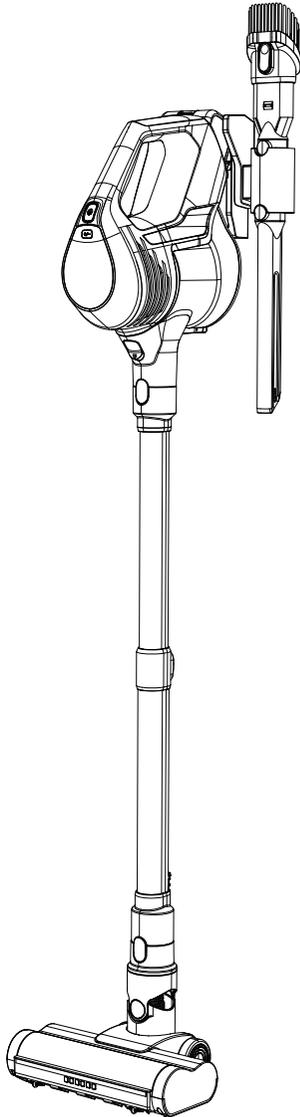

Manual version: V1.0

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using an basic precautions should always be followed, including the following:  
**READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)**

**WARNING:**  
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, DAMAGE, OR INJURY:

1. To protect against electrical shock, do not immerse the power cord or plug in water or any other liquid. Please always operate it with dry hands to avoid the risk of electrical shock or serious personal injury.
2. Close supervision is necessary when any appliance is used by or near children. This vacuum is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and common sense unless they are supervised or have been given instructions on using the vacuum by a person responsible for their safety.
3. Do not use the vacuum outdoors. It is for household use only.
4. Do not use the vacuum if it has been dropped, damaged, left outdoors, or dropped in water. Please contact customer service for help when the appliance or the adapter is damaged.
5. Use the vacuum only as described in this manual. The use of accessory attachments not recommended may cause damage to the vacuum or personal injuries.
6. Do not use abrasive materials to clean the vacuum. Do not use spirits or other solvents to clean the appliance.
7. Do not use the appliance to vacuum any of the items below:
  - Water, flammable, or combustible liquids such as gasoline.
  - Lighted stubs, matches, hot ashes, or other combustible items.
  - Needles, pins, or other sharp items.
  - Wood pieces, gesso, cement, calcimine, or other tiny granules.
  - Pieces of string or fabric.
8. Do not pick up liquids with the vacuum or use it on wet floors. Do not immerse the vacuum in water.
9. Do not use the vacuum on concrete, tar, or similar rough surfaces.
10. Do not vacuum frayed carpets or carpet tassels.
11. Do not use the vacuum without the dust cup lid in place.
12. Do not put any objects into openings of the vacuum. Do not use when any openings are blocked. Keep free of dust, lint, hair, or anything that may reduce air flow.
13. Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
14. Store the vacuum indoors. Store after use to prevent accidents.
15. Keep the vacuum cleaner away from stoves and heat-emitting appliances. Heat can deform and discolor the plastic parts of the unit. Please use the vacuum at the temperatures between 14°F-104°F.
16. Always remove the adapter from the power socket when the appliance is not being charged.
17. Unplug charging cord from the appliance and power it off before cleaning or performing maintenance, making tool adjustments, changing accessories, or storing, to avoid powering it on accidentally.
18. The battery must be removed from the appliance before disposing of it.
19. The battery must be disposed of safely.
20. The appliance includes Li-ion batteries. Do not incinerate the batteries or expose them to high temperatures, as they may explode.
21. The thermal cutout will switch off the vacuum automatically when it overheats. If this happens, turn off the power switch, and wait for 45 minutes to restart the vacuum.
22. Use only the adapter provided by the manufacturer.



## 2. WHAT'S IN THE BOX

**CAUTION:** Assemble the vacuum according to the "Assembly" section.

Vacuum Main Body	Electric Floor Brush	Screws and Wall Anchors
Crevice Tool	Charging Wall Mount	Adapter
2-in-1 Crevice Tool	Extend Tube	

## 3. SPECIFICATIONS

Name	Vacuum Cleaner
Model	YC1
Adapter Input Voltage	100V~240V 50/60Hz
Adapter Output Voltage	18V

### Disposal:

The chemical substances contained in the built-in lithium-ion battery of this product will pollute the environment. Before scrapping the product, the battery must be removed and handed over to a professional waste battery recycling station for disposal. Do not dispose of old electrical appliances with household waste discard.


Before disposing of your old machine, remove the dust cup and inner dust cup filter assembly, which can be disposed of with normal household waste.

### CAUTION:

1. When discarding the machine, the battery pack must be removed and disposed of properly, according to your area battery disposal regulations or the universal waste management rule. Batteries contain materials that are harmful to the environment.
2. Discarded batteries should be handled properly. Don't put them into water, fire, or soil.
3. If the battery leakage touches skin or eyes, flush with water immediately and seek the professional medical help.

## 4. OPERATING INSTRUCTIONS

### >>Indicator Light Instruction

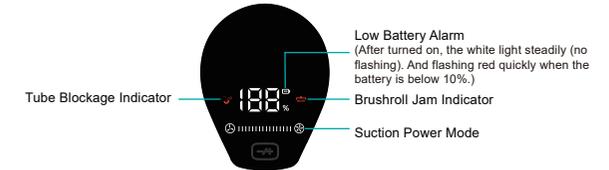

### Normal Operation:

After power on, if the machine is running normally, the number in the middle of the screen displays the remaining usage time (percentage), and the corresponding suction icon ( ) is always on.


### Indicator Troubleshooting:

1. "Brushroll Jam Indicator" — Check for and clear out blockage in the floor brush if:
  - Brushroll Jam Indicator flashes continuously.
  - The LED light on the floor brush is off.
  - The floor brush stops rotating.
2. "Suction Blockage Indicator" — Clear out blockage in the suction port, dust cup, and filters if:
  - The "Suction Blockage Indicator" flashes until the screen goes off.
  - The LED light on the floor brush is off.
  - The floor brush stops rotating.
3. Charging Indicator

When the charging prompt icon on the screen turns red and flashes, it means the charge is below 10%. At this time, it should be charged in time.


### >>Charging Wall Mount Instruction

- 1 Using screws to connect the two sides to the main board.
- 2 Plug the adapter into the wall socket and connect it to the charging port on the Charging Wall Mount.

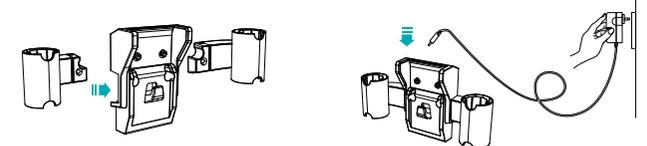


## 4. OPERATING INSTRUCTIONS

- 3 Charging the vacuum or storage the vacuum and accessories.

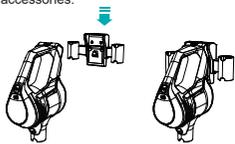

- 4 Please storage accessories on charging wall mount as illustrated below.

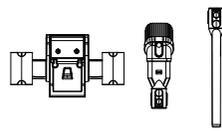

### DESCRIPTION OF THE CHARGING INDICATOR:

Battery icon: usually white light steadily on, when the battery is lower than 10%, the red light flashes until battery dead.

While charging:  
Percent icon: white light always on.  
Digital icon: according to the percentage of power white light steadily on.  
Battery icon: white light flashing.

After fully charged: the battery icon white light steadily on.

## 5. CLEANING AND MAINTENANCE



### CAUTION:


If you find that the suction is weak or the "Suction Blockage Indicator"  on the LED screen flashes, then please wash the filter.

### >>Cleaning the Filter Device

- 1 Press the dust cup release button and remove the dust cup.



- 2 After taking out the dust cup, take out the pre-filter and filter sponge.

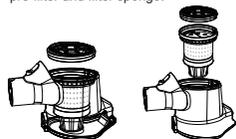


- 3 Clean the pre-filter, filter sponge under water.




- 4 Air dry at least 24 hours before reinstalling.



- 5 Assemble the pre filter, filter sponge back. Do not assemble them until completely dry.

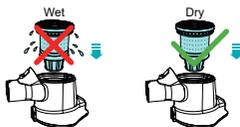

- 6 Reinstall the dust cup, first step to align the bottom part then push the top part until hearing "lock" sounds.

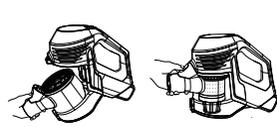


## 5. CLEANING AND MAINTENANCE

### CAUTION:

When the floor brush encounters an obstruction, the LED light will flash continuously three times, after which the floor brush will stop rotating while the main unit continues to run. The obstruction indicator  will turn red and continue flashing, indicating that the floor brush is blocked. Please check the floor brushhand clear the obstruction.

### >>Clean the Floor Brush

 - 1 Press the release button and hold to pull out to detach the tube from the floor brush.

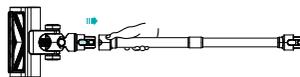


- 2 Push the switch and remove the floor brush.



- 3 Clean the pre-filter, filter sponge under water.



- 4 Install the roller on the floor brush and press the buckle downward to complete the installation.

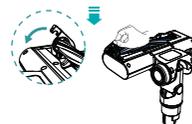

## 6. TROUBLESHOOTING

PROBLEM	POSSIBLE REASONS	SOLUTIONS
The vacuum can not be charged	The used adapter is not the original one	Please charge the vacuum with the original adapter
	The battery pack/adapter malfunctions	Please contact the customer service for help
The vacuum can not be powered on	The battery runs out	Please charge the vacuum with the original adapter
	Other malfunctions	Please contact the customer service for help
The vacuum stops working suddenly	The battery runs out	Use the original adapter for charging. It is recommended to charge the vacuum after each time use and use the low suction mode for long runtime
	The floor brush gets stuck	Clean foreign objects entangled on the floor brush
	1. The air duct is blocked 2. The dust cup is full	Clean the floor brush, telescopic tube, dust cup and the HEPA filter regularly
The cleaning results are not good	Other malfunctions	Please contact the customer service for help
	Incorrect use of the vacuum	1. It is recommended to use high suction mode for cleaning complicated environments 2. It is recommended to use the crevice tool for better pickup for vacuuming heavy objects such as beans 3. It is recommended to use the floor brush for cleaning stain
	The battery runs out	Please charge the vacuum fully and try to turn it on again
There is static during vacuuming working	1. The air duct is blocked 2. The dust cup is full	Clean the floor brush, telescopic tube, dust cup and the HEPA filter regularly
	The HEPA filter is not dried completely	Detach and air dry the HEPA filter completely. It is recommended to clean and replace it regularly
	There is too much dust inside the dust cup	Please empty the dust cup
The electric floor brush stops working	The vacuum runs at an environment full of static	It's normal that there may be much static in the air in winter and dry regions
	The floor brush gets stuck	Clean foreign objects entangled on the floor brush
Other malfunctions		Please contact the customer service for help

## 7. WARRANTY

### • CUSTOMER CARE

The 1-year Limited Warranty is valid for Products. If your machine is used correctly according to the instruction manual and there is a quality failure during the warranty period, we will provide you with free warranty service once you contact us.

\*If service parts are no longer available or discontinued, they will be replaced with functional replacements.

### • WHAT IS NOT COVERED

- Under your machine guarantee, warranty shall not be liable for costs of repair or replacement of a product incurred as a result of: Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or any handling of the appliance which is not in accordance with this Instruction Manual.
- Machines purchased from an unauthorized dealer.
- Use of parts and accessories other than those produced or recommended by unauthorized parties or agents.
- Repairs or alterations carried out by unauthorized parties or agents.
- Use of the machine other than for normal domestic purposes, e.g., for commercial or rental purposes.
- Reduction in battery run time due to battery age or usage.

### • WARRANTY SERVICE

- If you have a query about your appliance, please contact customer service at:  
**US: [usa@moosoo.com](mailto:usa@moosoo.com)**  
**EU: [service@moosoo.com](mailto:service@moosoo.com)**
- Please inform us of your model name/number, purchased date, order number, machine malfunction details and your request for reparations.
- Your model number can be found on the rating plate.
- Please keep your purchase receipt in a safe place to ensure you have this information. Service rendered under this warranty will not extend the term of the warranty.



# MOOSOO

We're here to help

Facebook: [@moosoo.usa](https://www.facebook.com/moosoo.usa)

Email: [US:usa@moosoo.com](mailto:US:usa@moosoo.com)  
[EU:service@moosoo.com](mailto:EU:service@moosoo.com)