

DVD PLAYER

User's Guide for Model No. DH300B v745-03



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.



Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- **WARNING:** Shock hazard - Do Not Open. Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.


FCC Warnings

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FEATURES & CONTROLS


Power

Plug the attached AC cord into a standard AC power outlet to power the DVD player.

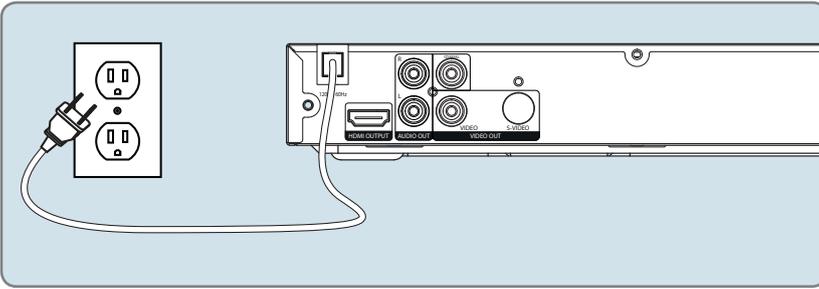

Remote


Requires 2 AAA batteries (not included).

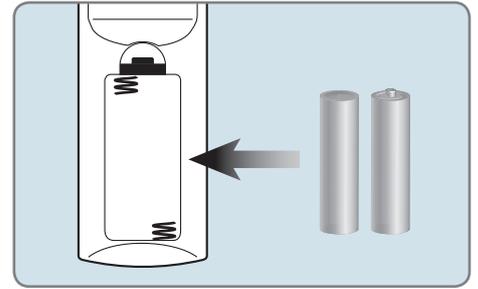


Remote

- | | | | |
|--|--|--|--|
| Power | | Open/Close | |
| Number Keypad | | Mute | |
| Angle | | Audio | |
| Menu | | Go To | |
| Press to access the main menu on a loaded DVD. | | Prog | |
| Title | | Setup | |
| Press to access the setup menu. | | Arrows/Enter | |
| Volume | | Subtitle | |
| Stop | | Skip | |
| Video | | Play/Pause | |
| Press to switch between Composite or S-video. | | Zoom | |
| OSD | | Repeat | |
| L/R | | Wide | |
| Search | | Slow | |
| N/P | | Step | |
| Press to switch between NTSC and PAL. | | A-B | |
| | | Press to create a repeating loop on specified section of a loaded DVD. | |

Front

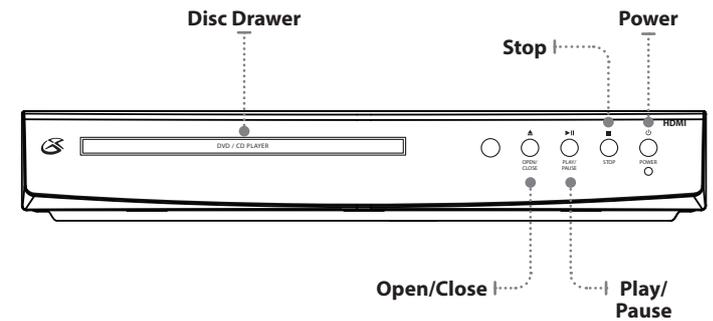

Rear

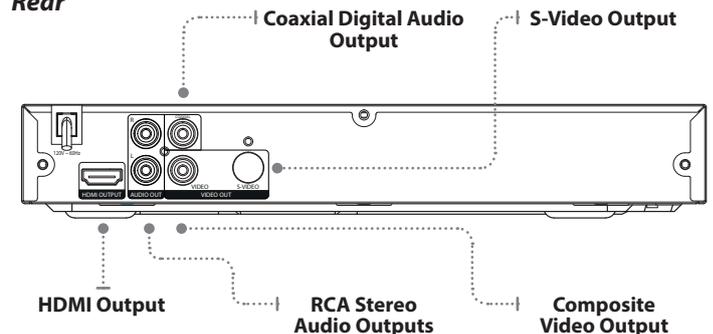

CONNECTING VIDEO AND AUDIO


Note: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

Note: Both video and audio connections must be made from the DVD player to your television.

Composite Video Output (Good) |----->

Requires an RCA video cable (yellow, included).


1. Use the RCA video cable to connect the Composite Video Output to a composite video input on a television.
2. Adjust the connected television's input setting to match the input used in the previous step.

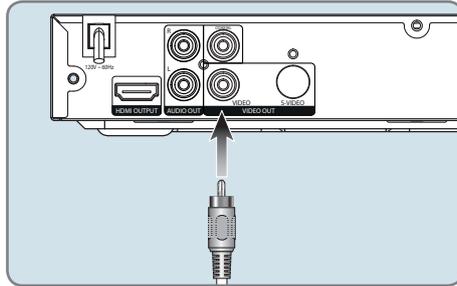

S-Video Output (Better) |----->

Requires a S-video cable (not included).


1. Use a S-video cable to connect the S-Video Output to a S-video input on a television.
2. Adjust the connected television's input setting to match the input used in the previous step.
3. Press the Video button on the remote to switch to S-Video mode.

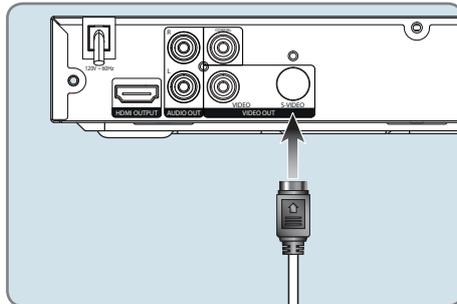

HDMI Output (Best) |----->

Requires a HDMI cable (not included).


1. Use a HDMI cable to connect the HDMI Output to a HDMI input on a television.
2. Adjust the connected television's input setting to match the input used in the previous step.
3. Set the resolution by going to **SETUP > VIDEO > Resolution**

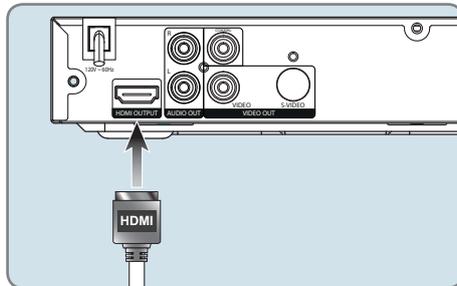

RCA Stereo Audio Output |----->

Requires an RCA audio cable (included).


1. Use the RCA audio cable to connect the RCA Stereo Audio Output to an RCA stereo audio input on a television.
2. Adjust the connected television's input setting to match the input used in the previous step.

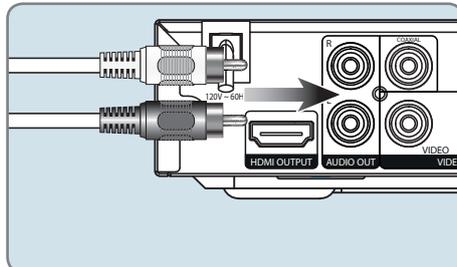

Coaxial Digital Audio Output |----->

Requires an RCA audio cable (included).

1. Use the RCA audio cable to connect the Coaxial Digital Audio Output to a coaxial digital audio input on an audio system.
2. Adjust the connected audio system's input setting to match the input used in the previous step.
3. In the Digital Out portion of the setup menu, adjust to PCM, RAW or OFF.

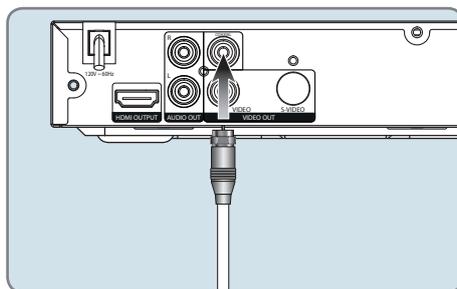

DVD AND CD

Loading and Playing a Disc

1. Press the **Open/Close** button to open the **Disc Drawer**.
2. Load a disc into the DVD player, label side facing up.
3. Press the **Open/Close** button to close the **Disc Drawer**.
4. After a disc is loaded, it will begin playing automatically. If the disc does not begin playing automatically, press the **Play/Pause** button.

Programming a Loaded Disc

1. While a loaded disc is playing, press the **PROG** button on the remote.
2. Use the **Arrows/Enter/Number Keypad** buttons to highlight and select a DVD title and chapter, or CD track.
3. Highlight the **START** button to play.
4. DVD Titles and chapters or CD tracks will play in the order they are programmed.
5. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.

Playing a JPEG CD

1. A slide show of JPEG photos from a loaded JPEG CD will begin playing automatically.
2. Press the **Stop** button to access a file view of the loaded JPEG disc.
3. Use the **Arrows/Enter** buttons on the remote to select and view photos.

Access the DVD Setup Menu

In order to access all of the features of the DVD setup menu, the DVD player needs to be fully stopped.

1. Press the **Stop** button on the remote twice.
2. Press the **Setup** button on the remote.

Digital Output Settings

1. Press the Setup button on the remote to access the Audio menu.
2. **OFF:** There will be no digital audio signal output. (Coaxial off)
3. **RAW:** The digital audio signal output will be in its raw format. This mode is usually used for DTS & Dolby Digital 5.1 signals.
4. **PCM:** The digital audio signal output will be in PCM format. This mode is usually used for audio CD signals.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:

www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:

www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partinfo@dpiinc.com

Copyright © 2014 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

