



RECHARGEABLE WINE OPENER & PRESERVER SET MD-WOSRCBK0

PACKAGE CONTENTS

- Wine opener
- Foil cutter
- Aerator pourer
- Vacuum preserver with two stoppers
- Charging base
- AC/DC power adapter
- *Quick Setup Guide*

FEATURES




QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.

CHARGING YOUR WINE OPENER

Note: We recommend that you charge your wine opener for at least 12 hours before using it for the first time.


- 1 Plug one end of the adapter into the charging base and the other end into a wall outlet.
- 2 Place your wine opener on the charging base. Make sure that it is firmly in position and makes full contact with the base recharging connectors. The LED indicator on the top of your opener lights blue while charging and turns off when fully charged.

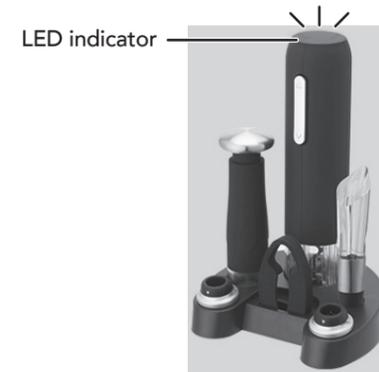

USING YOUR WINE OPENER

Removing the foil

- 1 Place the foil cutter around the neck of the wine bottle.
- 2 Keep one hand on the lower part of the bottle, then turn the foil cutter in a twisting motion to cut the foil.

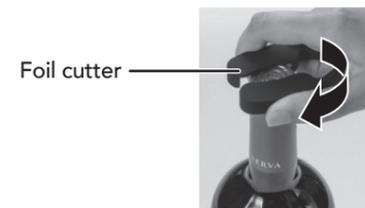


- 3 Remove the foil to expose the cork surface.

Removing the cork

Note: Your wine opener works with traditional and synthetic corks. Synthetic corks are smaller and do not expand the way that traditional corks do, so a synthetic cork may get stuck on the corkscrew. To remove the cork, hold the cork with a pair of pliers and press and hold the ▲ (release) button at the same time. The corkscrew slowly releases the cork. Do not try to force the corkscrew or the cork because you may damage the mechanism.

- 1 Make sure that your wine opener is charged.
- 2 Remove the foil around the top of the wine bottle using the provided foil cutter.

- 3 Place the screw hook end of your wine opener on top of the wine bottle cork. Try to keep your wine opener vertical. If it is not vertical, it may not pull out the cork correctly.
- 4 Hold the wine bottle and your wine opener firmly against the cork. Press and hold the ▼ (pull) button on the front of your opener. The corkscrew gradually removes the cork from the bottle.

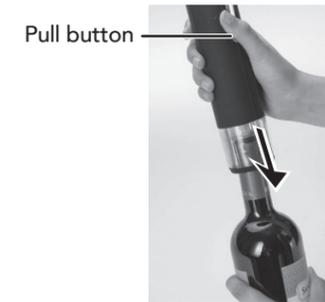

- 5 Lift your wine opener off the bottle.
- 6 Press and hold the ▲ (release) button on the front of your opener to release the cork.



Using the aerator pourer

The pourer aerates the wine as it flows through the pourer and oxygenates the wine to give it a better, richer flavor.

Note: Your aerator fits in the opening of a standard 750 ml wine bottle.

- Place the aerator pourer into the bottle neck snugly to allow the wine to pour out smoothly without splashing into a glass or other container.




Using the vacuum preserver and wine stoppers

The vacuum preserver and compatible wine stoppers help remove air from an open bottle for short-term storage.

Note: Your stopper fits in the opening of a standard 750 ml wine bottle.

- 1 Put one of the wine stoppers into the neck of the bottle. Make sure that the stopper is firmly seated and makes a seal around the entire neck.

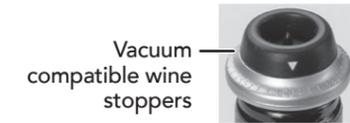

- 2 Place the vacuum preserver opening on top of the stopper, then press the pump handle up and down to vacuum the air out of the bottle.



- 3 When the pump handle becomes hard to operate, stop and remove the vacuum preserver from the wine stopper.
- 4 If the bottle is less than half full, repeat steps 2 through 3 to make sure that all the air has been removed.

Setting the storage date

Twist the top of the stopper with the ▼ symbol to select one of the numbers (1 through 31) to select the day of the month when you opened the wine.



Removing the stoppers from a sealed bottle

- 1 Press the pin in the center of the stopper top to balance air pressure.



- 2 Firmly hold the bottle with one hand, and gently ease the wine stopper out of the bottle with the other hand.
- 3 Rinse and store the wine stopper on the charging base.

CLEANING AND STORING

- Clean the exterior surface of your wine opener with a soft, damp cloth.
- Do not put your wine opener in water or a dish washer. You may damage your wine opener.
- Do not use abrasive cleaners or solvents because they may damage your wine opener.
- Do not try to clean any inside surfaces of your wine opener.
- We recommend that you always store your wine opener on the charging base so that it is fully charged and available to use at any time.
- Store your wine opener on its base in a clean, dry place when it is not in use.

TROUBLESHOOTING

My wine opener stops in the middle of removing the cork.

- If your wine opener can't open a bottle or release the cork, the battery may be low. Charge your opener for a few minutes, then try again.
- Recharge your wine opener.

The LED doesn't light.

- Make sure that the power adapter is connected correctly.
- Make sure that your wine opener is inserted correctly into the charging base.
- Make sure that the power outlet is working.

The cork broke off in the bottle.

- Use a manual corkscrew to remove the broken cork. If you can't manually remove the cork, push the cork into the bottle.

SPECIFICATIONS

Battery type: Built-in Ni-MH rechargeable

Voltage: 3.6 V

Adapter input: 100 V~240 V AC 50/60 Hz 0.5 A Max

Adapter output: 6 V 80 mA

Charging time: Approximately 16 hours

Number of bottles per charge: 30

BATTERY AND PRODUCT DISPOSAL INFORMATION

This wine set contains a unit which includes rechargeable batteries. Before you dispose of your wine set, especially the electronic wine opener, you should remove the battery pack and dispose of it responsibly.

To remove the battery pack, remove all four (4) screws from the rear cover of the wine opener. The battery pack is located within.

Dispose of it according to local regulation.

The WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) has been put in place to ensure that electronic and electrical equipment is recycled using the best available treatment, recovery, and recycling techniques to ensure human health and high-level environment protection. Your product is designed and manufactured with high quality materials and components which can be recycled and reused.



Do not mix products bearing the crossed-out bin symbol with your general household waste. Please recycle them in local electronic waste disposal facilities. Check with your local authorities or township for electronic recycling information.

IMPORTANT SAFEGUARDS

When using electrical appliances, always follow these safety precautions:

- The electronic wine opener is only intended to extract the corks from standard wine bottles.
- Do not operate, or attempt to operate, the electronic wine opener if either the AC/DC adapter or charging base stand have been damaged. This could result in electric shock. If the adapter or charging base have been damaged, they will need to be replaced by the manufacturer or a suitably qualified person. Do not attempt to modify or repair this device on your own.
- Do not place or store this appliance near an open flame, cooking or heating appliances, or any similarly hot surface.
- This appliance is not intended for use in wet or damp conditions, as this creates the risk of electric shock.
- Always make sure that the power cord is positioned so that it will not get damaged or create a tripping hazard.
- Use only the AC/DC adapter and the charging base supplied with your unit. Do not attempt to use other parts with this device.
- Do not immerse this unit in water or any other liquid.
- This product is intended for indoor use only. Do not expose the wine opener or the charging base to rain or other extreme outdoor conditions or environments.
- Never force the wine opener or preserver onto a bottle, nor should you attempt to speed up the mechanism. The cork remover always works best when operated at its intended speed.
- Do not touch or adjust the electronic wine opener mechanism or the corkscrew spiral. You should only hold the cork remover by its plastic housing, or else you could risk electric shock or other severe injury.
- This appliance contains a rechargeable battery. Do not dispose of this product on a fire, as this may cause an explosion.
- To avoid electric shock, do not open the casing. There are no user-serviceable parts inside.
- This appliance should not be used by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised at all times, or have received extensive instruction and training on how to use this device by a person responsible for their safety.

WARNING: The corkscrew is sharp. Keep fingers and other body parts, appendages, and utensils away from the operating end of the wine opener.

ONE-YEAR LIMITED WARRANTY

CONTACT MODAL:

For customer support, call 1-800-499-3402 (U.S. and Canada)

www.bestbuy.com/modal

MODAL is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

Made in China