


DIMENSIONS

Embedded microwave oven

PRODUCT DIMENSIONS

MODEL #		KMBS724SPS	
Unit of Measurement		in	cm
A1	Overall width 24"	23 1/2	59.5
A2	Overall width 27"	26 13/16	67.9
A3	Overall width 30"	29 11/16	75.4
B	Overall height	17 15/16	45.58
C	Height of the door	13 7/16	34.15
D	Width of oven body	22	55.88
E	Depth without door	21 5/8	54.88
F	Depth with door	22 7/16	56.98
G	Depth with door handle	24 3/8	61.85
H	Depth with door open	35 1/8	89.25
I	Height of oven body	17 1/2	44.43

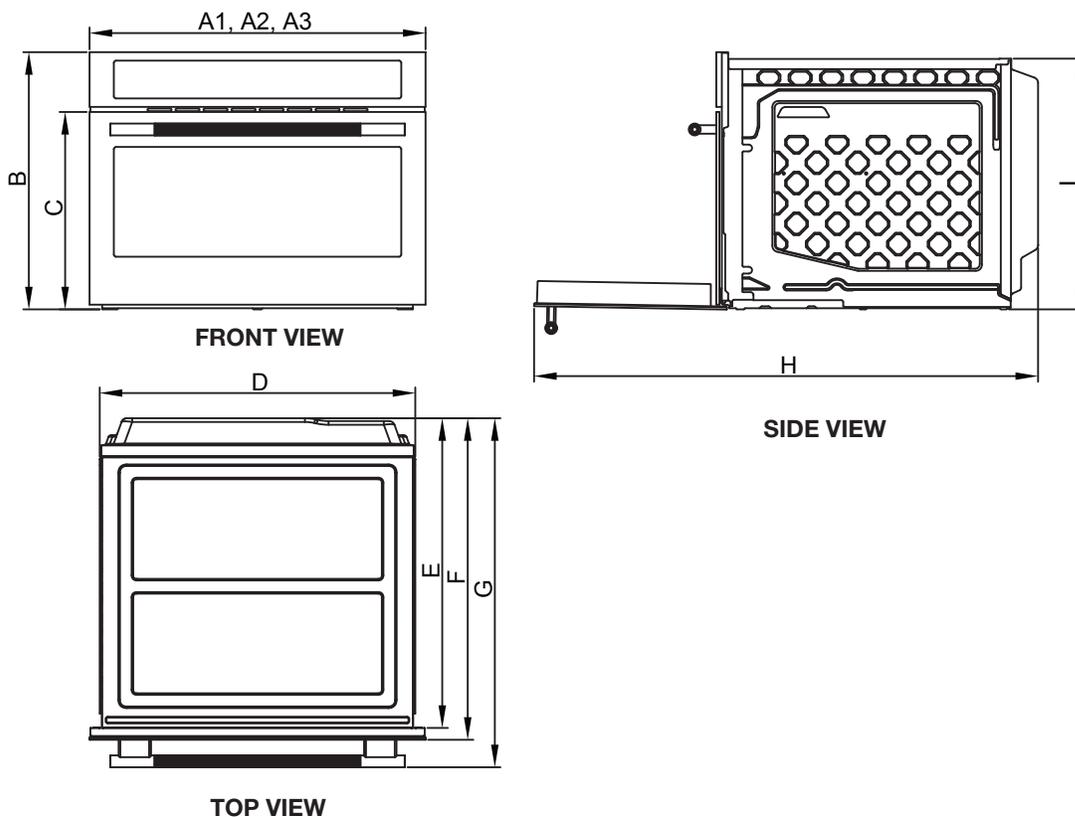


IMPORTANT: Dimensional specifications are provided for planning purposes only. Do not make any cutouts based on this information. Refer to the Installation Guide before selecting cabinetry, verifying electrical/gas connections, making cutouts or beginning installation. All Whirlpool® appliances are appropriately UL, CUL or CSA approved.

DIMENSIONS

MICROWAVE INTERIOR CAVITY DIMENSIONS

MODEL #		KMBS724SPS	
Unit of Measurement		in	cm
J	Cavity Height	10 3/8	26.3
L	Cavity Width	18 1/8	46
M	Cavity Depth	17 1/16	43.3

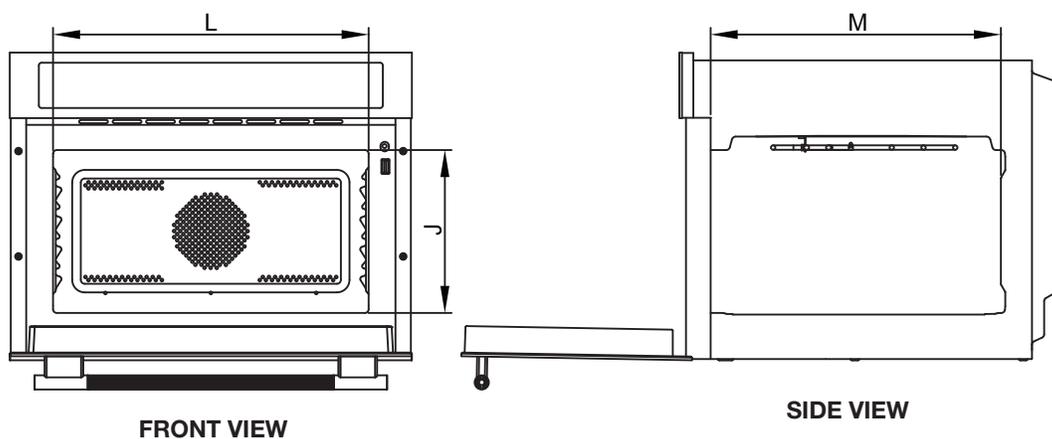


IMPORTANT: Dimensional specifications are provided for planning purposes only. Do not make any cutouts based on this information. Refer to the Installation Guide before selecting cabinetry, verifying electrical/gas connections, making cutouts or beginning installation. All Whirlpool® appliances are appropriately UL, CUL or CSA approved.

DIMENSIONS

OPENING/CLEARANCE DIMENSIONS

MODEL #		KMBS724SPS	
Opening/Clearance Measurement		in	cm
A	Width of 24" cabinet	22 1/8	56.2
B	Width of 27" cabinet	25 5/16	64.2
C	Width of 30" cabinet (min.~max.)	25 5/16~28 3/16	64.2~71.5
D	Height of cabinet	17 3/4	45.2
E	Depth of upper cabinet (min.) (Flush receptacle)	22 7/8	58
E	Depth of upper cabinet (min.) (Non-flush receptacle)	25 1/2	64

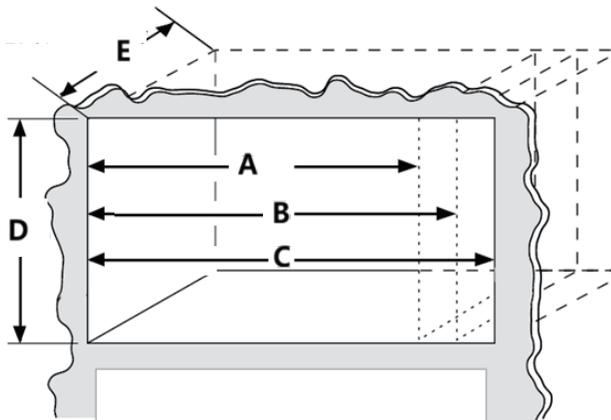

ELECTRICAL REQUIREMENTS

120 V, 60 Hz, AC only, 15 or 20 A fused, electrical supply is required. A time-delay fuse or dedicated circuit is recommended. Use a grounded 3 prong outlet. Do not use an extension cord.

LOCATION REQUIREMENTS

- This is a built-in appliance. Do not use as countertop microwave oven.
- Complete enclosure around the recessed portion of the microwave oven.
- This microwave oven must be installed into a wood cabinetry. The location must provide:
 1. Cutout opening that is plumb and square.
 2. Cutout floor that is solid, level and flush with bottom of cabinet cutout.
 3. Support for weight of at least 150 lbs (68 kg), which includes microwave oven and items placed inside.


IMPORTANT: Dimensional specifications are provided for planning purposes only. Do not make any cutouts based on this information. Refer to the Installation Guide before selecting cabinetry, verifying electrical/gas connections, making cutouts or beginning installation. All Whirlpool® appliances are appropriately UL, CUL or CSA approved.

DIMENSIONES


Horno de microondas empotrado

DIMENSIONES DEL PRODUCTO


MODELO #		KMBS724SPS	
Unidad de Medida		pulg (in)	cm
A1	Ancho total 24"	23 1/2	59.5
A2	Ancho total 27"	26 13/16	67.9
A3	Ancho total 30"	29 11/16	75.4
B	Altura total	17 15/16	45.58
C	Altura de la puerta	13 7/16	34.15
D	Ancho del cuerpo del horno	22	55.88
E	Profundidad sin puerta	21 5/8	54.88
F	Profundidad con puerta	22 7/16	56.98
G	Profundidad con manija de la puerta	24 3/8	61.85
H	Profundidad con la puerta abierta	35 1/8	89.25
I	Altura del cuerpo del horno	17 1/2	44.43

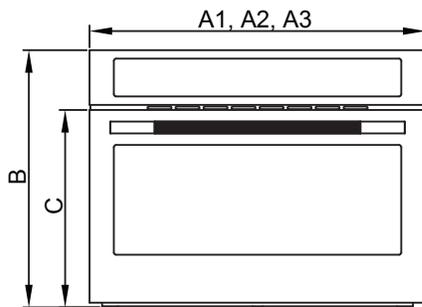

VISTA FRONTAL

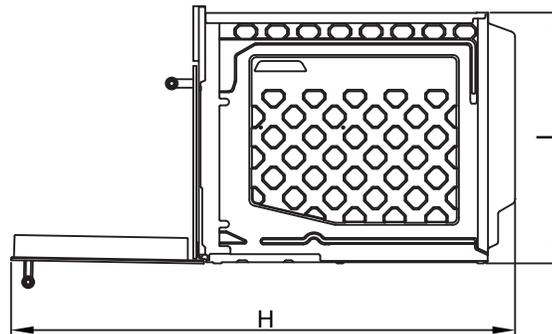

VISTA LATERAL

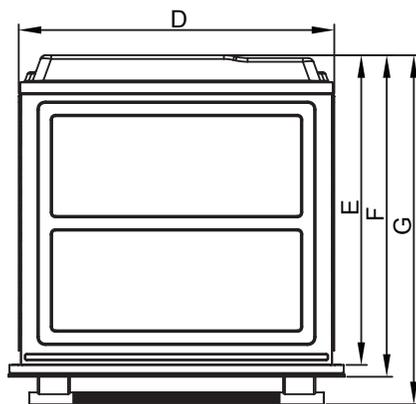

VISTA SUPERIOR


IMPORTANTE: Las especificaciones dimensionales se proporcionan únicamente con fines de planificación.

No realice ningún corte basándose en esta información. Consulte la Guía de Instalación antes de seleccionar muebles, verificar conexiones eléctricas/gas, realizar cortes o comenzar la instalación. Todos los electrodomésticos Whirlpool® están debidamente aprobados por UL, CUL o CSA.

DIMENSIONES

DIMENSIONES DE LA CÁMARA INTERIOR DEL HORNO DE MICROONDAS

MODELO #		KMBS724SPS	
Unidad de Medida		pulg (in)	cm
J	Altura de la Cámara	10 3/8	26.3
L	Ancho de la Cámara	18 1/8	46
M	Profundidad de la Cámara	17 1/16	43.3

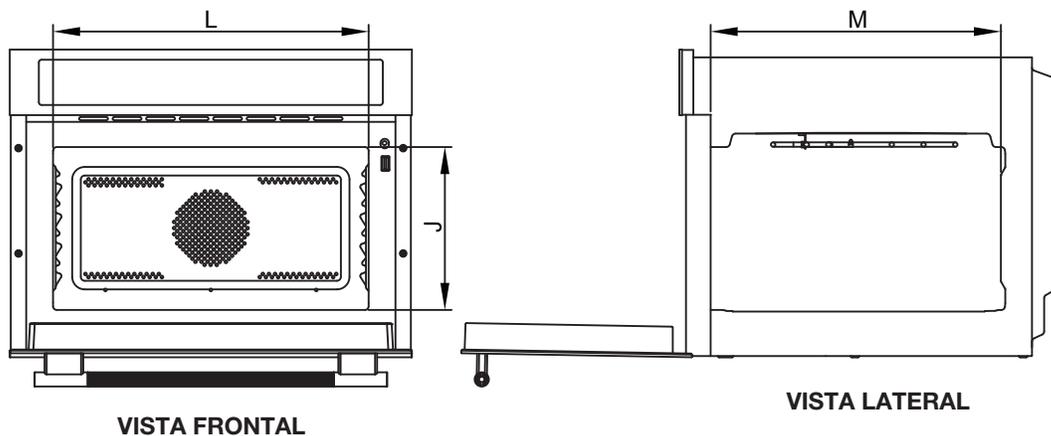


IMPORTANTE: Las especificaciones dimensionales se proporcionan únicamente con fines de planificación.
No realice ningún corte basándose en esta información. Consulte la Guía de Instalación antes de seleccionar muebles, verificar conexiones eléctricas/gas, realizar cortes o comenzar la instalación. Todos los electrodomésticos Whirlpool® están debidamente aprobados por UL, CUL o CSA.

DIMENSIONES

Dimensiones de Apertura/Clarencia

MODELO #		KMBS724SPS	
Medida de Apertura/Clarencia		pulg (in)	cm
A	Ancho del Gabinete de 24"	22 1/8	56.2
B	Ancho del Gabinete de 27"	25 5/16	64.2
C	Ancho del Gabinete de 30"(mín.~máx.)	25 5/16~28 3/16	64.2~71.5
D	Altura del Gabinete	17 3/4	45.2
E	Profundidad del Gabinete Superior (mín.) (Tomacorriente Alineado)	22 7/8	58
E	Profundidad del Gabinete Superior (mín.) (Tomacorriente No Alineado)	25 1/2	64

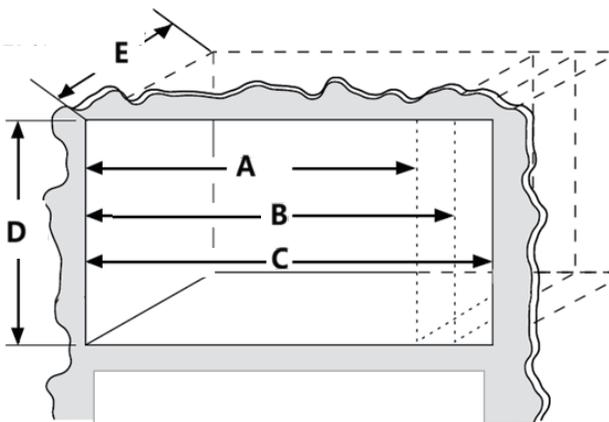

REQUISITOS ELÉCTRICOS

Se requiere una alimentación eléctrica de 120 V, 60 Hz, solo CA, con fusible de 15 o 20 A. Se recomienda un fusible con retardo o un circuito dedicado. Utilice una toma de corriente con tres patas aterciopeladas. No utilice un cable de extensión.

REQUISITOS DE UBICACIÓN

- Este es un electrodoméstico empotrado. No lo utilice como horno de microondas de encimera.
- Cierre completo alrededor de la porción encastrada del horno de microondas.
- Este horno de microondas debe instalarse en muebles de madera. La ubicación debe proporcionar:

IMPORTANTE: Las especificaciones dimensionales se proporcionan únicamente con fines de planificación.

No realice ningún corte basándose en esta información. Consulte la Guía de Instalación antes de seleccionar muebles, verificar conexiones eléctricas/gas, realizar cortes o comenzar la instalación. Todos los electrodomésticos Whirlpool® están debidamente aprobados por UL, CUL o CSA.