


INSIGNIA™

USER GUIDE

47" Computer Desk

NS-ODS3

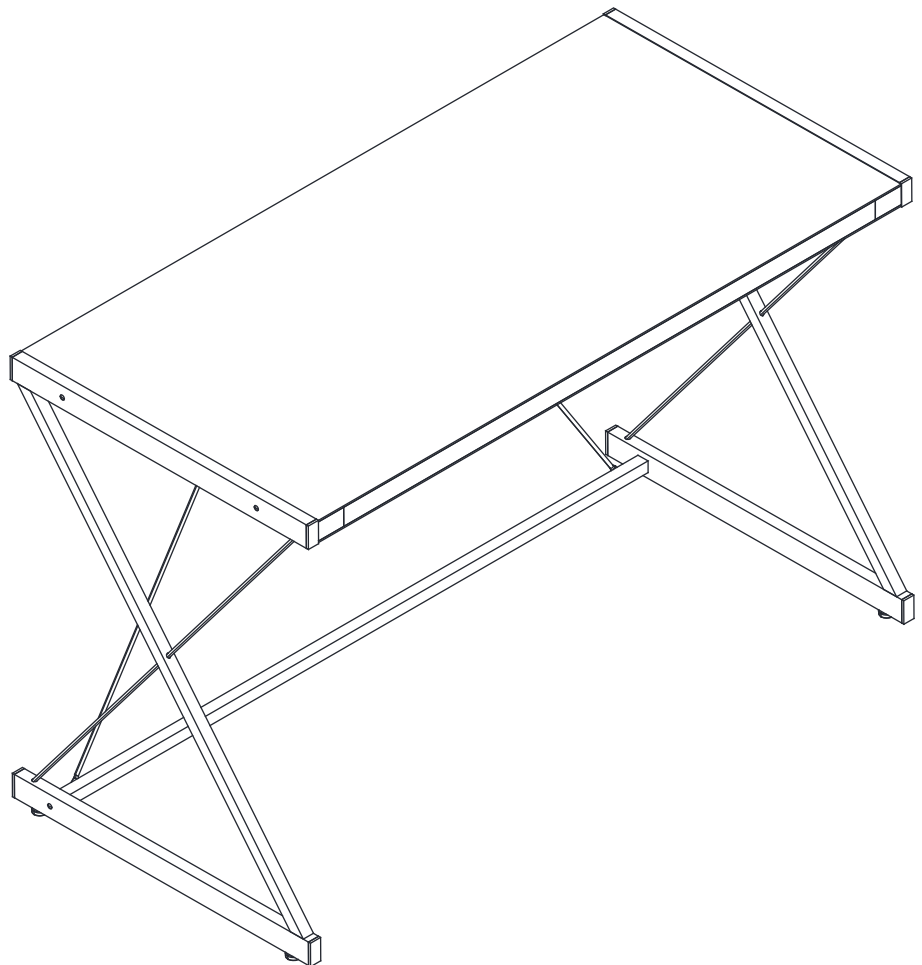

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
Safety information	2
Features	3
Dimensions.....	3
Parts included	3
Hardware included.....	4
Tools needed	4
Preparing to assemble your desk	4
Assembling your desk.....	5
STEP 1: Attach the leg frames and bottom support bar	5
STEP 2: Attach the left and right support bars and wall straps.....	6
STEP 3: Secure your desk to the wall	7
STEP 4: Leveling your desk	8
Cleaning your desk.....	9
Specifications.....	9
Troubleshooting	9
ONE-YEAR LIMITED WARRANTY	10

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-ODS3 represents the state of the art in desk design and is designed for reliable and trouble-free performance.

Safety information




WARNING: Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items.

- This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause serious injury.
- Do not allow children to climb or jump on furniture due to possible accident, injury, or death.
- Never push or pull furniture that is not designed with casters as this may cause injury or damage to the unit.


Features

- Metal legs help to provide stability
- Holds up to 70 lbs.


 

 

Dimensions

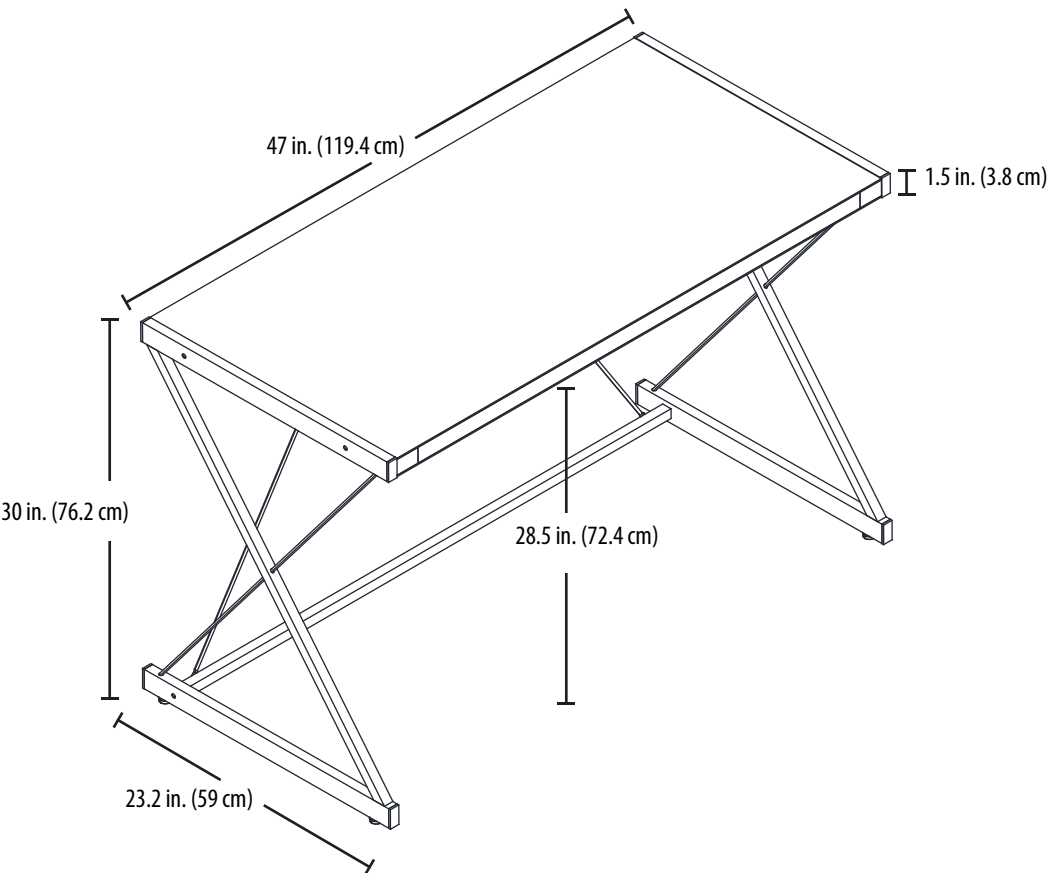

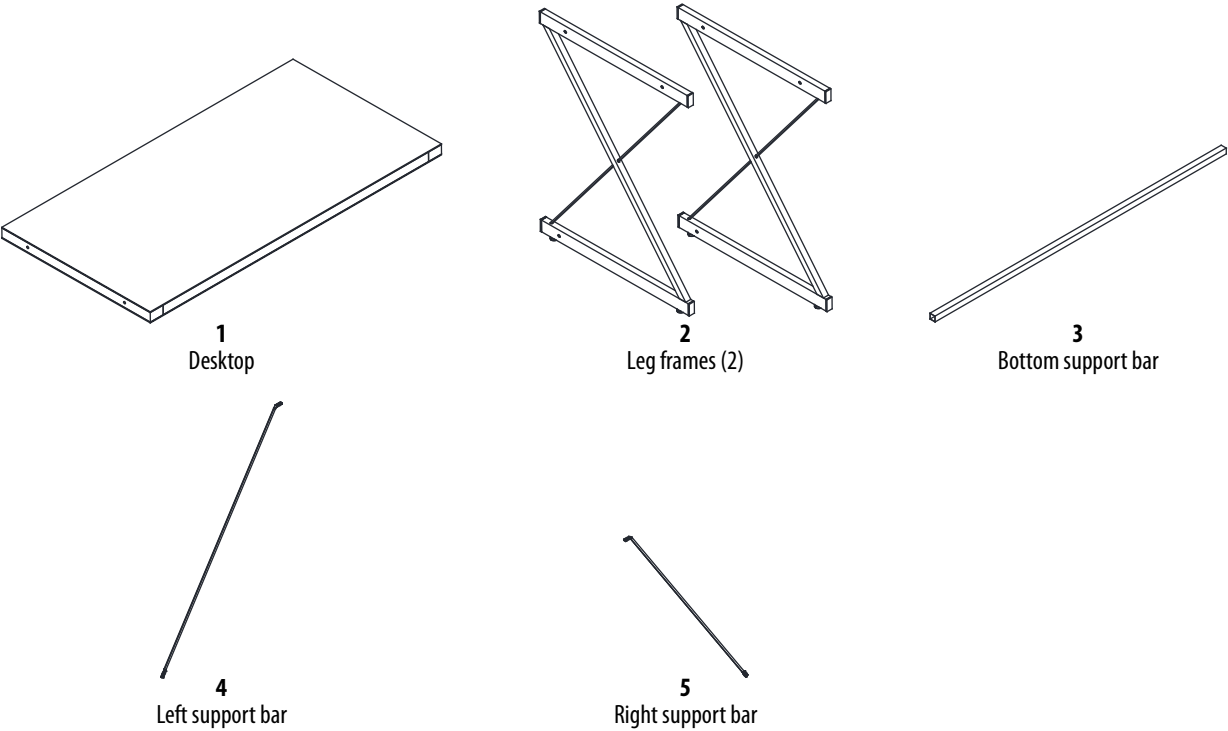


Parts included

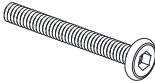

Hardware included


LABEL	HARDWARE	QTY.
A	 M6 × 45 mm bolts	6
B	 Anchors	2
C	 Ø4 × 40 mm screws	2
D	 M6 × 15 mm bolts	2
E	 Ø4 × 25 mm screws	4

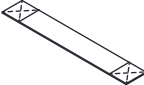
LABEL	HARDWARE	QTY.
F	 Hex wrench	1
G	 Washers	4
H	 Wall straps	2

Tools needed

CAUTION: Do not use a drill to assemble your desk. The drill should only be used to secure your desk to the wall (step 3).

 Phillips screwdriver (PH2)

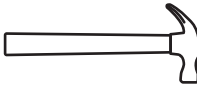 Hammer

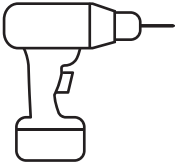
Drill with 1/4 in. (6 mm) bit
(For wall mounting only)


Preparing to assemble your desk

- 1 Follow the assembly instructions carefully.
- 2 Make sure that all parts and hardware are included.
- 3 To prevent product damage, assemble your desk on top of the box.
- 4 Have another person help you with lifting and assembly.
- 5 For the best results, do not fully tighten the screws until you have assembled all the other parts.

Assembling your desk


STEP 1: Attach the leg frames and bottom support bar

You need:

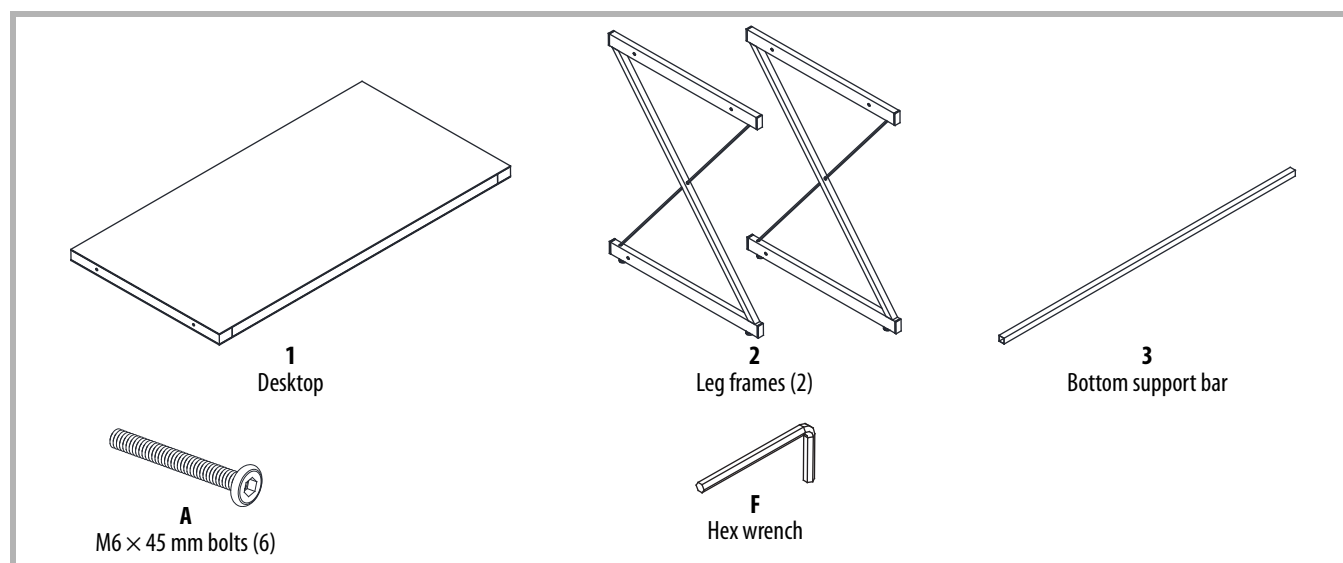


- 1 Align a leg frame (2) with the holes on a side of the desktop, making sure that the hole near the foot is toward the back of the desktop.
- 2 Insert two M6 × 45 mm bolts (A) through the leg frame and into the desktop (1) and tighten with the hex wrench (F).
- 3 Repeat steps 1–2 to attach the other leg frame.
- 4 Align the bottom support bar (3) with the holes on the bottom of the leg frames, then secure with two M6 × 45 mm bolts (A) using the hex wrench (F). Make sure that the holes on the side of the support bar face the back of the desktop (as shown).

Note: If the bottom support bar does not fit between the two leg frames, loosen the bolts to let the pieces move more freely.

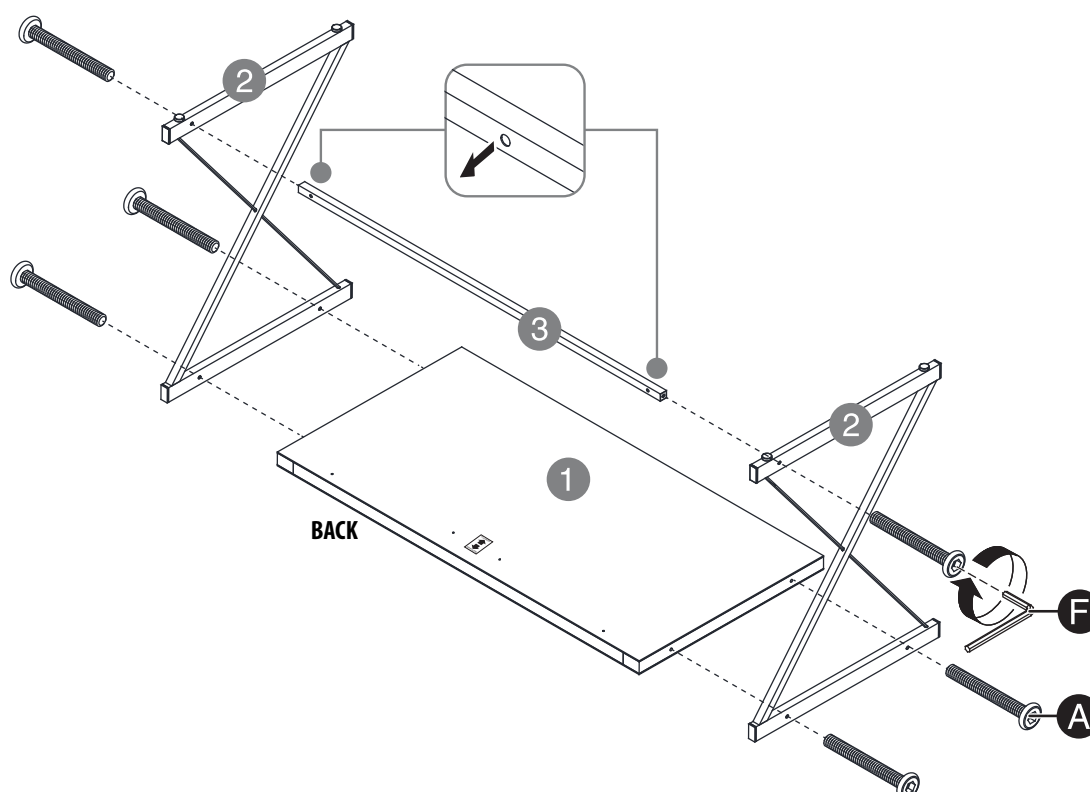



STEP 2: Attach the left and right support bars and wall straps

You need:

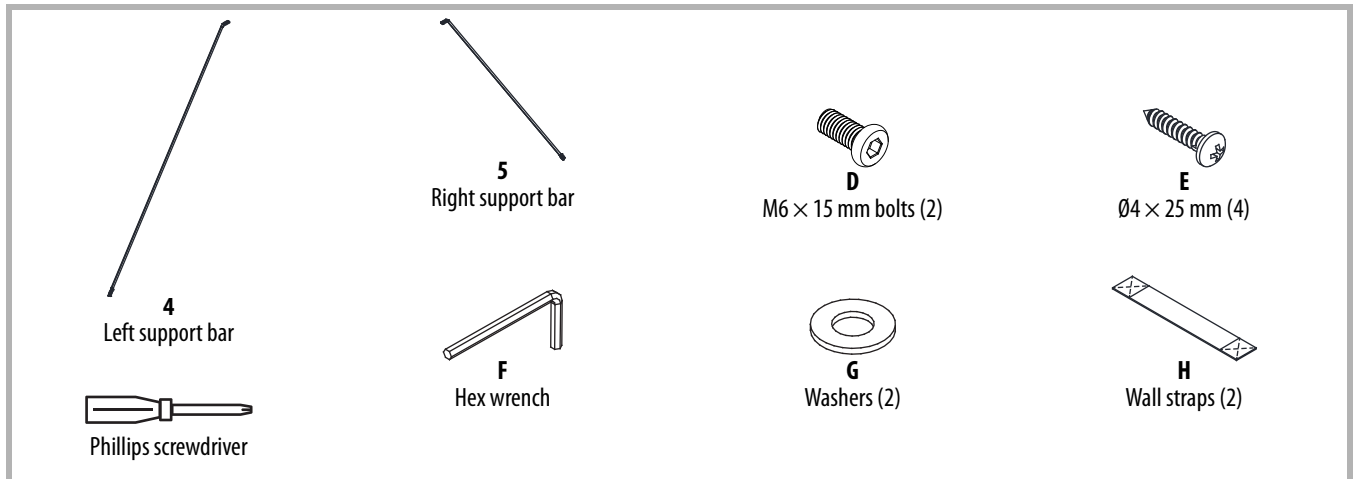


- 1 Align the straight end of the left support bar (4) with the hole on the left side of the bottom support bar (3), then secure with an M6 × 15 mm bolt (D) using the hex wrench (F). Do not fully tighten the bolt.
- 2 Align the angled end of the left support bar (4) with the hole in the desktop, then secure with a Ø4 × 25 mm screw (E) using a Phillips screwdriver.
- 3 Repeat steps 1–2 to attach the right support bar (5) on the other side of your desk, then fully tighten the bolts and screws on both support bars.
- 4 Align the wall straps (H) with the two holes along the back edge of the desktop (1), then secure with Ø4 × 25 mm screws (E) and washers (G) using a Phillips screwdriver.

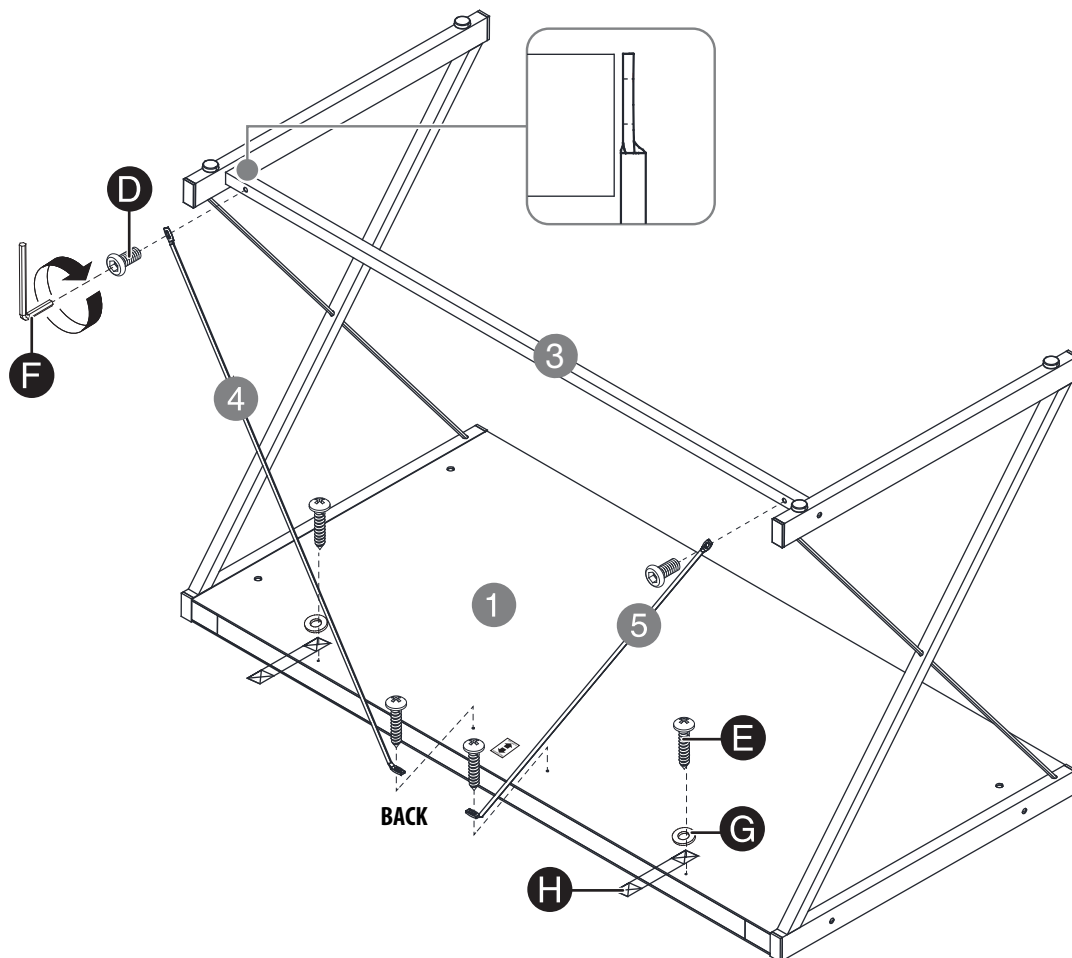

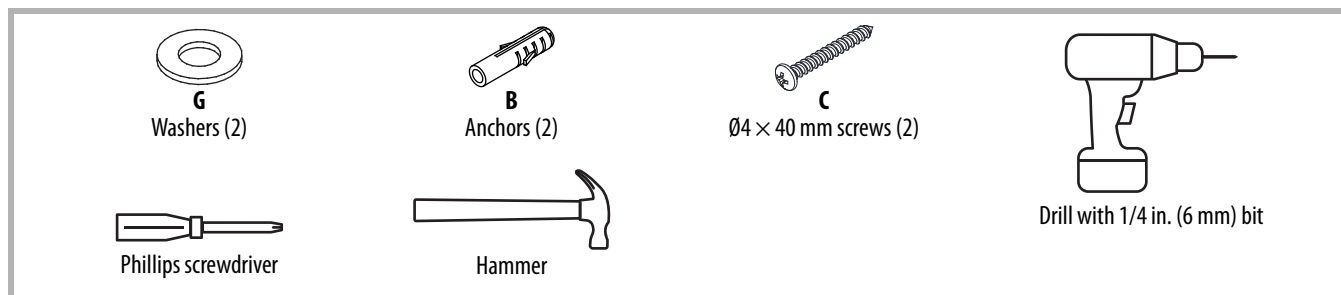STEP 3: Secure your desk to the wall**You need:****WARNING:**


- DO NOT SKIP THIS STEP. Securing your desk protects children and pets from accidental tip-overs and injury.
- The included screws (**J**) and anchors (**I**) are intended for securing your desk to drywall only. If your wall is made of a different material, you must purchase appropriate anchors and screws separately.

- 1 Position your desk near a wall.
- 2 Drill two 1/4 in. (6 mm) holes in the wall within reach of the wall straps (**H**) attached to the back of your desk.
- 3 Insert the anchors (**B**) into the holes and gently tap them with a hammer until they are flush with the wall.
- 4 Align the ends of the wall straps (**H**) with the anchors, then secure with the $\varnothing 4 \times 40$ mm screws (**C**) and washers (**G**) using a Phillips screwdriver.

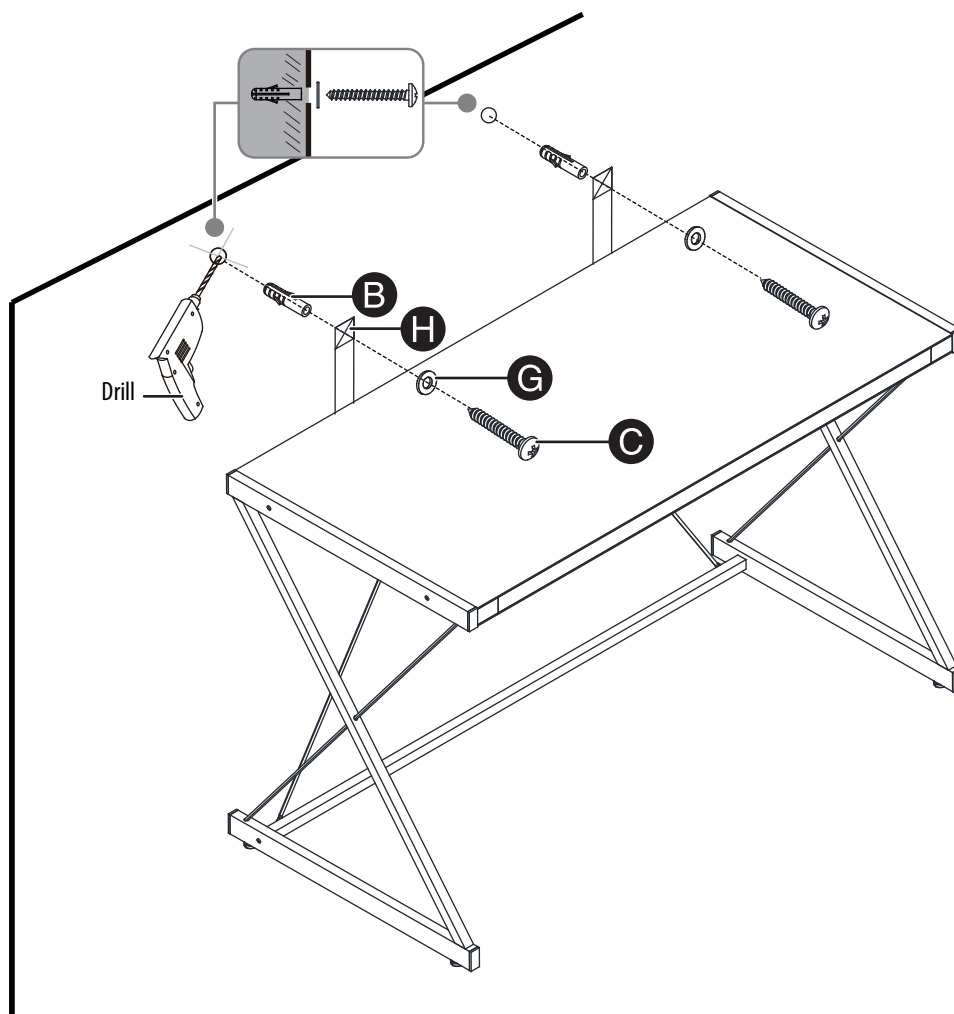

STEP 4: Leveling your desk

- You can adjust the desk's feet to level the desk.

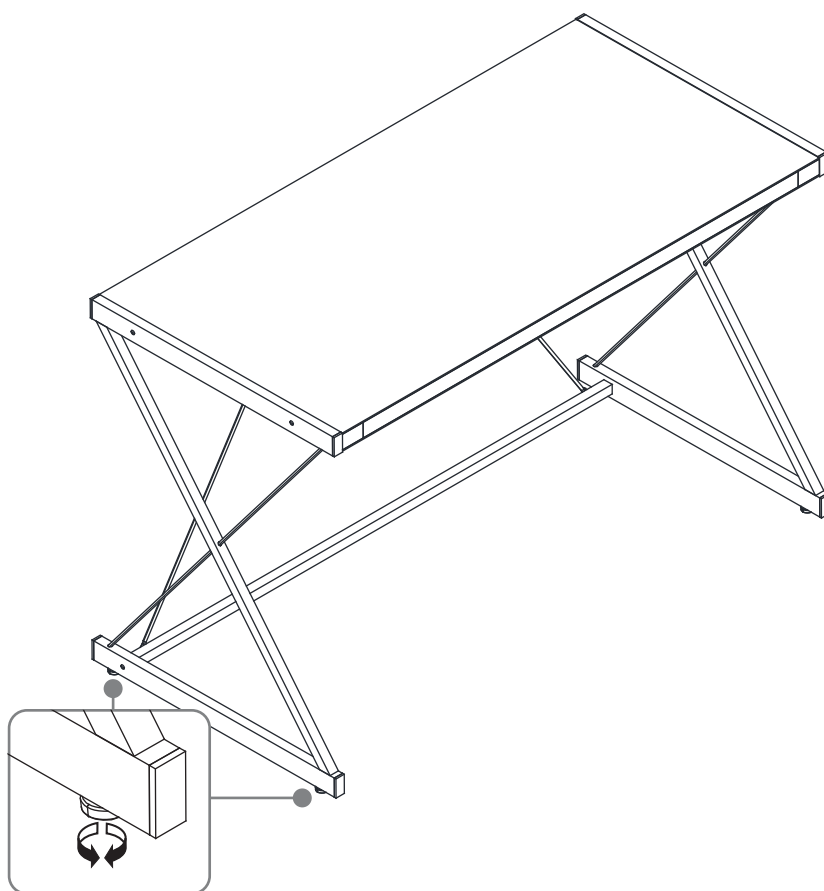

Cleaning your desk

- Clean the surface of your desk with a duster or damp cloth only.
- Do not use abrasive cleaners.

Specifications

Dimensions (H × W × D)	30 × 47 × 23.2 in. (76.2 × 119.4 × 59 cm)
Weight	23.3 lbs. (10.6 kg)
Maximum supported weight	70 lbs. (31.8 kg)

Troubleshooting

PROBLEM	POSSIBLE SOLUTIONS
My desk wobbles	<ul style="list-style-type: none">• Your desk comes equipped with adjustable feet on the bottoms of the leg frames (2). To eliminate wobble and level your desk, see STEP 4: Leveling your desk on page 8.• Place your desk on a solid, sturdy surface. Carpet may cause your desk to wobble.
A piece won't fit	Loosen screws to let the pieces move more freely. After your desk is assembled, fully tighten the screws.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2022 Best Buy. All rights reserved.

INSIGNIA™

For product inquiries, please contact us with the information below:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.