



Installing your InvisiShell™

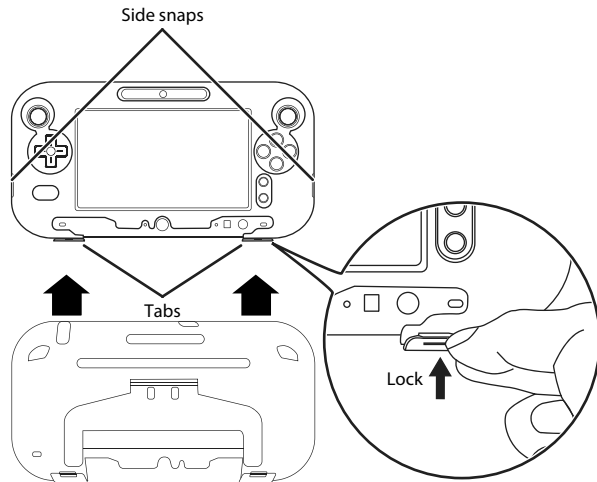

- 1 Disconnect the Wii U GamePad.
- 2 Open the InvisiShell, then orient and align the GamePad with the InvisiShell.
- 3 Gently press the GamePad into the InvisiShell.
- 4 Close the top half of the InvisiShell, then press down on the right side of the InvisiShell until the side snap clicks into place. Repeat on the left side.
- 5 While firmly holding the GamePad, press firmly up on each tab to lock the InvisiShell closed.

Removing your InvisiShell

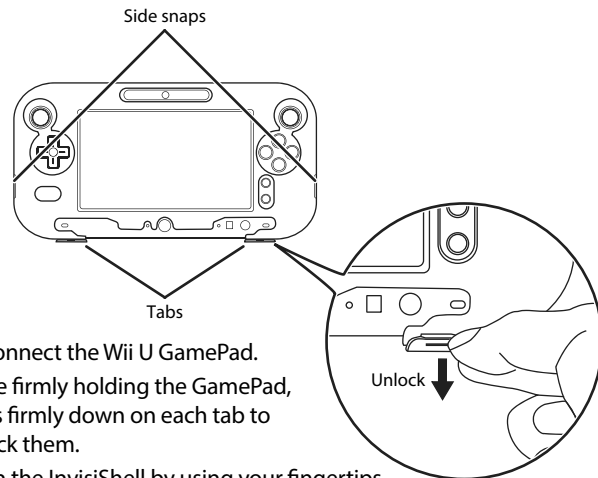

- 1 Disconnect the Wii U GamePad.
- 2 While firmly holding the GamePad, press firmly down on each tab to unlock them.
- 3 Open the InvisiShell by using your fingertips to slowly separate the InvisiShell on the right side until the side snap releases. Repeat this on the left side.
- 4 To remove the GamePad, firmly hold the InvisiShell and gently press the ZR or the ZL button to lift the GamePad out.

90-day limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service, call 1-800-620-2790
www.rocketfishproducts.com

™ and © 2012 Nintendo. Licensed by Nintendo.

ROCKETFISH is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2012 BBY Solutions, Inc. All Rights Reserved.