

Barbie
DreamHouse®

INSTRUCTIONS



Dolls, car, fashion not included.



3+

Adult assembly required. Colors and decorations may vary.
Requires 4 AAA (LR03) alkaline batteries (not included). Dispose of batteries safely.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



TO VIEW VIDEO ASSEMBLY, PLEASE VISIT
SERVICE.MATTEL.COM

 **FHY73/FHY74**



 **WARNING:**
CHOKING HAZARD - Small parts.
Not for children under 3 years.


Adult assembly required. Colors and decorations may vary.
Requires 4 AAA (LR03) alkaline batteries (not included).
Dispose of batteries safely.

ASSEMBLY


1




2

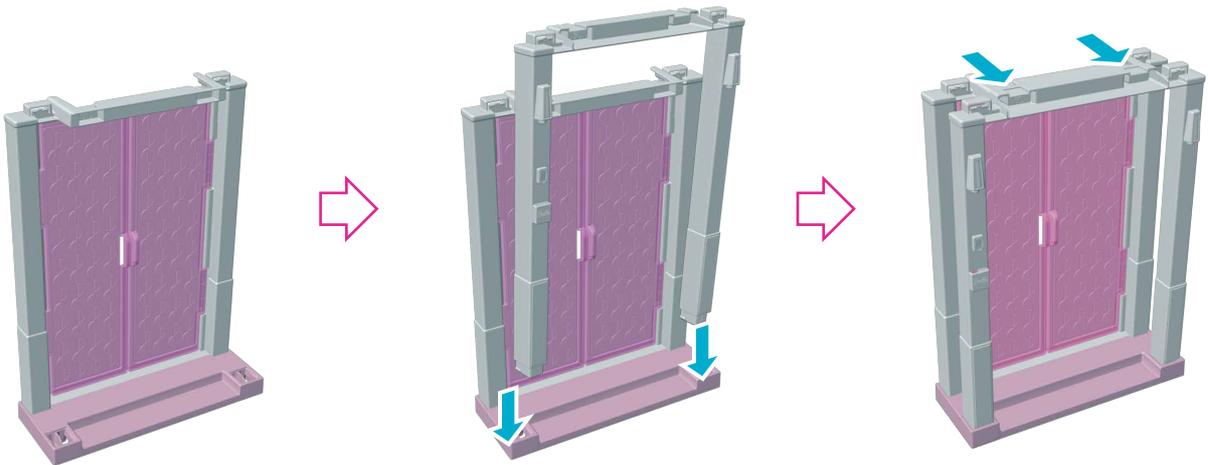

3

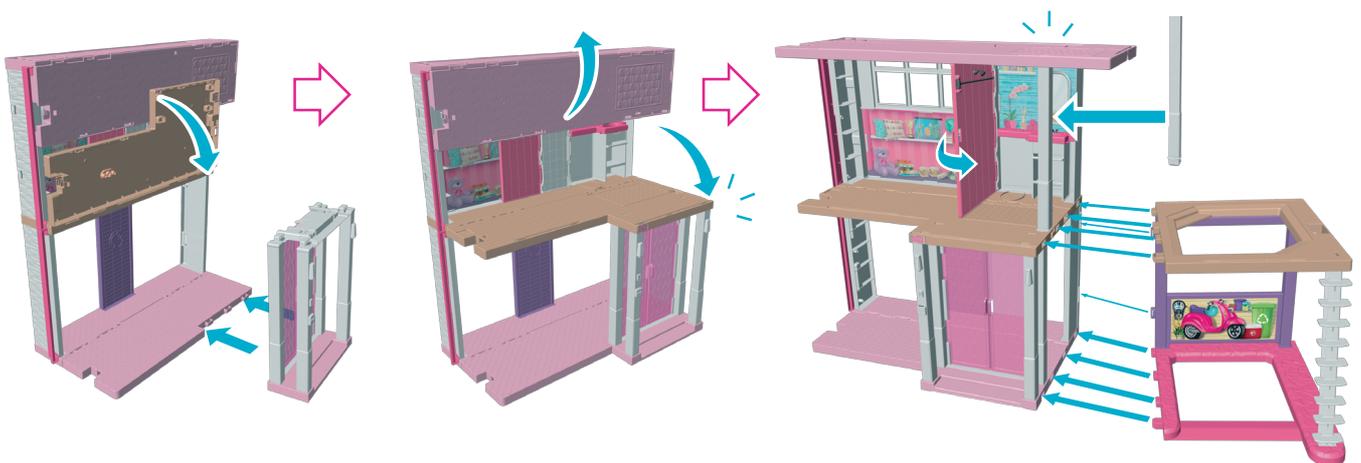


4

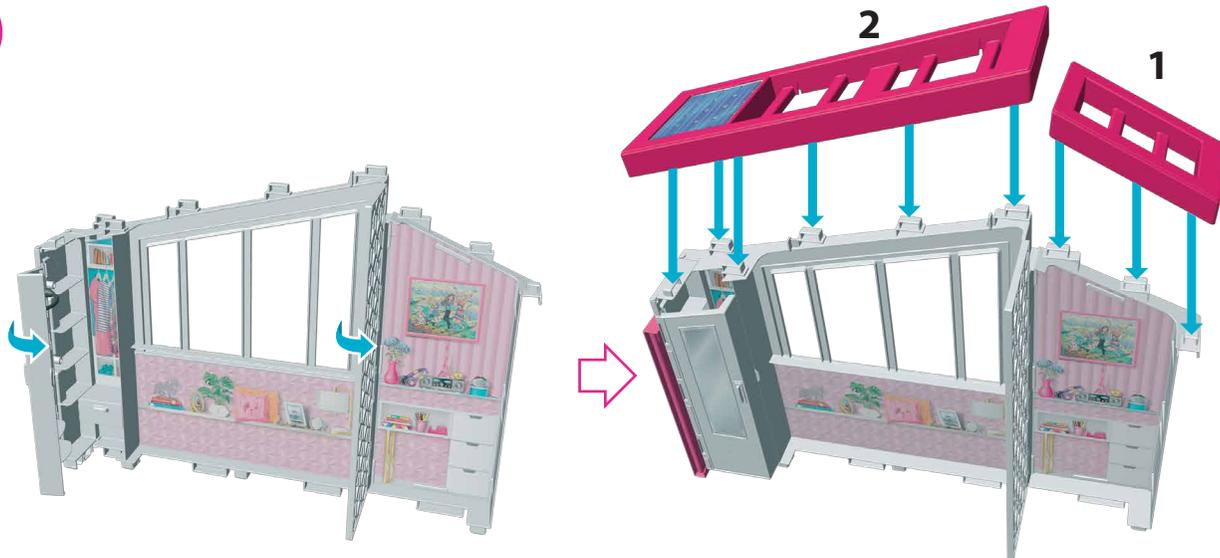


5




6

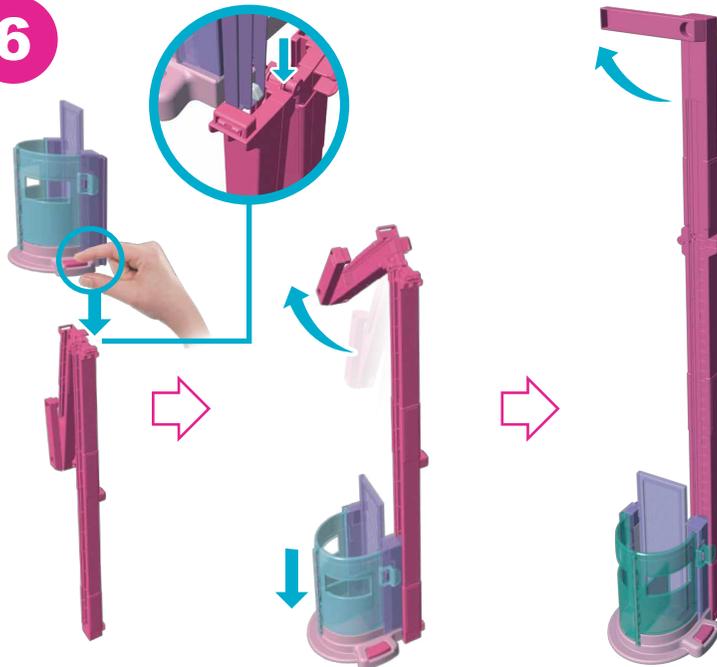


7

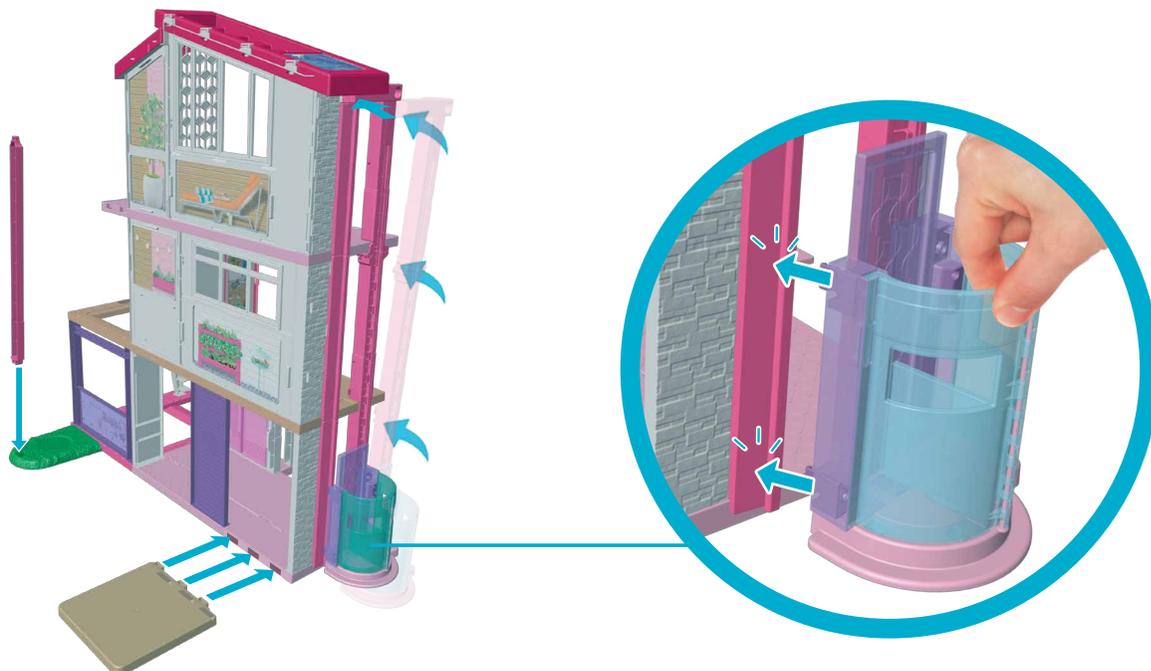


8

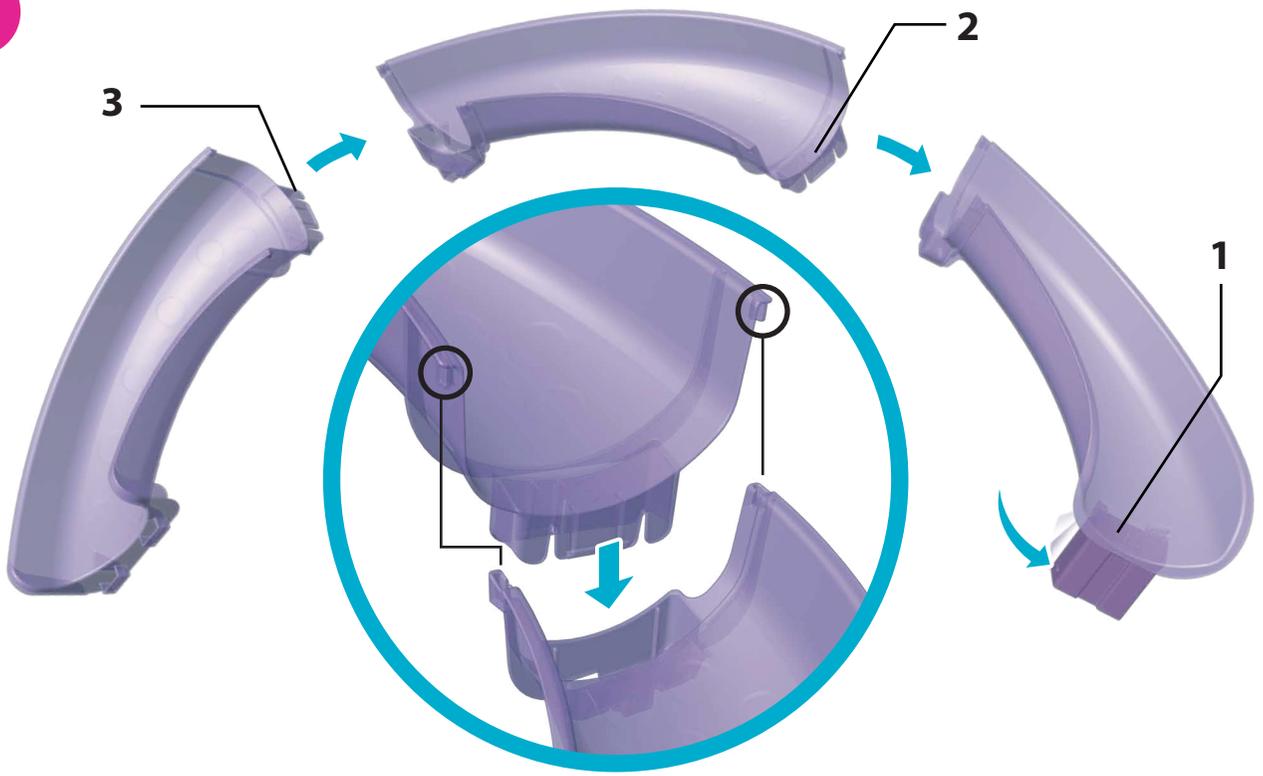

9

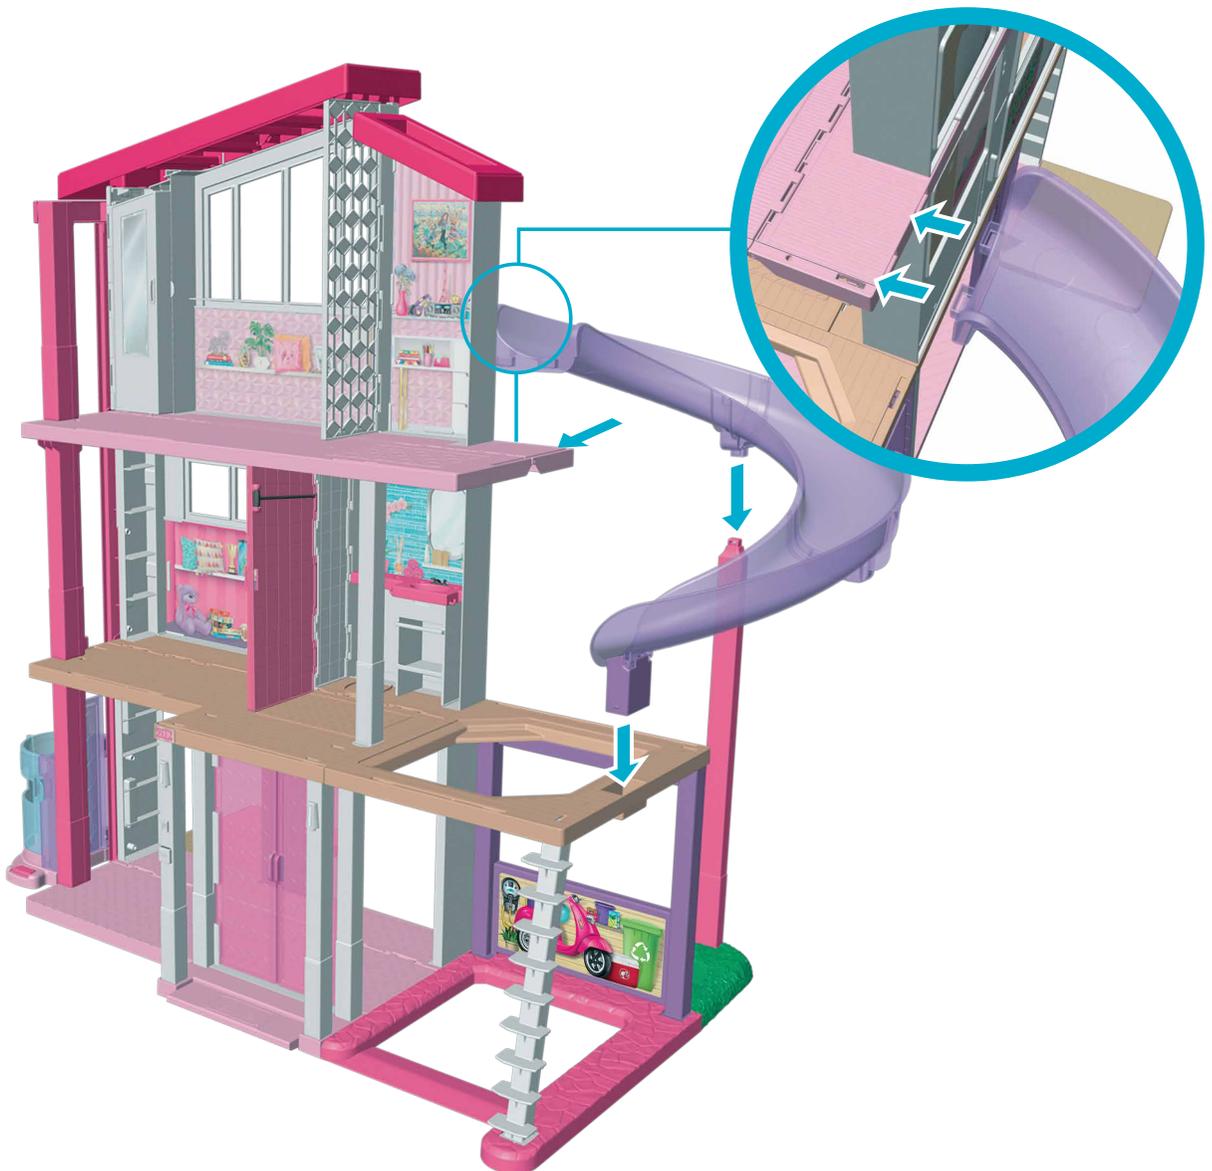

10

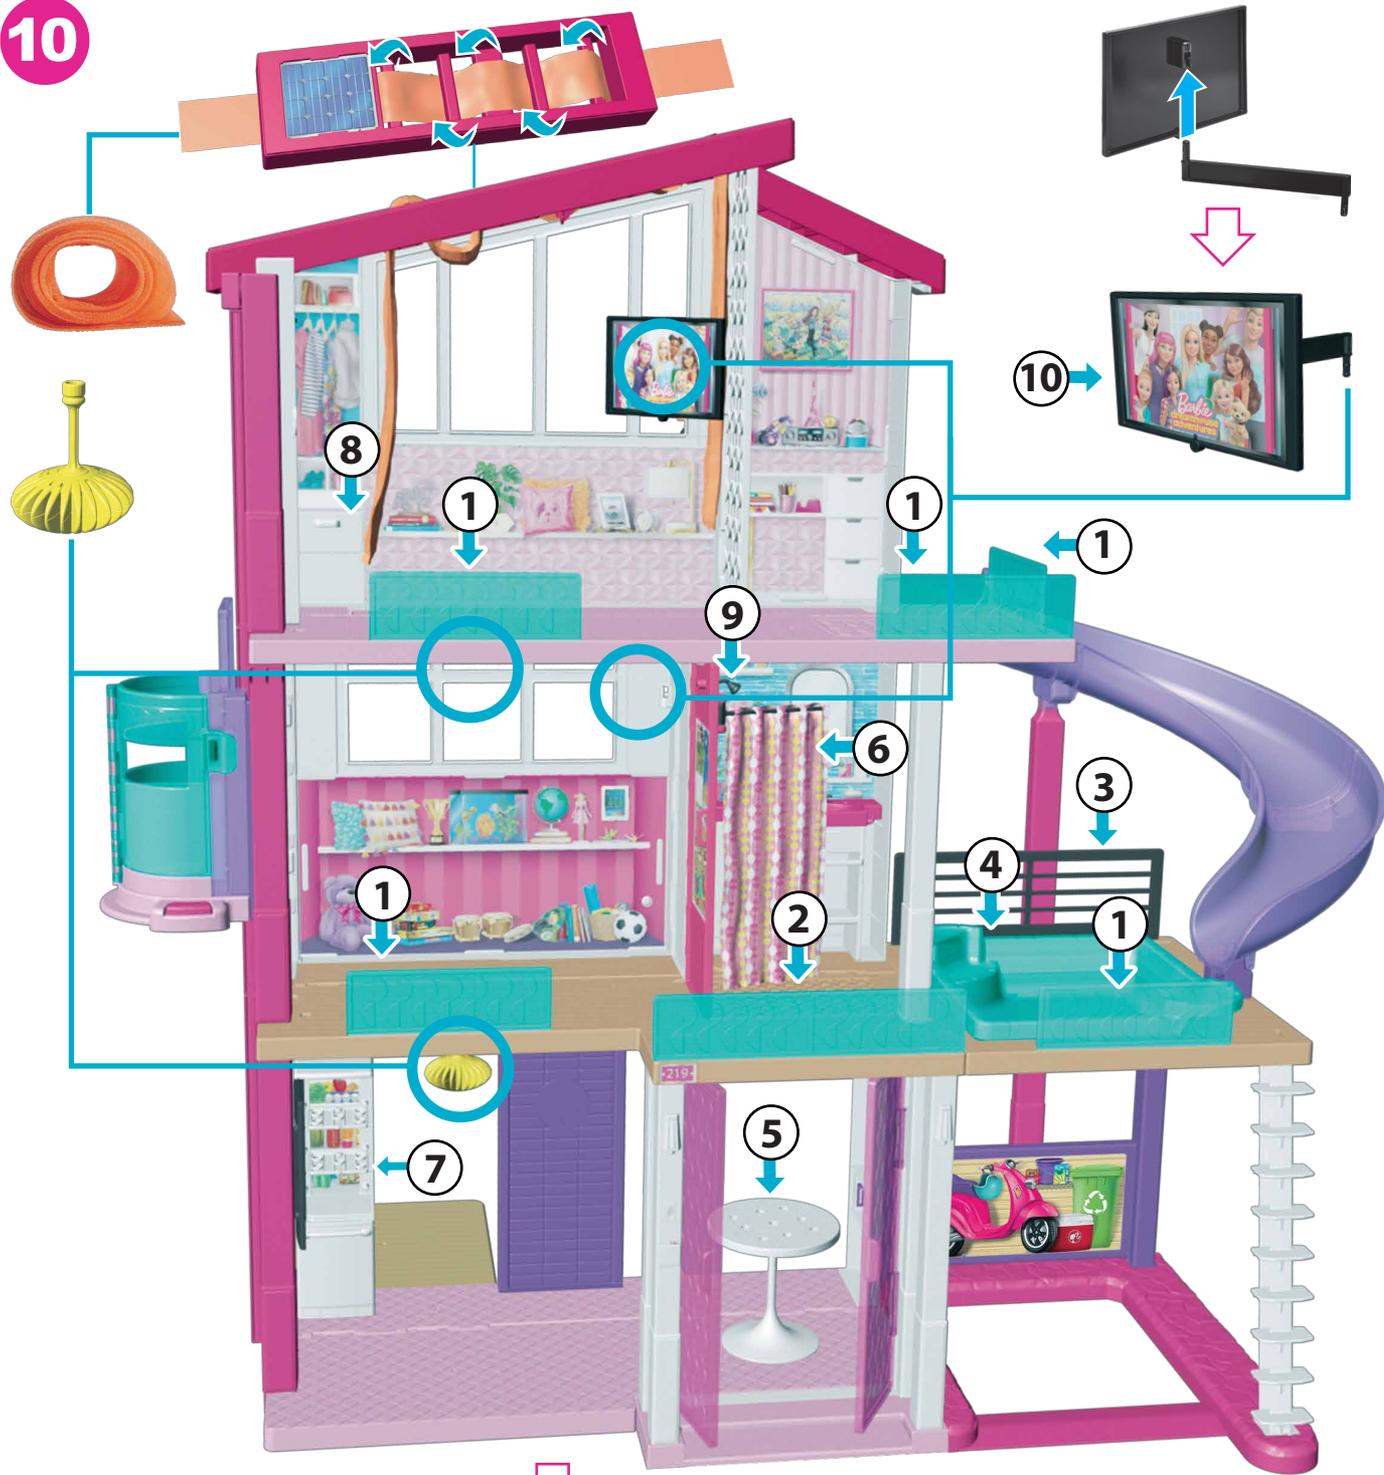

- ①
- ①
- ①
- ①
- ①

- ②
- ③
- ④




- ⑤
- ⑥

- ⑦
- ⑧
- ⑨




10

TRANSFORMATIONS

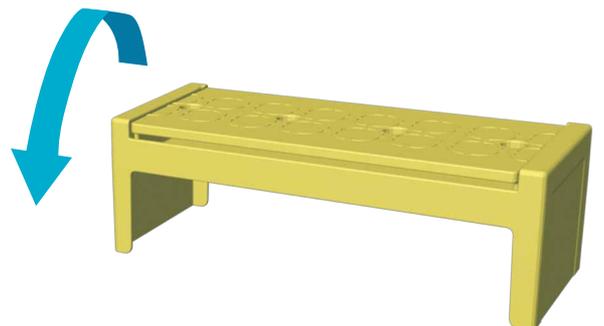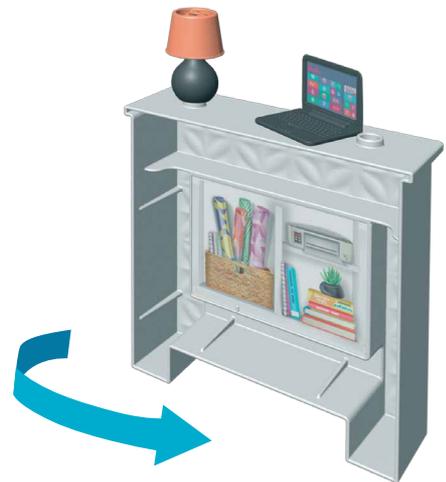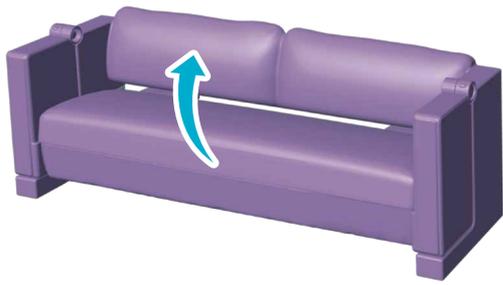

BATTERY PLACEMENT

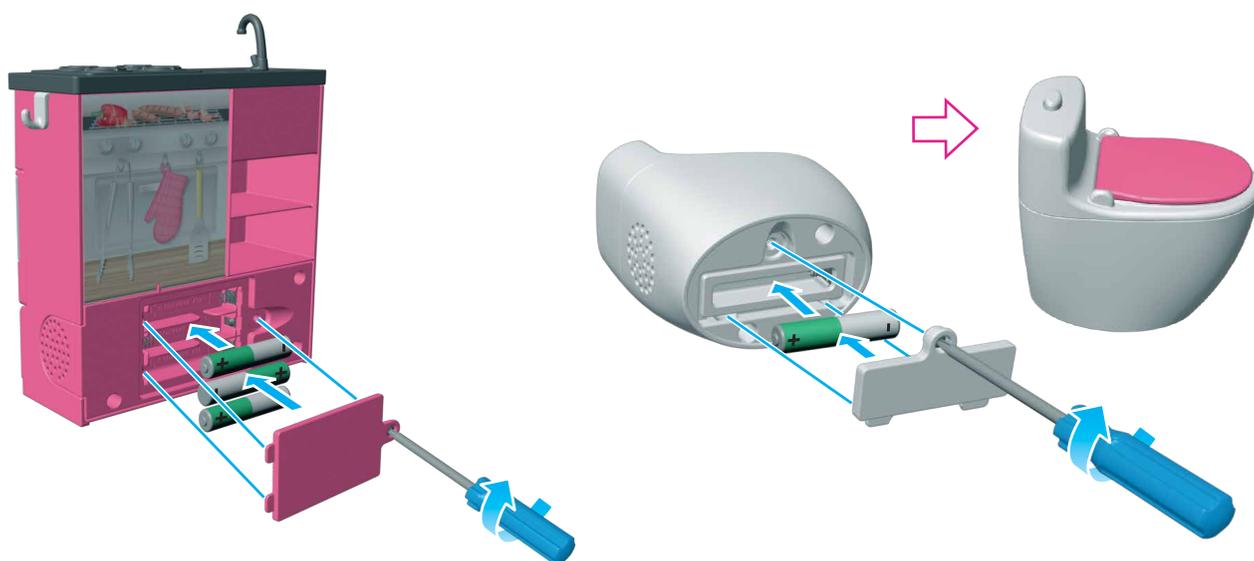

BATTERY INSTALLATION: Use a Phillips head screwdriver (not included) to open battery door. Insert 4 AAA batteries (not included). Replace battery door and tighten screws. Dispose of batteries safely. Replace batteries when sounds become garbled or faint or light dims. For longer life, use only alkaline batteries. When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

FOR PRODUCT SOLD IN USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

BATTERY SAFETY INFORMATION

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

LIGHTS & SOUNDS





PIECES STAY IN PLACE



DECALS

Apply labels by number as shown.

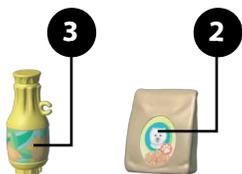

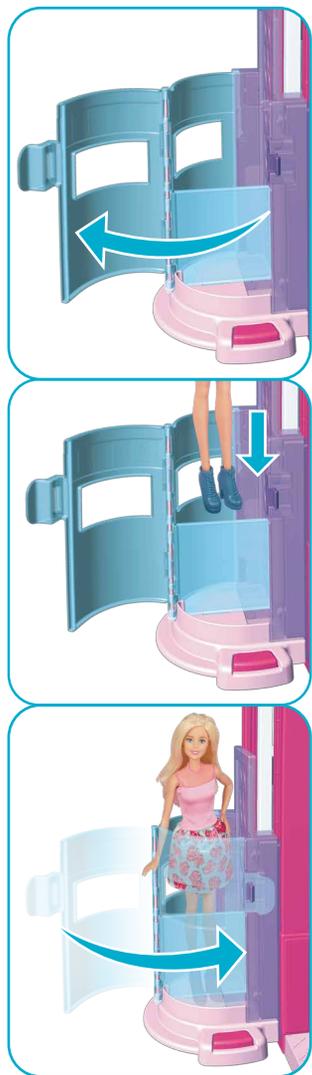

Doll not included.



Water toys sometimes get messy. Protect play surfaces before use. Drain, rinse, clean and dry the pool thoroughly before storing.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135

312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.