





READ THIS FIRST

ATTACHING THE SLIM FIT CASE:

- 1 Slide the 3DS XL® system bottom first into the BOTTOM piece of the Slim Fit Case and then snap the case onto the 3DS® XL system.

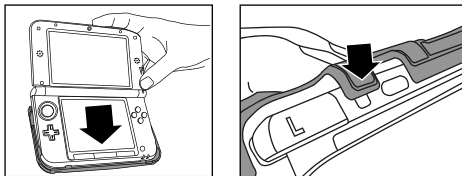

- 2 Slide the front of the TOP piece of the Slim Fit Case onto the top of the 3DS XL® system and then snap the case onto the 3DS XL® system.

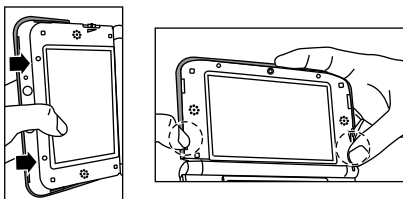


The charging cradle cannot be used to charge the Nintendo 3DS XL with the product attached. Please charge by plugging the DC plug of the AC adapter to the AC adapter connector of the Nintendo 3DS XL. Also, when charging the Nintendo 3DS XL with the DC plug of the AC adapter plugged into the AC adapter connector, please do not open the Nintendo 3DS XL to a full 180° as it may damage the system.


REMOVING THE SLIM FIT CASE:

CAUTION: Failure to follow these instructions could damage your 3DS XL system.




- 1 Firmly hold the 3DS XL system and pull the tab locks off.

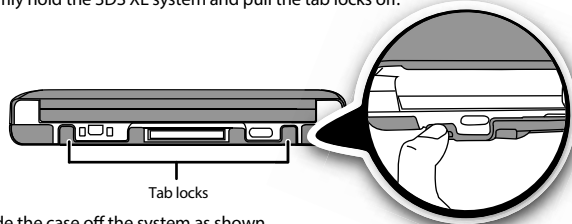

- 2 Slide the case off the system as shown.

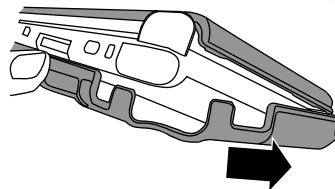

- 3 Continue to firmly hold the 3DS XL® system and locate the tab locks on the TOP piece of the Slim Fit Case. Release the Tab Locks and remove the TOP piece of the Slim Fit Case as shown.

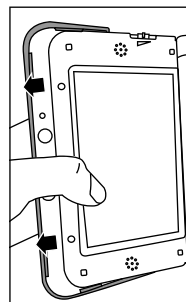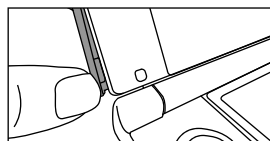
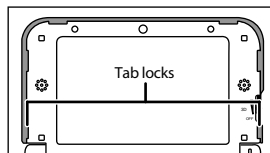






LIRE EN PREMIER LIEU

FIXATION DE L'ÉTUI MINCE :

- 1 Faire d'abord glisser la partie inférieure de la manette 3DS XL^{MD} dans l'étui mince, puis enclencher l'étui dans la manette 3DS XL^{MD}.

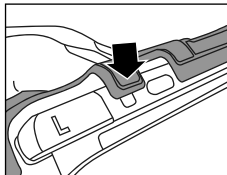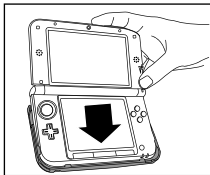

- 2 Faire glisser la partie SUPÉRIEURE de l'étui mince sur la partie supérieure de la manette 3DS XL^{MD}, puis enclencher l'étui dans la manette 3DS XL^{MD}.

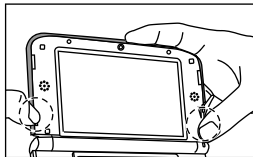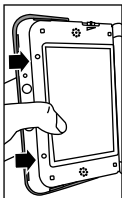

La station de charge ne peut pas être utilisée pour charger la Nintendo 3DS XL avec le produit installé. Charger en branchant la prise c.c. de l'adaptateur c.a. au connecteur de l'adaptateur c.a. de la Nintendo 3DS XL. De même, quand la Nintendo 3DS XL est en cours de charge avec la prise c.c. de l'adaptateur c.a. branchée sur le connecteur de l'adaptateur c.a., ne pas ouvrir la Nintendo 3DS XL à 180° car cela pourrait l'endommager.

RETRAIT DE L'ÉTUI MINCE :


ATTENTION : Si ces instructions ne sont pas observées, cela pourrait endommager la manette 3DS XL.

- 1 Tenir fermement la manette 3DS XL et tirer sur les onglets de verrouillage.




Onglets de verrouillage

- 2 Retirer l'étui de la manette tel qu'illustré.

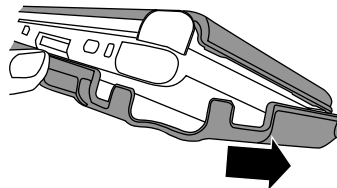

- 3 Continuer de tenir fermement la manette 3DS XL^{MD} et repérer les onglets de verrouillage de la partie SUPÉRIEURE de l'étui mince. Relâcher les onglets de verrouillage et extraire la partie SUPÉRIEURE de l'étui mince, tel qu'illustré.

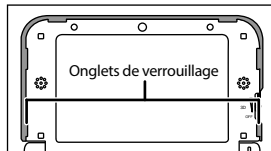

Onglets de verrouillage

