

X220

Quick Start Guide

Visit kaiserbaas.com for more information

Remove the camera from the Waterproof case

1

Slide lock and lift mount to unlock casing. Ensure camera is charged before use.



2

Insert the MicroSD card. Navigate to Setup, Format Card and select by pressing the Record button.



Note: The camera is not waterproof without the case. For SD card compatibility, visit www.kaiserbaas.com/support

To turn the camera ON/OFF, hold the power button for 2 seconds

1

Press the record button to start and stop recording. To toggle between  Video,  Photo, Playback and Settings Mode, click the power button consecutively until your desired mode appears.



Connect to the KB X220 App to get started and access the full user guide

To turn on the WiFi, click the button located on the side of the camera. Go to your smartphone's network settings and select KB-X220 network.

The default password is 1234567890. To turn off, click the WiFi button.





Join the Social Media Movement

You can display the camera LCD screen on a TV Screen.

Turn the camera on.

Connect the Micro HDMI end to the port on the camera and HDMI end to HDMI port on the TV.

Select the right source on the TV.

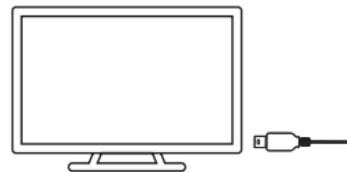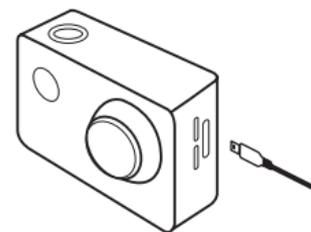

Note: You will need a Micro HDMI to HDMI cable

X220 Action Cam

Video Resolutions



1920 x 1080 30FPS
1280 x 720 30FPS

Photo Resolutions

12M, 8M, 5M, 3M, 2M

Storage

Class 10 MicroSD card (or higher)
Max 32GB

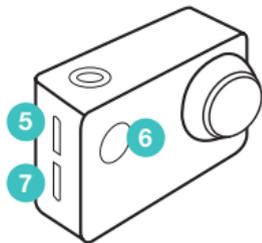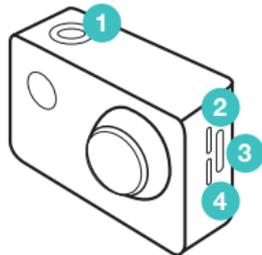

- 1. Record / OK
- 2. Micro USB
- 3. Micro SD Port
- 4. Micro HDMI
- 5. Scroll Up / WIFI
- 6. ON / OFF / Modes
- 7. Scroll Down

Visit www.kaiserbaas.com/support or email helpdesk@kaiserbaas.com for support. For the complete user guide, visit www.kaiserbaas.com

KAISER BAAS