

# FUJIFILM

DIGITAL CAMERA

# X-T30 II

## New Features Guide

Version 2.00

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*<https://fujifilm-x.com/support/download/firmware/cameras/>*

## Contents

X-T30 II firmware version 2.00 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	X-T30 II 	See 	Ver.
1	An  <b>AREA SETTING</b> option has been added under  <b>USER SETTING</b> in the setup menu, resulting in a change to the basic setup procedure and adjustments to <b>TIME DIFFERENCE</b> . In addition, <b>DATE/TIME</b> now offers a 24-hour clock.	211	1	2.00
2	The items listed in the setup menu under  <b>USER SETTING</b> > <b>RESET</b> have changed.	214	2	2.00
3	The  <b>CONNECTION SETTING</b> > <b>Bluetooth SETTINGS</b> item in the setup menu has been renamed <b>Bluetooth/SMARTPHONE SETTING</b> and now offers an <b>IMAGE TRANSFER WHILE POWER OFF</b> option. In addition, <b>AUTO IMAGE TRANSFER</b> and <b>SMARTPHONE SYNC. SETTING</b> have respectively been renamed <b>AUTO IMAGE TRANSFER ORDER</b> and <b>SMARTPHONE LOCATION SYNC.</b>	239	4	2.00
4	Upload timing has changed. Pictures can now be uploaded not only during playback or when the camera is off but also while shooting is in progress.	239	4	2.00
5	<p> <b>CONNECTION SETTING</b> &gt; <b>GENERAL SETTINGS</b> has been reorganized as follows:</p> <ul style="list-style-type: none"> <li>• <b>LOCATION INFO</b> has been moved to  <b>SCREEN SET-UP</b>,</li> <li>•  <b>BUTTON SETTING</b> has been moved to  <b>BUTTON/DIAL SETTING</b> and renamed  <b>Fn1 BUTTON SETTING</b>,</li> <li>• <b>GEOTAGGING</b> has been moved to  <b>SAVE DATA SET-UP</b>, and</li> <li>• <b>NAME</b> and <b>RESIZE IMAGE FOR SMARTPHONE</b>  have been moved to <b>Bluetooth/SMARTPHONE SETTING.</b></li> </ul>	224, 232, 238, 239	3, 4	2.00

No.	Description	X-T30 II 	See 	Ver.
6	The procedure for connecting wirelessly to smartphones has changed.	282	6	2.00
7	A <b>Bluetooth DEVICE LIST</b> item has been added to  <b>CONNECTION SETTING</b> > <b>Bluetooth SETTINGS</b> in the setup menu.	239	4	1.20
8	The TG-BT1 tripod grip has been added to the optional accessory list.	296	10	1.20

## Changes and Additions

Changes and additions are as follows.

X-T30 II Owner's Manual:  211

Ver. 2.00

### AREA SETTING

Adjust settings for your current time zone.

#### AREA SETTING

Choose your time zone from a map.

#### DAYLIGHT SAVINGS

Turn daylight saving time on or off.

Option	Description
<b>ON</b>	Daylight saving time on.
<b>OFF</b>	Daylight saving time off.

X-T30 II Owner's Manual:  211

Ver. 2.00

### TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

 Use  **AREA SETTING** to choose your home time zone before selecting a local time zone using  **LOCAL**.

- 1 Highlight  **LOCAL** and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the local time zone. Press **MENU/OK** when settings are complete.

 Select **ON** to enable daylight saving time.

To set the camera clock to local time, highlight **↔ LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select **🏠 HOME**.

Options	
<b>↔ LOCAL</b>	<b>🏠 HOME</b>

 If **↔ LOCAL** is selected, **↔** will be displayed in yellow for about three seconds when the camera is turned on.

## **RESET**

Reset shooting or setup menu options to default values.

- 1** Highlight the desired option and press **MENU/OK**.

Option	Description
<b>STILL MENU RESET</b>	Reset all photo menu settings other than custom white balance and custom settings banks created using <b>EDIT/SAVE CUSTOM SETTING</b> to default values.
<b>MOVIE MENU RESET</b>	Reset all settings other than custom white balance options selected using <b>☞ WHITE BALANCE</b> .
<b>SET-UP RESET</b>	Reset all setup menu settings other than <b>DATE/TIME</b> , <b>🏠 AREA SETTING</b> , <b>TIME DIFFERENCE</b> , and <b>COPYRIGHT INFO</b> to default values.
<b>INITIALIZE</b>	Reset all settings other than custom white balance to default values.

- 2** A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.

**LOCATION INFO**

Select **ON** to display location info downloaded from a smartphone.

Options	
<b>ON</b>	<b>OFF</b>

**▶ Fn1 BUTTON SETTING**

Choose the role performed by the **Fn1** button during playback.

Option	Description
 <b>SMARTPHONE TRANSFER ORDER</b>	Pressing the button marks the current picture for transfer. If the camera is not currently paired with a smartphone, <b>Bluetooth/SMARTPHONE SETTING</b> options will be displayed.
 <b>SELECT &amp; SMARTPHONE TRANSFER ORDER</b>	Pressing the button displays a dialog where pictures can be selected for upload to a smartphone with which the camera is paired. If the camera is not currently paired with a smartphone, <b>Bluetooth/SMARTPHONE SETTING</b> options will be displayed instead.
 <b>WIRELESS COMMUNICATION</b>	The button can be used for wireless connections.

**GEOTAGGING**

If **ON** is selected, location data downloaded from a smartphone will be embedded in pictures as they are taken.

Options	
<b>ON</b>	<b>OFF</b>

Adjust Bluetooth settings.

Option	Description
<b>PAIRING REGISTRATION</b>	Pair the camera with a smartphone or tablet to which the smartphone app has been installed.
<b>SELECT PAIRING DESTINATION</b>	Choose a connection from a list of devices with which the camera has been paired using <b>PAIRING REGISTRATION</b> . Select <b>NO CONNECTION</b> to exit without connecting.
<b>DELETE PAIRING REG.</b>	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in <b>SELECT PAIRING DESTINATION</b> .
<b>Bluetooth DEVICE LIST</b>	List the devices with which the camera is paired (other than the smartphone) or end pairing with selected devices.
<b>Bluetooth ON/OFF</b>	<ul style="list-style-type: none"> <li>• <b>ON</b>: The camera automatically establishes a Bluetooth connection with paired devices when turned on.</li> <li>• <b>OFF</b>: The camera does not connect via Bluetooth.</li> </ul>
<b>AUTO IMAGE TRANSFER ORDER</b>	Choose whether pictures are automatically marked for upload as they are taken.
<b>SMARTPHONE LOCATION SYNC.</b>	Choose whether to synchronize the camera to the location provided by a paired smartphone.
<b>NAME</b>	Choose a name ( <b>NAME</b> ) to identify the camera on the wireless network (the camera is assigned a unique name by default).
<b>IMAGE TRANSFER WHILE POWER OFF</b>	Choose whether the camera uploads pictures to paired smartphones while off.
<b>RESIZE IMAGE FOR SMARTPHONE </b>	<p>Choose whether to resize images for upload to smartphones. Resizing applies only to the copy uploaded to the smartphone; the original is not affected.</p> <ul style="list-style-type: none"> <li>• <b>ON</b>: Larger images are resized to  for upload.</li> <li>• <b>OFF</b>: Images are uploaded at their original size.</li> </ul>



- Be sure your smartphone is running the latest version of the applicable smartphone app. Different operating systems use different apps; for more information, visit:  
*<https://app.fujifilm-dsc.com/>*
- Pictures will be uploaded during shooting and playback and while the camera is off if **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER ORDER** or if images are currently selected for upload using the **IMAGE TRANSFER ORDER** option in the playback menu.
- The camera clock will automatically be set to the time reported by paired smartphones whenever the app is launched.

## Connecting to Smartphones

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit:

<http://fujifilm-dsc.com/wifi/>

## Smartphones and Tablets

### Installing Smartphone Apps

Before establishing a connection between the smartphone and camera, you will need to install at least one dedicated smartphone app. Visit the following website and install the desired apps on your phone.

<https://app.fujifilm-dsc.com/>




 The apps available vary with the smartphone operating system.

### Connecting to a Smartphone


Pair the camera with the smartphone and connect via Bluetooth®.

- 1 Press **DISP/BACK** while shooting information is displayed.

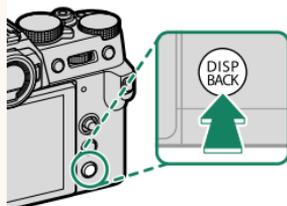


 You can also proceed directly to Step 3 by holding the **DISP/BACK** button during playback.

2 Highlight **Bluetooth** and press **MENU/OK**.

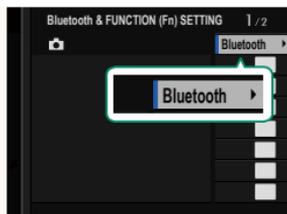

3 Highlight **PAIRING** and press **MENU/OK**.

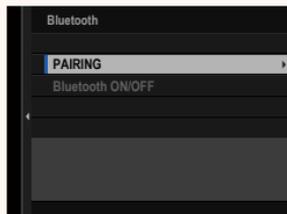

4 Launch the app on the smartphone and pair the smartphone with the camera.

More information is available at the following website:  
<https://app.fujifilm-dsc.com/>

When pairing is complete, the camera and smartphone will automatically connect via Bluetooth. A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.



- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.

## Using the Smartphone App

Read this section for information on the options available for downloading pictures to your smartphone using the smartphone app.

 Before proceeding, select **ON** for **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF**.

### Selecting and Downloading Pictures Using the Smartphone App

You can download selected pictures to a smartphone using the smartphone app.

 More information is available from the following website:

<https://app.fujifilm-dsc.com/>

### Uploading Pictures as They Are Taken

Pictures taken with **ON** selected for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > AUTO IMAGE TRANSFER ORDER** will automatically be marked for upload to the paired device.

-  If **ON** is selected for both **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF** and **IMAGE TRANSFER WHILE POWER OFF** in the  **CONNECTION SETTING** menu, upload to the paired device will continue even while the camera is off.
- Selecting **ON** for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > RESIZE IMAGE FOR SMARTPHONE**  enables compression, reducing file size for upload.

### Selecting Pictures for Upload in the Playback Menu

Use **TRANSFER IMAGE TO SMARTPHONE > SELECT FRAMES** to select pictures for upload to a paired smartphone or tablet via Bluetooth®.

## Copying Pictures to a Computer: PC AutoSave

Install the latest version of FUJIFILM PC AutoSave to your computer to upload pictures from the camera over wireless networks (Wi-Fi).

### FUJIFILM PC AutoSave

For downloads and other information, visit:

[http://app.fujifilm-dsc.com/en/pc\\_autosave/](http://app.fujifilm-dsc.com/en/pc_autosave/)

## Computers: Wireless Connections

You can upload pictures from the camera using the **PC AUTO SAVE** option in the playback menu.



## Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit <https://fujifilm-x.com/support/compatibility/cameras/>.

### Rechargeable Li-ion batteries

**NP-W126S:** Additional high-capacity NP-W126S rechargeable batteries can be purchased as required.

### Battery chargers

**BC-W126S:** Replacement battery chargers can be purchased as required. At +20°C/+68°F, the BC-W126S charges an NP-W126S in about 150 minutes.

### AC power adapters

**AC-9V** (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

### DC couplers

**CP-W126:** For extended shooting or playback or when using the camera with a computer, use the CP-W126 to connect the camera to the AC-9V power adapter.

### Remote releases

**RR-100:** Use to reduce camera shake or keep the shutter open during a time exposure (ø2.5 mm).

### Stereo microphones

**MIC-ST1:** An external microphone for movie recording.

### FUJINON lenses

**XF-/XC-series lenses:** Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

**FUJINON MKX-series lenses:** Cinema lenses for the FUJIFILM X-mount.

### Macro extension tubes

**MCEX-11/16:** Attach between the camera and the lens to shoot at high reproduction ratios.

### Teleconverters

**XF1.4X TC WR:** Increases the focal length of the compatible lenses by about 1.4x.

**XF2X TC WR:** Increases the focal length of the compatible lenses by about 2.0x.

### Mount adapters

**FUJIFILM M MOUNT ADAPTER:** Allows the camera to be used with a wide selection of M-mount lenses.

### Body caps

**BCP-001:** Cover the camera lens mount when no lens is attached.

### Shoe-mounted flash units

**EF-X500:** In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a commander or remote flash unit for remote wireless flash photography.

**EF-BP1:** A battery pack for EF-X500 flash units. Takes up to 8 AA batteries.

**EF-60:** In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 60/197 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. It can also be used as remote flash under the control of an optional EF-W1 wireless commander.

**EF-W1:** With support for the NAS\* wireless communication standard developed by Nissin Japan, this wireless flash commander can be used with optional EF-60 clip-on flash units and other NAS-compliant units.

\* NAS is a registered trademark of Nissin Japan Ltd.

**EF-42:** This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

**EF-X20:** This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

**EF-20:** This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

### Tripod grips

**TG-BT1:** Record movies, take photographs, or adjust zoom on compatible power zoom lenses while holding this Bluetooth tripod grip.

### **Grip belts**

**GB-001:** Improves grip. Combine with a hand grip for more secure handling.

### **instax SHARE printers**

**SP-1/SP-2/SP-3:** Connect via wireless LAN to print pictures on instax film.

# FUJIFILM

---

## FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

