




TWO-WAY RADIO MODEL RX380

Nothing Comes Close to a Cobra®

Operation Using Your Radio

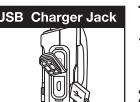

To charge batteries in radio:

1. Check to see that the batteries have been inserted properly.
2. Insert the cable into the charge jack located at the right side of the radio.
3. Plug the cable into USB-compatible power port.
4. The radio will display flashing battery icon while charging.

Only use the supplied rechargeable batteries and desktop charger (not included) for recharging your Cobra microTALK® radio.

Please charge new batteries for 14 hours for first time of use.

Note: Cobra recommends your radio is turned off while being charged.

Quick Start

1. Turn ON/OFF/Volume Knob clockwise to turn the radio on and counter clockwise to turn the radio off.

2. Select a desired channel. (Details please refer P.8)

Both radios must be tuned to the same channel/privacy code to communicate.

3. Press and hold the Talk button while speaking into the microphone.

4. When finished talking, release the Talk button and listen for a response.

Auto Battery Save



If there are no transmissions within 10 seconds, the radio will automatically switch to **Battery Save** mode and the **Power Saver** icon will flash in the display. This will not affect the radio's ability to receive incoming transmissions.

Communicating with Another Person



1. Press and hold the **Talk** button.
2. With the microphone about two inches (5 cm) from your mouth, speak in a normal voice.
3. Release the **Talk** button when you are finished talking and listen for a response.

You cannot receive incoming calls while pressing the **Talk** button.

Both radios must be tuned to the same channel/privacy code to communicate.

LED/S.O.S. Flashlight



1. Press and hold the **LED/S.O.S. Flashlight** button below the **Talk** button to use the LED flashlight located at the bottom of the radio.
2. Release the **LED/S.O.S. Flashlight** button to turn off the flashlight or S.O.S. function.

To activate S.O.S. function, press and hold the **LED/S.O.S. Flashlight** button to turn on. Press and release to turn off the flashlight or S.O.S. function.

Auto Squelch/Maximum Range



Your microTALK® radio will automatically mute weak transmissions and unwanted noise due to terrain, conditions or if you've reached your **Maximum Range** limit.

You can turn **off** auto squelch (or turn **on** maximum range extender), allowing all signals to be received and extending the maximum range of your radio.

Remember, you can achieve maximum range by using maximum range extender. See page 6 for details.

See page 18 for frequency allocations charts.

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

Both radios must be tuned to the same channel to communicate.

Mode Functions

