

Jetson



JETKART PHANTOM

-MANUAL-

TABLE OF CONTENTS

A.	Introduction	3
B.	Included in the Box	4
C.	Features and Specs	5
D.	Assembly	5
E.	Charging the Battery	7
F.	Operating the Phantom	8
G.	Care and Maintenance	10
H.	Safety Warnings	12
I.	Warranty	14
J.	Product Registration	15

INTRODUCTION


Congratulations on your new Jetson JetKart Phantom! The Phantom is an innovative and fun Jetkart, ready to take on everyday use. Before your first ride, check whether the wheels are damaged, or parts are loose. If there are any abnormalities, please contact Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

This product manual can help you understand, use, and maintain your Phantom. In order to avoid danger caused by collisions, falls, and loss of control, please use caution and learn how to ride the Phantom safely. Jetson and authorized dealers cannot be held liable for injury or damage caused from riding the Phantom. Users ride at their own risk.

The rider is responsible for consequences caused by violating warnings or improper operations.


If you want to return this product for any reason, be sure to first call or email us before taking it back to the store so we can assist you.

INCLUDED IN THE BOX

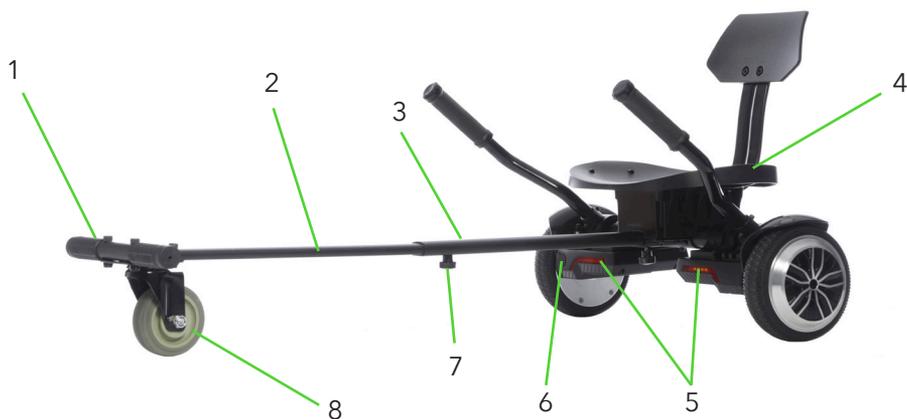

- 1. Foot Rest
- 2. Foot Rest Tube
- 3. Frame Tube
- 4. Seat

- 5. Front Lights
- 6. Power Button
- 7. Knob
- 8. Front Wheel

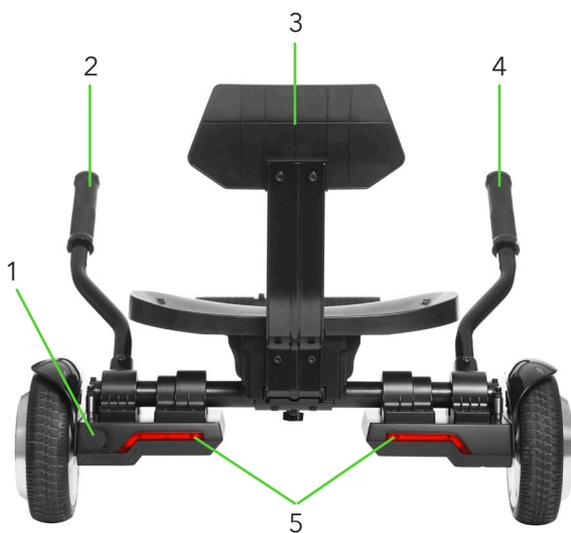

- 1. Charging Port
- 2. Left Handlebar
- 3. Back Rest

- 4. Right Handlebar
- 5. Back Lights

FEATURES AND SPECS

MODEL: PHANTOM

WHEEL SIZE: 6.5"(REAR)

MAX SPEED: 9 MPH

MAX RANGE: 8 MILES

BATTERY TYPE: LITHIUM ION

BATTERY CAPACITY: 36V, 4.4Ah

MOTOR TYPE: HUB

CLIMBING ANGLE: 20°

MOTOR: 500w

CHARGER: 110-220V

CHARGE TIME: 2-3 HOURS


PRODUCT WEIGHT: 29 LBS

WEIGHT LIMIT: 220 LBS


RECOMMENDED AGE: 13+

ASSEMBLY

1. Slide the Frame Tube into the slot at the bottom of the Seat and tighten the screws under the Seat using the provided Allen Key.
2. Slide the Foot Rest Tube into the Frame Tube and tighten the Knob. Make sure the screws in the Foot Rest Tube are tight and secure. Set the length to a comfortable distance, where your legs are slightly bent.

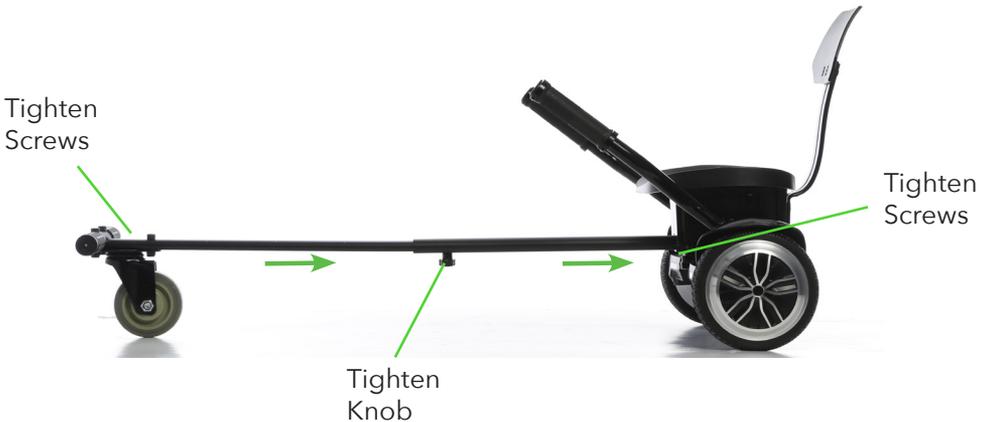

3. Insert the Back Rest into the slot at the back of the Seat. Tighten two screws into the back of the Back Rest and two screws under the Seat using the provided Allen Key.

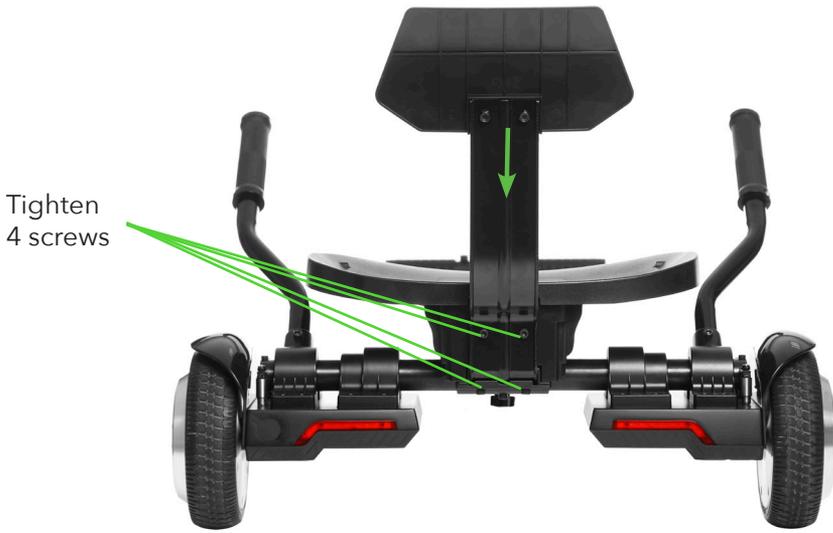

4. Slide the Handlebars into the holes near the base of the Seat. Make sure the Handlebar curves out away from the Seat. Tighten the screws using the provided Allen Key.



5. Remember to make sure all the parts are tight and secure before you ride.

CHARGING THE BATTERY

Your Phantom comes with a built-in rechargeable lithium ion battery. Always use the provided charger only. The charging port is located on the back of the Phantom underneath the seat. Please remember to cover the Charging Port when you are done charging the Phantom. Before your first ride you must fully charge the Phantom - charge for 4 hours for the first 3 times you use it. For every ride after, charge your Phantom until it is fully charged, and NOT LONGER. Do not leave any chargers plugged in overnight, or leave it plugged in past the charge time.

1. Plug one end of the power cord into a grounded AC outlet and the other into the Phantom's charging port. The red charging light on the charger unit will turn on.
2. The red light will turn green once fully charged. Recharge the Phantom after each use.

(Please note: Always plug the charger into the wall first before the device. If the wall outlet doesn't have power and you plug the charger into the device first, it will light green, even if the battery is not full. So always plug into the wall first to make sure there is power.)

THE CHARGER OFFERS A CHARGING STATUS ON THE TOP OF THE CHARGER:

CHARGING LIGHT RED: Battery is charging.

CHARGING LIGHT GREEN: Charging is complete.

Don't use the Phantom if the battery emits strange odors, overheats, or begins leaking. If the battery does leak, do not touch any leaking materials, as the battery contains dangerous substances. Do not open the battery and do not insert anything into the battery.

Only use the provided charger for the Phantom. Do not charge the battery if it has over-discharged. It should be discarded for your safety. Do not turn on the Phantom while it is charging.

OPERATING THE PHANTOM

GETTING ON

1. Before taking your seat, make sure your the Phantom is charged. Then place it on a leveled surface, facing up and turned off.
2. Carefully lower yourself into the seat. Then place your feet, first one then the other, on the footrests. That way your weight can balance out the Phantom and keep you from falling backwards.
3. After you've followed all these steps, you can turn on the Phantom.


TURNING ON AND OFF

To turn the Phantom on, first locate the Power Button on the front of the Phantom underneath the Seat. Lift the cover and press the Power Button in. The right Front Light will turn on. To turn the Phantom off, flip the Power Button off. The right Front Light will turn off. Please remember to cover the Power Button after turning it on or off.

INFRARED SEAT SENSORS

As a safety feature, there are four infrared sensors located on the Seat. The sensors are activated by someone sitting in the Seat while the power is On. The Phantom will not move unless the Seat Sensors are activated, to ensure it will not move on its own, and to allow you to sit down and stand up safely.

Infrared
Seat
Sensors

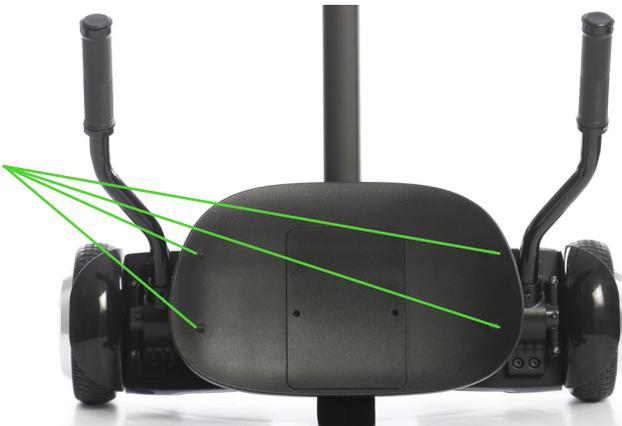

HOW TO RIDE

1. Slowly push down on both Handlebars to move forward.
2. Push down on the Right Handlebar to turn left, and push down on the Left Handlebar to turn right.
3. Apply more force pushing the Handlebars down to accelerate, and pull the Handlebars up to slow down.

Remember, when first using your Phantom be sure to start slow and put very light pressure on the Handlebars. Applying more pressure on the Handlebars will make the Phantom accelerate more rapidly.

Forward
Push Down



Brake/ Reverse
Pull Up



Turn Right



Turn Left



CARE AND MAINTENANCE

RIDING RANGE

The average range of the Phantom is 8 miles. However, a lot of factors will affect how far you can go per charge:

- **Driving Surface:** A smooth, flat surface will increase driving distance.
- **Weight:** More weight means less distance.
- **Ambient Temperature:** Please ride and store the Phantom under recommended temperature, which will increase its longevity and driving distance.
- **Maintenance:** Timely battery charging and maintenance will increase driving distance.
- **Speed and Driving Style:** Maintaining a moderate speed will increase distance. Frequent starting and stopping, acceleration, and deceleration will reduce it.

SPEED LIMIT

The top speed of the Phantom is set to 9 mph.

WEIGHT LIMIT

The maximum load is 220 lbs. Going above the maximum weight limit can cause injury or damage the Phantom.

CLEANING THE PHANTOM

To clean the Phantom, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Phantom, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Phantom.

BATTERY

- Keep the Phantom away from fire and excessive heat.
- To avoid damage to the battery, never subject the Phantom to intense physical shock, severe vibration, or impact.
- Protect the Phantom from water or moisture.
- Never disassemble the Phantom or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

STORAGE

- If you plan on storing the Phantom for a substantial period of time, please make sure you fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the Phantom.
- Store the Phantom indoors, in a dry place and at a suitable temperature.
- You should bring the Phantom into a warm environment (above 50 degrees Fahrenheit) for charging.
- Do not leave the Phantom plugged into the charger for long periods of time.

SAFETY WARNINGS

Here are some useful tips to make sure you always have a safe ride:

- Children, the elderly, and pregnant women should not use the Phantom.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Prior to each ride, inspect each part of the Phantom to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations. Remember, the Phantom is a motor vehicle, and is treated as such by local law enforcement. You can and will be arrested for drunk driving. Many cities have restrictions on where you can drive motor vehicles, as well as additional restrictions on driving non-automobiles on streets and highways.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The Phantom cannot be ridden by more than one person. Only one person can ride at a time.
- When you ride the Phantom along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the product barefooted and keep shoelaces tied.

CALIFORNIA WARNING

This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Phantom or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the Phantom off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the Phantom, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check battery charge before using.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
2. This product cannot be used for rental or commercial use.
3. This product cannot be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free 1-(888) 976-9904, or email customerservice@jetsonbike.com.

PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase or go to <https://www.ridejetson.com/product-registration>.

Name: _____

Address: _____

City, State, Zip: _____

Email: _____

Home Phone: _____ Gender: _____

Purchase Date: _____ Purchased From: _____

Serial Number: _____

Is this your first Jetson product?: _____

Other similar product owned before: _____

- Why did you buy this product?:
- For myself
 - For my child
 - For my grandchild
 - Gift for someone else (adult)
 - Gift for someone else (child)

How did you hear about the JetKart Phantom?: _____

Complete this form and mail it to:

**Attention: Product Registration
Jetson Electric Bikes
1 Rewe Street
Brooklyn, NY 11211**

Jetson



JETKART PHANTOM