



© 2023 Brentwood Appliances, Inc.

MANUAL FOOD PROCESSOR
ITEM NO.: KA-5050G
Operating and Safety Instructions
FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING-To reduce the risk of serious personal injury, please note the following:

- This product is not intended for use by children. Keep the product out of the reach of children and pets. Extra caution is necessary when using this chopper near children.

- Please discard or store all packing materials away from the reach of children.

CAUTION: Keep fingers always clear of the blades. Do not push the product with your hands in line of the blade when slicing.

- Do not place fingers or hands in the bowl with cutting blades moving.
- Do not place on or near a hot gas or electric burner, or other heated surfaces.
- Before use check that all parts are operating properly and that no accessories are damaged.
- Use on a flat surface.
- Do not touch the blade when handling or cleaning a blade insert, only touch the plastic grip sides. Use a brush to clean the blades.
- Do not use the Food Processor while under the influence of drugs or alcohol.
- Do not use this product for anything other than its intended use.
- Do not use the Food Processor for frozen foods, meat, fish, fruit or vegetables with pits, nuts or anything other than food stuff.
- Store securely after use.
- Top rack dishwasher safe

ENGLISH

Parts:

1. Removable Handle
2. Lid
3. Bowl
4. Blades
5. Stirring Paddle



First Use of Food Processor:

WARNING: *Extremely sharp blades! Keep fingers clear of the blades. Improper handling of the Food Processor may result in injury.*

- 1 Remove the packaging material and all plastic wrapping.
- 2 Check components and accessories have been received and without damage. If any parts are broken or damaged, do not use.
- 3 Clean all parts of the Food Processor before first use as described in the 'Cleaning' section.
- 4 Place the Food Processor on a flat surface.
- 5 Fit the blades or stirring paddle into place.
Note: Blades are extremely sharp, use caution.
- 6 Place the food to be processed into the bowl.
- 7 Replace the lid and turn the handle to rotate the blades and cut the food.

Cleaning your Processor:

WARNING: *Extremely sharp blades! Keep fingers always clear of the blades when cleaning.*

- 1 Do not use any aggressive cleaners, or brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers, and the like. They could damage the surfaces.
- 2 When cleaning the blades do not touch the blade when handling. Touch only the plastic side grips. Use a soft brush to clean the blades.

Processor Storage:

All parts must be completely dry before storing. Make sure to store it in a safe and dry location away from the reach of children and pets.

