
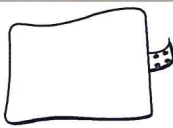
 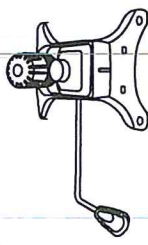


BT-88 PARTS

ASSEMBLY INSTRUCTION

(1)X1		(6)X5	
(2)X1		(7)X4	 M6*22mm
(3)X1		(8)X4	 M6*30mm
(4)X1		(9)X8	 6.5*18*1.5mm
(5)X1		(10)X1	 M5

