

cabrio



WHAT TO DRY

- Mixed
- Casuals
- Towels
- Delicates
- Bulky/Sheets

• Static Reduce
• End Beep
• Damp Beep
• Wrinkle Shield

Check Lint

00:00

HOW TO DRY

- Normal
- Sanitize
- Gentle
- Steam Refresh
- Timed Dry

• No Heat
• Hot
• Less
• More
• Timed Dry Adjust



Hold to Start




steam
high efficiency
SensorDrying

Quick Start Guide


Using Your High Efficiency Dryer

Appearance may vary
depending on model.


1 CLEAN THE LINT SCREEN

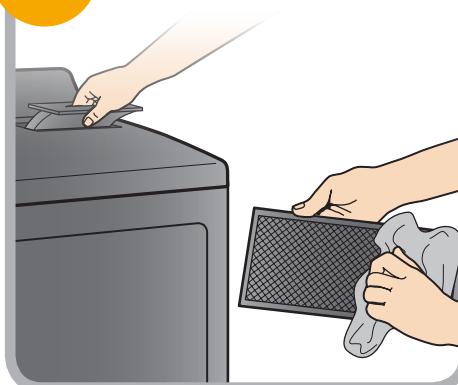


2 LOAD THE DRYER

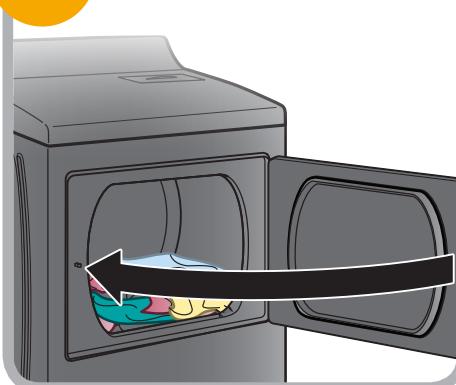

3 TOUCH POWER TO TURN ON THE DRYER

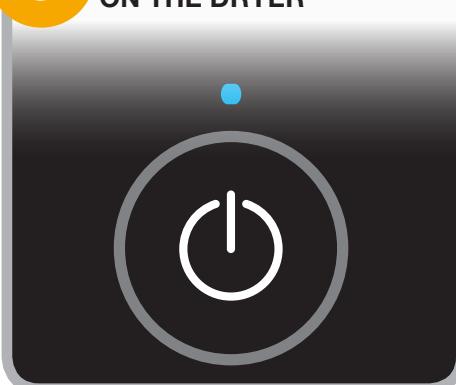

4 SELECT WHAT TO DRY

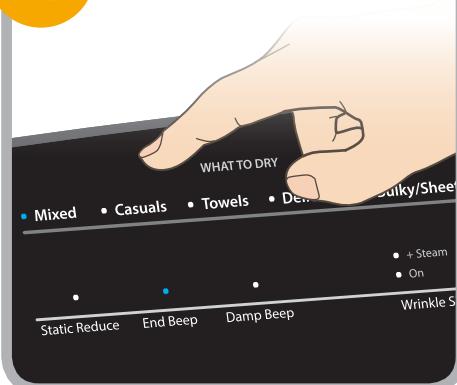

5 SELECT HOW TO DRY



6 ADJUST CYCLE SETTINGS, IF DESIRED*



7 SELECT ANY ADDITIONAL OPTIONS*



8 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE



* NOTE: See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

W10743379A

W10743381A - SP

®/™ ©2014 Whirlpool. All rights reserved. Used under license in Canada.

09/14

Printed in U.S.A.

cabrio



WHAT TO DRY

- Mixed
 - Casuals
 - Towels
 - Delicates
 - Bulky/Sheets
- + Steam
• On
- Static Reduce End Beep Damp Beep Wrinkle Shield

Check Lint

0:00

HOW TO DRY

- Normal
 - Sanitize
 - Gentle
 - Steam Refresh
 - Timed Dry
- No Heat
• Hot
• Less
• More
- Temperature Dryness
- Timed Dry Adjust



Hold to Start




steam
high efficiency
SensorDrying

L'aspect peut varier
selon le modèle.


Guide de démarrage rapide

Comment utiliser votre sécheuse haute efficacité

1 NETTOYER LE FILTRE À CHARPIE

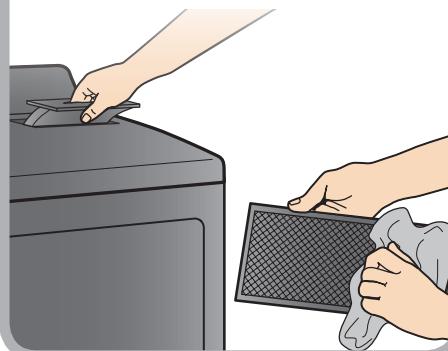


2 CHARGER LA SÉCHEUSE

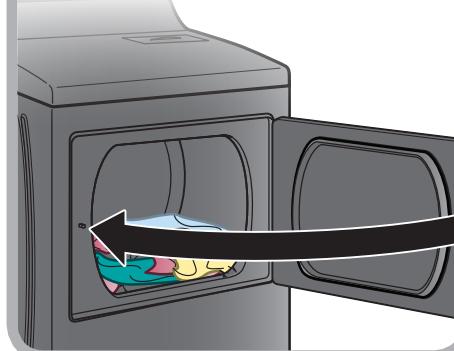


3 APPUYER SUR POWER (MISE SOUS TENSION) POUR METTRE LA SÉCHEUSE EN MARCHE




4 SÉLECTIONNER LE TYPE D'ARTICLES À SÉCHER

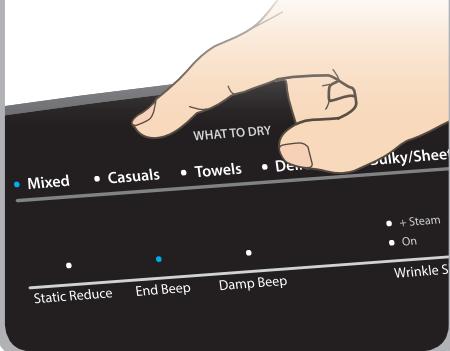


5 SÉLECTIONNER LA MÉTHODE DE SÉCHAGE

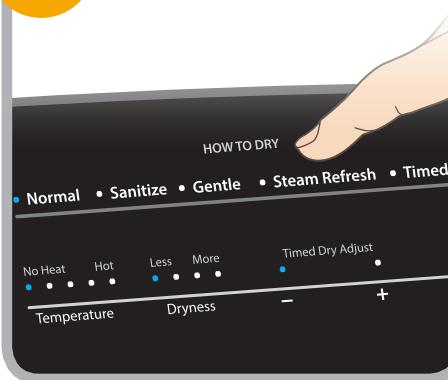

6 AJUSTER LES RÉGLAGES DE PROGRAMME SI DÉSIRÉ*

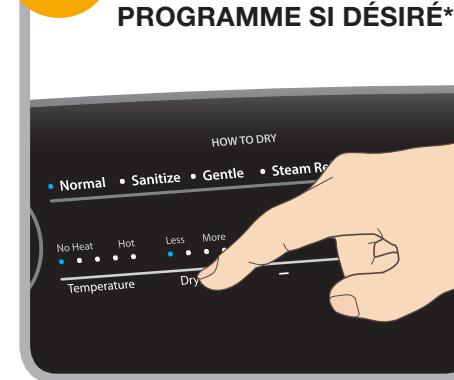

7 SÉLECTIONNER TOUTE OPTION SUPPLÉMENTAIRE*

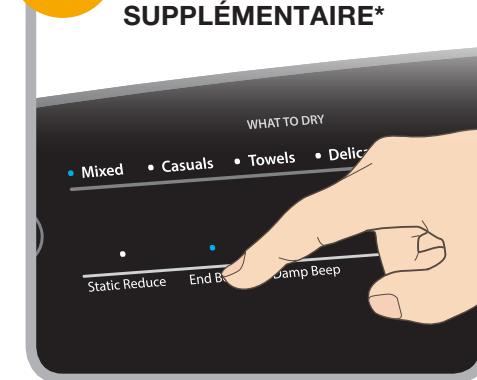

8 APPUYER SANS RELÂCHER SUR START/PAUSE (DÉMARRER/PAUSE) POUR DÉMARRER LE PROGRAMME



*REMARQUE : Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sécheuse.