



ROKU[®]


Select Series

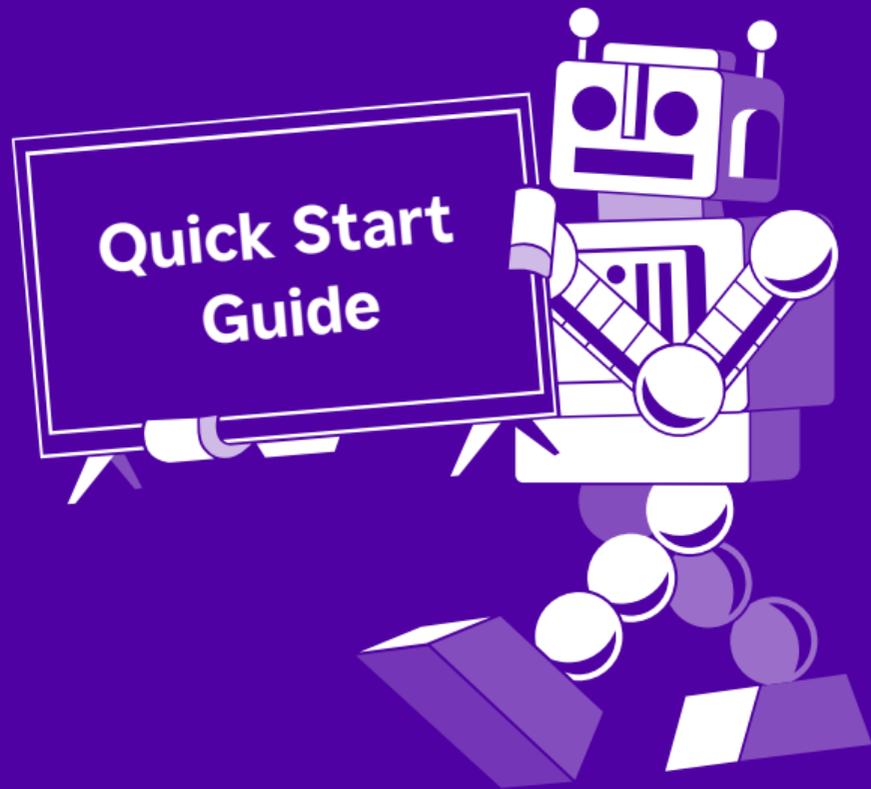


What's included

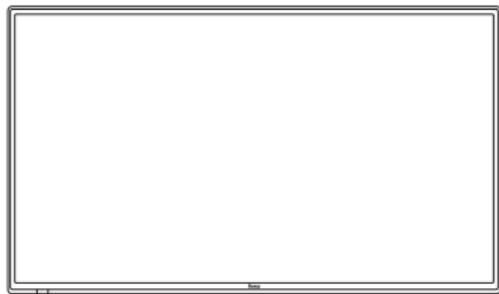

Roku Select Series TV

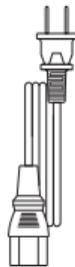

TV power cord
included for 50" - 85"
models only

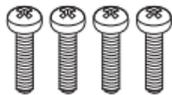

x 4 screws

Stand screws



TV stands




Roku TV Remote

What you need



Phillips head
screwdriver

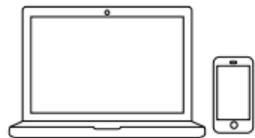


Laptop or mobile
phone for activation



Internet connection

STEP 1: Set up your TV

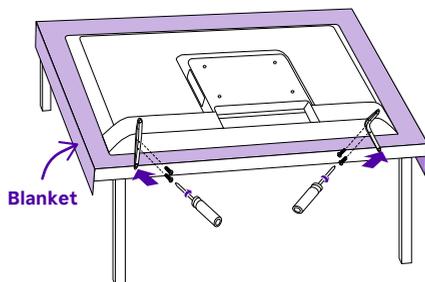

A Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

B Attach the stands


Use a screwdriver and included screws to attach the stands.

C Set TV upright


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps and visit go.roku.com/tvmount

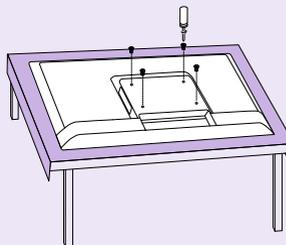

STEP 2: Plug TV in and power your remote

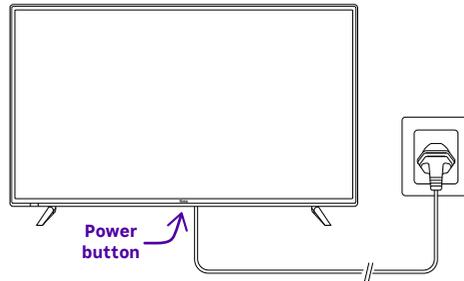

A Connect your TV

Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.



B Power your remote

See the remote features card on how to use your Roku TV remote.

STEP 3: Activate your TV



Connect your TV

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



IMPORTANT

Roku never charges for activation support.

Frequently asked questions

Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

Why should I enter a payment method?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Get to know your TV



HDMI - Game consoles, DVD players



Composite (available on some models) - Analog devices, older game consoles



Antenna/Cable - Digital antenna, cable connection

Audio connections



HDMI ARC or eARC (recommended) - AV receivers, soundbars



Optical (S/PDIF) - AV receivers, soundbars



Headphone Jack (available on some models) - Wired headphones

Other connections



USB - Flash drive for media playback



Ethernet (available on some models) - Wired internet connection

ROKU

© 2026 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.

Need help?

For setup help or
support, visit or call

go.roku.com/TV

1-816-272-8106

4:00 am - 10:00 pm PT

