

15.6" WiFi Digital Photo Frame with Touchscreen LCD Display

Instructional Manual



Table of Contents

Frame Features	04
Package Contents	06
Getting Started	06
Operating Instructions	
Connecting to a Wireless Network.....	07
Link your frame to your Facebook, Twitter, Aluratek Smart Frame app or Computer... 08	
<i>Facebook</i>	08
<i>Twitter</i>	11
<i>Aluratek Smart Frame app</i>	13
<i>Transfer Pictures Directly From Your Computer To The Frame</i>	17
Main Menu Function	
Main Menu	19
Album Function	
Album Settings	20
System Function	
System Settings	22
Alarm Function	
How To Set Alarm	24

Table of Contents

 
Technical Support	25
Radio and TV Interference Statement	26
Warranty	27

Frame Features

- | | | | | | |
|---|---------------------------|----|-------------------|----|---------------|
| 1 | 15.6" IPS LCD Touchscreen | 6 | SD/SDHC Card Slot | 11 | Security Lock |
| 2 | Frame | 7 | Headphone Jack | 12 | Frame Stand |
| 3 | Power Button | 8 | Power Adapter | | |
| 4 | Wall Mount | 9 | Mini USB Port | | |
| 5 | Speakers | 10 | USB 2.0 Port | | |

A Connect a USB hard drive, USB flash drive or SD/SDHC card to easily access and share your favorite pictures, music, or videos.

B Transfer and store files quickly and easily from your personal computer to the frame's 16GB built-in memory with hi-speed USB 2.0.

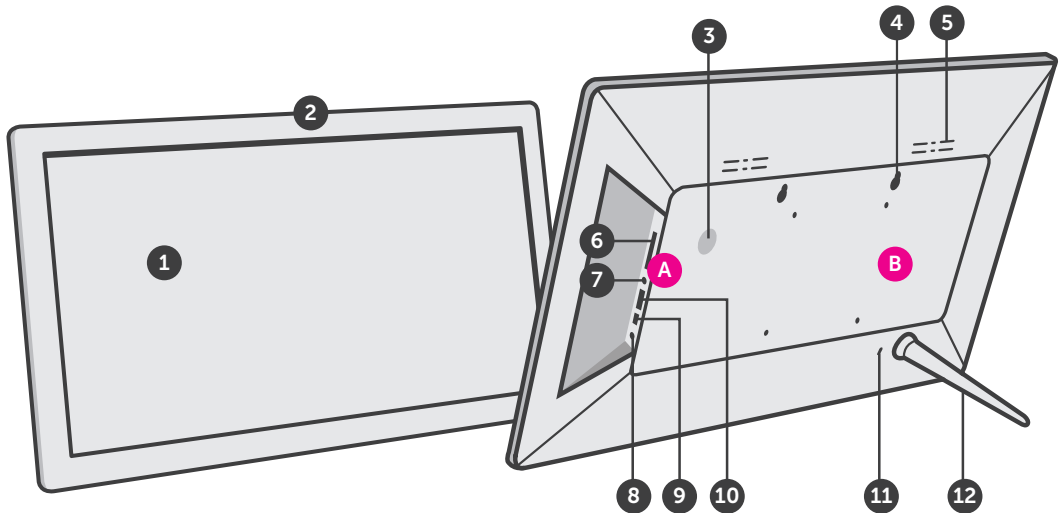

Package Contents

Your order has been carefully packaged and inspected. The following accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.

- USB 2.0 Cable
- Power Adapter
- Frame Stand
- Instructional Manual
- Quick Start Guide

Getting Started

- Screw in the frame stand
- Plug in the power adapter

Operating Instructions

Step 1: Connecting to a wireless network

The frame scans for available WiFi networks and displays the names of those it finds when it is powered on. Secured networks are indicated with a Lock icon. If the frame finds a network that you connected to previously, it will connect to it automatically.

If not:

1. Touch the Network you want to connect to
2. Use the keyboard to enter the Password
3. Touch Connect
4. Touch > to continue to next step

Operating Instructions

Step 2: Link your frame to your Facebook, Twitter or Aluratek Smart Frame App

Facebook

How to link the frame to you Facebook account so that you can send pictures to the frame via Facebook.


1. Open Facebook app or go to Facebook from your browser and login to your Facebook account if you are not logged in already
2. Search for "Aluratek WiFi Frame"



Operating Instructions

Facebook


3. Send a message with your frame ID to bind the frame. For example, if your frame ID is 123456, please send “bd123456”

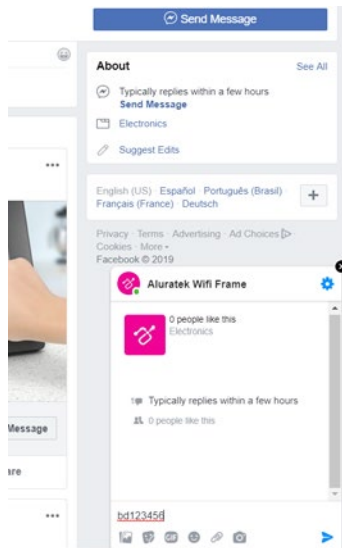

Operating Instructions

Facebook

4. You will see the binding message, "Successful Binding!" once the binding is completed
5. You can now send pictures to your frame by just attaching a picture and send via message.

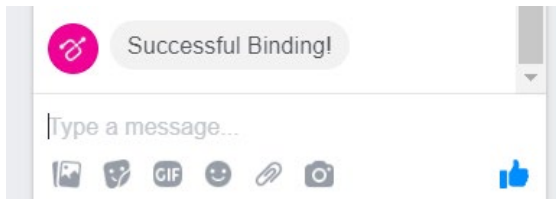


Operating Instructions

Twitter

How to link the frame to your Twitter account so that you can send picture directly from your Twitter account to the frame.



1. Open Twitter app or go to Twitter from your browser
2. Search for “Aluratek WiFi Frame”
3. Click on “Follow”
4. Please login to your Twitter account. If you are already logged in on this computer, you will not need to login again and you will be directed to the next step directly.
5. Click “Message” to send a private message to link the frame.

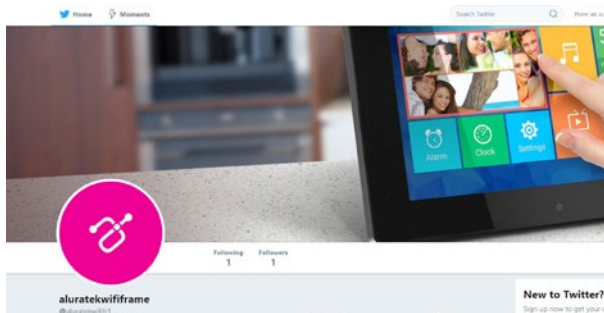

Operating Instructions

Twitter

6. Type '**bd+frame ID**' to bind. For example, if the frame ID is 123456, please type bd123456 in the message. Once the binding is successful, you will see a reply for confirmation.
7. Congratulations! Your Twitter account is now linked to the frame. To post a picture to your frame, you can just send a private message to the frame like below.

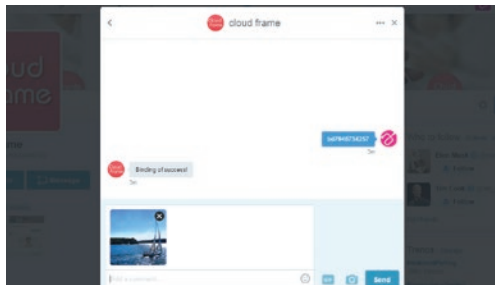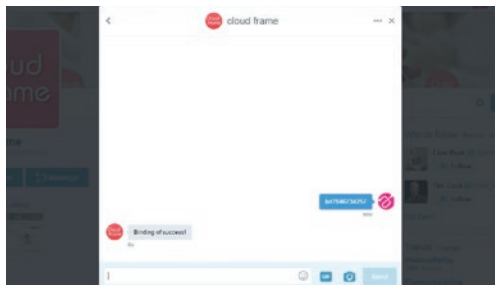


Operating Instructions

Aluratek Smart Frame App

How to link the frame to “Aluratek Smart Frame” app so that you can send picture / video directly from your tablet or smartphone.

 
1. Please search and download “Aluratek Smart Frame” app from either Google Play or iTunes store.
2. Please register for an account if you don't have one already. A verification code will be sent to your email to complete the registration process.

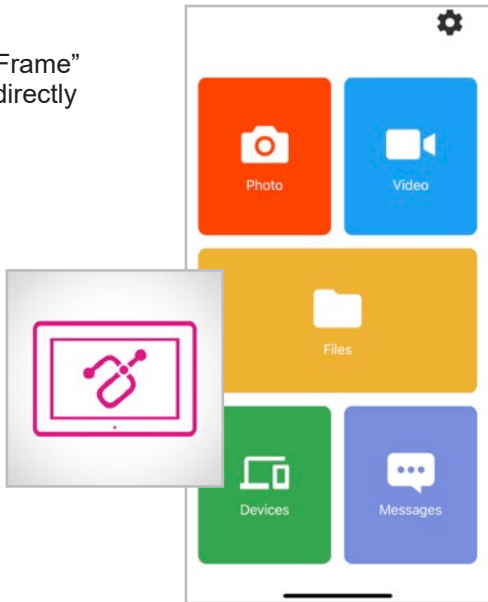

Operating Instructions

Aluratek Smart Frame App


3. Please login to your account
4. Please select “Devices” from the main menu to activate / bind your frame to the app
5. Please select “+” of My Devices
6. For Device Name, this is the name of the frame that will be shown in the device list. For the email address, this will be the email address of the frame that you can provide to your friends and family so they can email the pictures to the frame. Please use 6 or more characters with a mix of letters, numbers and symbols. For example, I can set the email name to be kitchen123 so the email address of the frame will be kitchen123@wififrame.com
7. You can also add frames owned by other family member. Please select “+” of Other Devices and provide the frame ID number. Once the owner of the frame approve your request, you can start sending pictures to that frame.

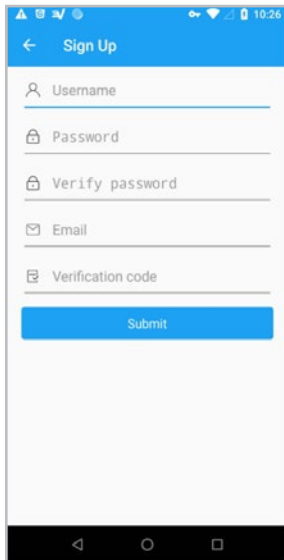

Operating Instructions


To post picture from the Aluratek Smart Frame app to the frame, please follow below steps.

- A. Tap on “Files” and choose either photo or video.
- B. Select the pictures or videos that you want to send to the frame.
- C. Tap on “Done” on the bottom of the screen to confirm the selection.

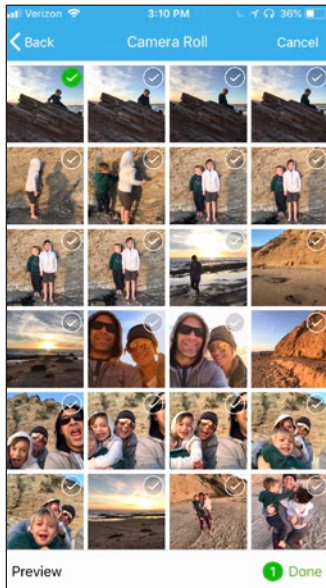

Operating Instructions

 - D. You can also add text to the picture by tapping on the photo and type in the text.
- E. Tap on “Send Photo” or “Send Video” to send the picture / pictures or video / videos to the frame. You will see a status bar on the main menu to see the progress. You may also check by tapping “Message”.

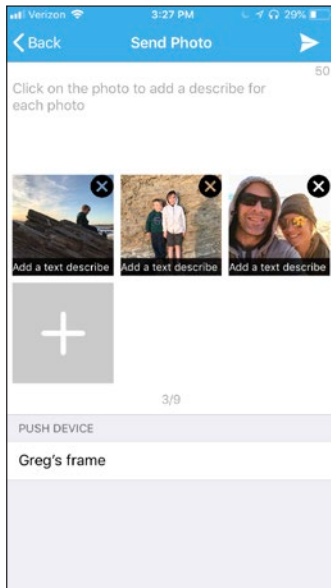


Operating Instructions

Transfer Pictures Directly From Your Computer To The Frame


To transfer pictures from your computer to the WiFi frame directly, the frame and the computer will need to be in the same network. Follow the steps below to transfer the pictures.

 1. Go to Settings > PC Control on the frame. Click “Start” to see the ftp address of the frame on the screen.

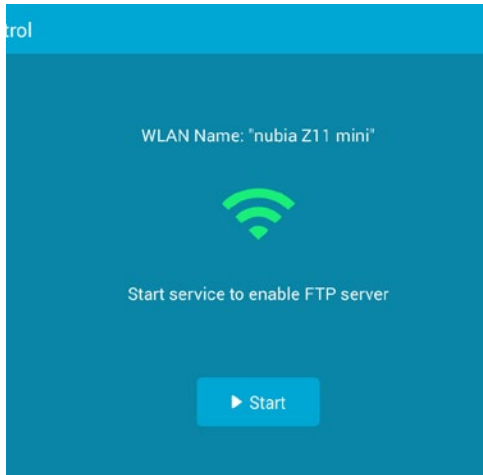

Operating Instructions


2. Go to your computer and open “File Explorer”. In the File Explorer, type in the exact address in the address bar. In this example, it is **ftp://192.168.0.100:2121**
3. The internal memory of the frame will show up like a folder on your computer. Please just drag and drop pictures that you like to transfer to this folder.
4. Once transferred, please go to Album > Internal memory of the frame to see the pictures.

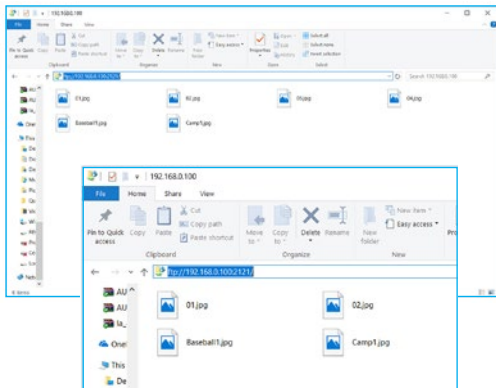

Note: If the computer and the frame is not on the same network, you can send / transfer the pictures to the frame via Facebook / Twitter or Aluratek Smart Frame app.

Main Menu Function

 
Main Menu

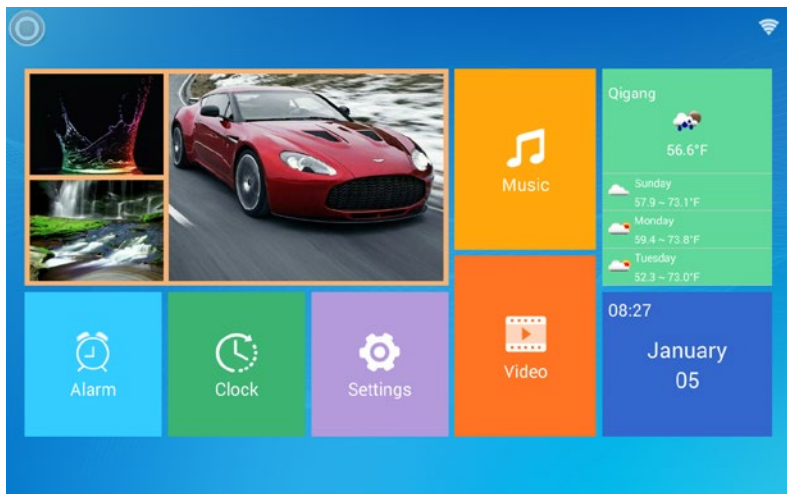

Album Function

Album Settings

 1. From the main menu, tap on “Settings”.
2. Tap on “Album Settings”.

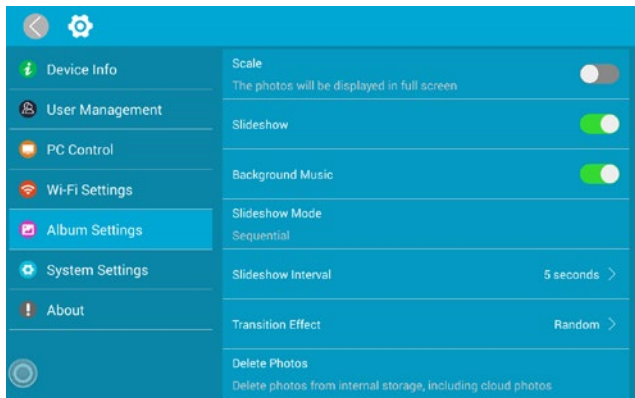

Album Function

Full Screen: Set photo play in original size or to full screen.

Slideshow: If enabled, the slideshow will start automatically. based on the time selected. The slideshow will display pictures from the cloud media folder unless you are in the thumbnail page of the Internal memory or USB/SD Card folder then the slideshow will show pictures in those folders only.

Background Music: Set background music on / off

Slideshow Mode: Enable random pictures in slideshow mode.

Slideshow Transition Effect: Slideshow transition effect

Slideshow Interval: Slideshow time interval.

 
Delete Photos: Delete all photos from the cloud media and internal memory folders

Reset Default Settings: Reset all settings and disconnect all linked accounts without removing pictures in the cloud media and internal memory folders.

System Function

System Settings

1. From the main menu, tap on “Settings”.
2. Tap on “System Settings”.

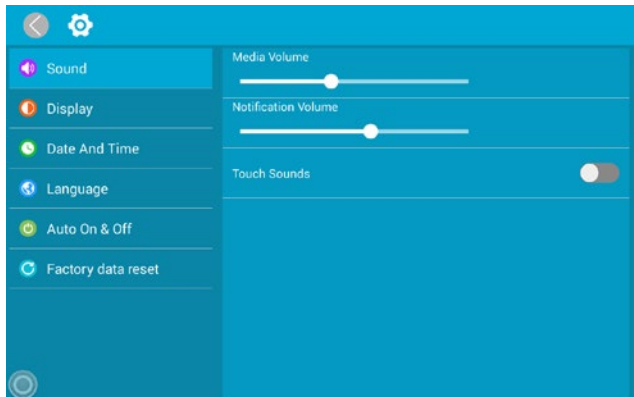

System Function

Sound: To adjust the media volume and notification volume, enable the touch sounds.

Display: To adjust the brightness of the display.

Date and time: To set the date and time for the frame.

Auto ON / OFF: Enable the auto on / off feature.

Auto OFF: Set the time for the frame to auto power off.

 
Auto ON: Set the time for the frame to auto power on.

Factory data reset: Rest all data from the device's internal memory and the inserted SD card.

Alarm Function

How To Set Alarm

1. From the main menu, tap on “Alarm”.
2. To edit an existing alarm, tap on “Edit alarm” or tap “Add alarm” to create a new alarm.
3. Once you have set the days, time and ringtone of the alarm, tap OK to set the alarm.

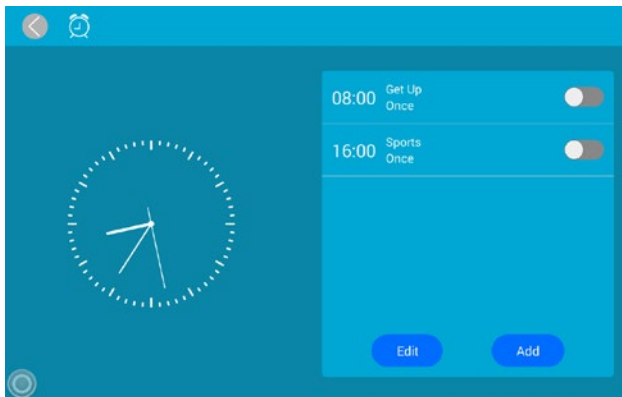

Technical Support

We are committed to providing the best customer service support. If you need assistance with your Aluratek product, please contact the Aluratek Technical Support department prior to returning this device. Reach out to us in any of the following ways:

E-mail: **support@aluratek.com**

Web: **aluratek.com/helpdesk**

Local (Irvine, CA): **714-586-8730**

Toll free: **1-866-580-1978**

Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Warranty

Aluratek warrants this product against defect in material or workmanship for **1 Year** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.

