


INSIGNIA™

# 58" TV Gaming Stand

NS-HF2007

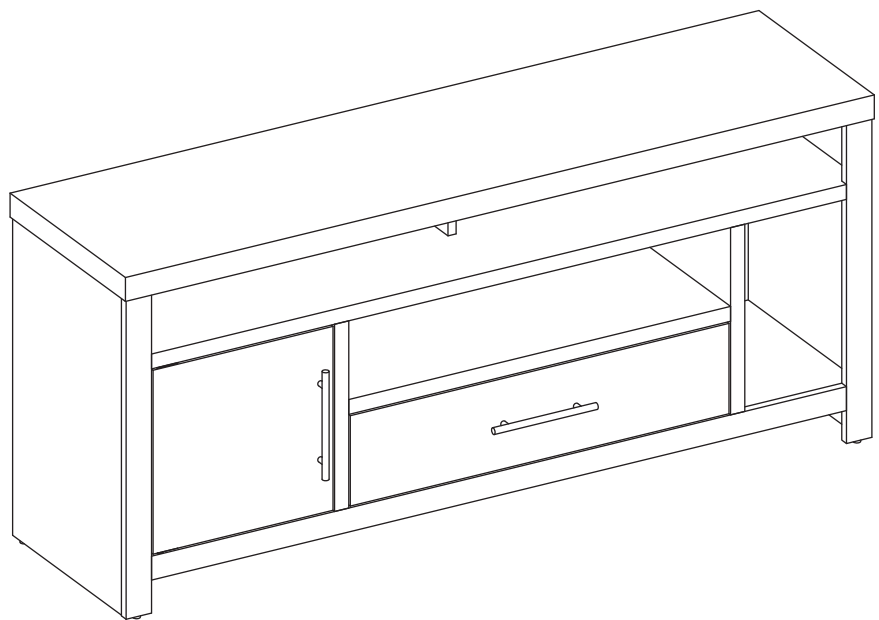

Before using your new product, please read these instructions to prevent any damage.

# INSIGNIA™

## Contents

IMPORTANT SAFEGUARDS .....	2
Features.....	3
Dimensions.....	3
Maximum weights.....	4
Package contents.....	5
Parts .....	5
Hardware.....	6
Needed tool.....	6
Assembly instructions.....	7
Maintaining your TV stand .....	50
Specifications.....	50
ONE-YEAR LIMITED WARRANTY .....	51

## IMPORTANT SAFEGUARDS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### WARNING



**Some steps are  
more easily  
handled with two**

### CAUTION

- Before assembly and/or installation, carefully unwrap all parts.
- Locate and set aside the hardware kit before discarding packaging.
- Use care when assembling your new product. Take your time and follow assembly instructions closely.

### WARNINGS


- For use with televisions weighting 60 lbs (27.3 kg) or less. Use with heavier televisions may causing tip over resulting in death or serious injury.
- Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
- Risk or death or serious injury. This surface must be placed against a fixed in place wall at least as tall as the television.
- Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.


**SAVE THESE INSTRUCTIONS**

## Features

- Supports 65 in. (165 cm) TVs up to 60 lbs. (27.2 kg)
- Multiple shelves provide a surplus of storage options for your game console, Blue-ray player, cable box, and speakers
- Specially designated space allows for vertical-standing game consoles
- Lower drawer stores remotes, controllers, cables, and more
- Cabinet door hides your entertainment accessories for clutter-free organization
- Adjustable horizontal shelf makes space for DVD and video game cases
- Tasteful gray woodgrain texture looks great in any space

## Dimensions

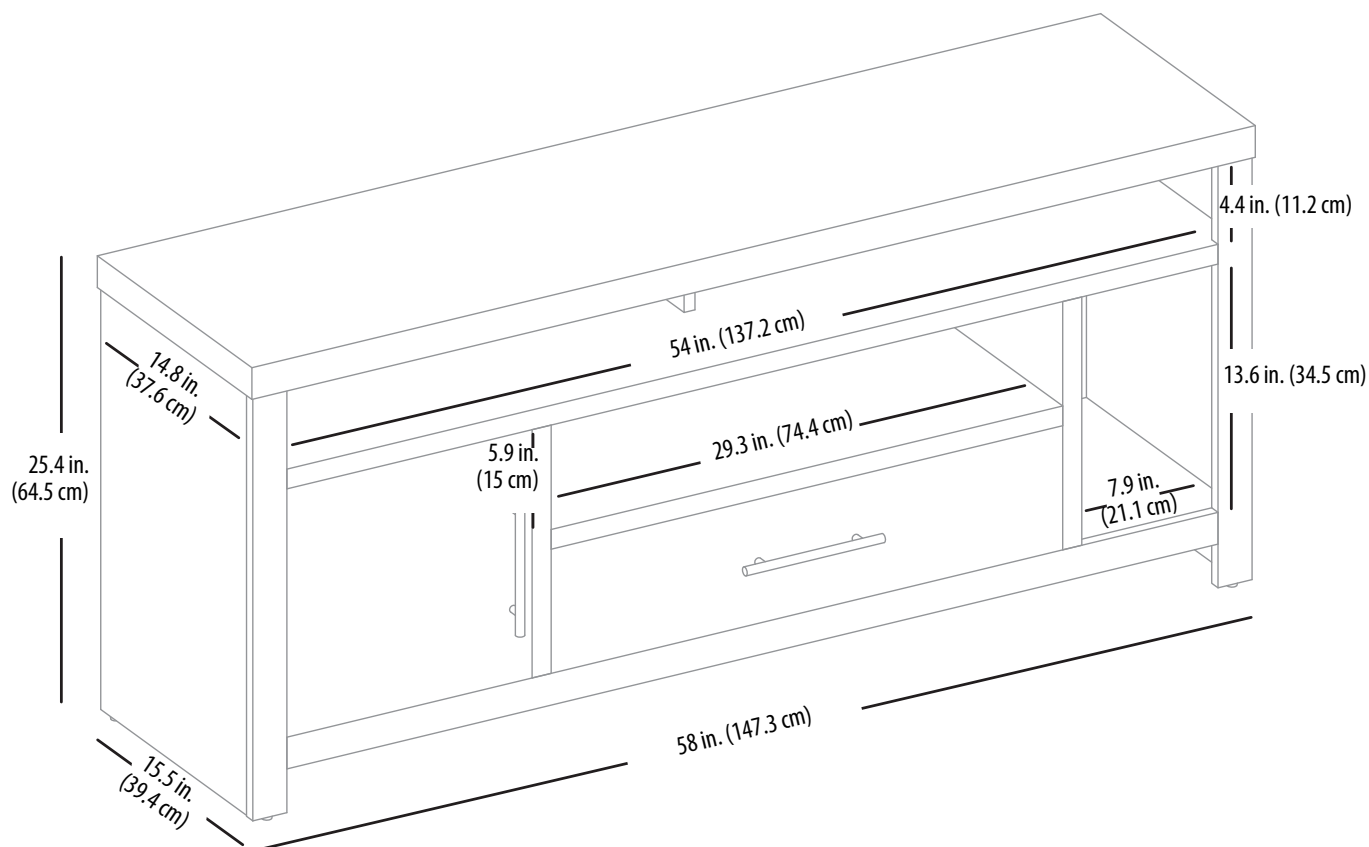

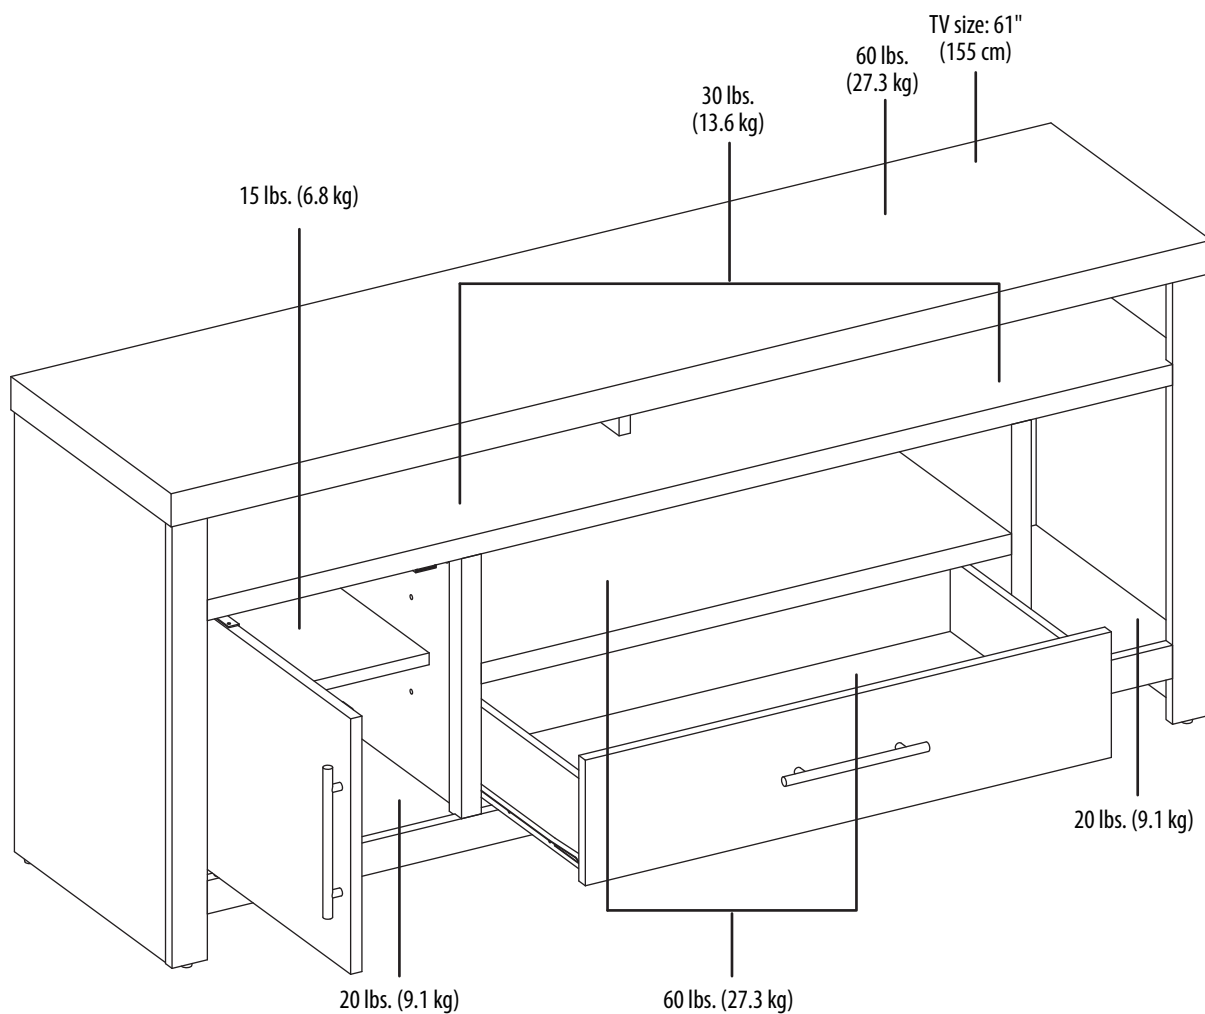
**Maximum weights**

**WARNING:** You can use most flat panel televisions weighing 60 lbs. (27.3 kg) or less. Using televisions or weights heavier than the maximums can result in instability that can cause tip-overs resulting in death or serious injury.




# Package contents


## Parts

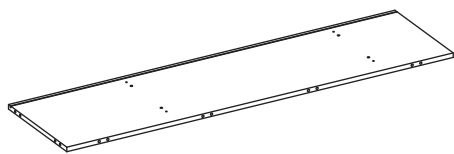


**A** Base (1)

 


**B** Left divider panel (1)

 


**C** Right divider panel (1)

 


**D** Long lower shelf (1)

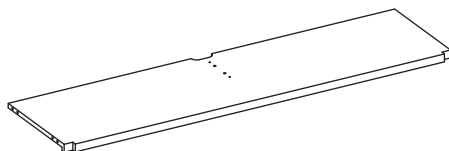


**E** Upper shelf (1)

 

**F** Front edge (1)

 

**G** Top (1)

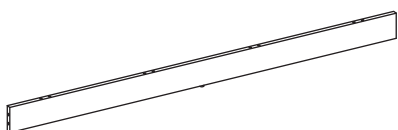

**H** Lower support (1)



**I** Left side support (1)




**J** Right side support (1)




**K** Left side (1)



**L** Right side (1)

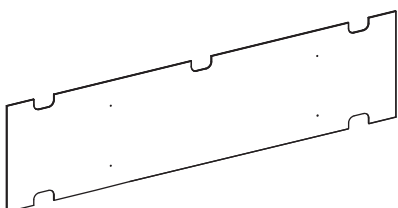

**M** Lower back panel (1)

 

**N** Door (1)



**O** Short upper shelf (1)



**P** Left drawer side (1)



**Q** Right drawer side (1)



 
**R** Drawer back (1)




**S** Drawer bottom (1)



**T** Drawer support (1)



**U** Drawer front (1)


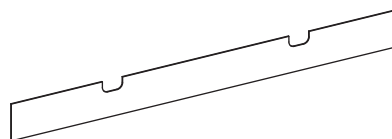



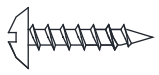
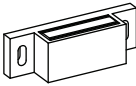

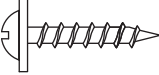
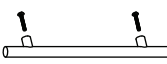
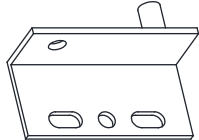
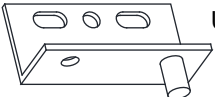









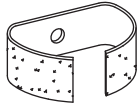
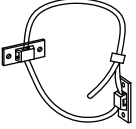



**V** Upper back panel (1)

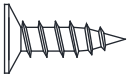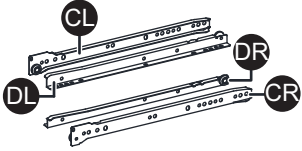


**Y** Small divider panel (1)
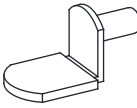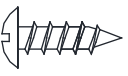
## Hardware

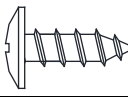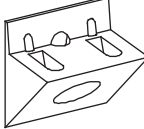LABEL	STAND PART	QTY.
AA	 3 × 12 mm screw	12
BB	 Left and right rail assembly	1 set
CC	 Cam screw	42
DD	 Small cam lock	40
EE	 Dowel	44
FF	 3 × 15 mm screw	2
GG	 Magnetic door latch	1
HH	 4 × 50 mm screw	6
II	 3 × 16 mm screw	6
JJ	 Handle with screws	2
KK	 Lower hinge pin	1
LL	 Upper hinge pin	1

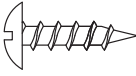LABEL	STAND PART	QTY.
MM	 Shelf support	4
NN	 3.5 × 12 mm screw	4
OO	 Drawer support	2
PP	 4 × 38 mm screw	6
QQ	 4.5 × 14 mm screw	4
RR	 Back support bracket	12
SS	 3.5 × 16 mm screw	12
TT	 Cable wrap	2
UU	 Anti-tip bracket with plastic strap	2
VV	 Cam lock cover	14
WW	 Large cam lock	2
XX	 3 × 12 mm screw	4


## Needed tool

 


# Assembly instructions

## STEP 1:


### You need:

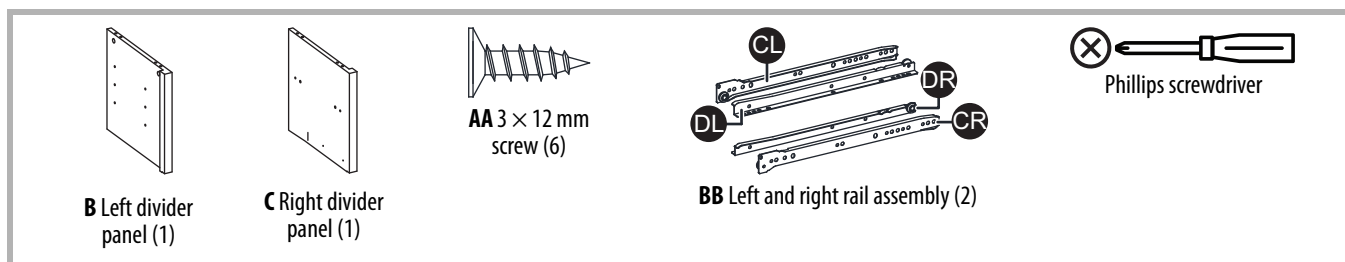

- 1 Separate the **CL** and **CR** parts of the rail assembly (**BB**) from the **DL** and **DR** parts and set the **DL** and **DR** parts aside for use in another step.
- 2 Insert three 3 x 12 mm screws (**AA**) into the correct holes on the **CL** and **CR** parts of the rail assembly (**BB**).

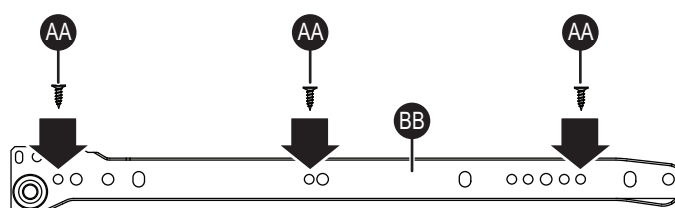


- 3 Align the **CL** part of the rail assembly (**BB**) to the inside of the left divider panel (**B**). Make sure that the wheel on the assembly is at the back of the panel.
- 4 Tighten the screws with a Phillips screwdriver.

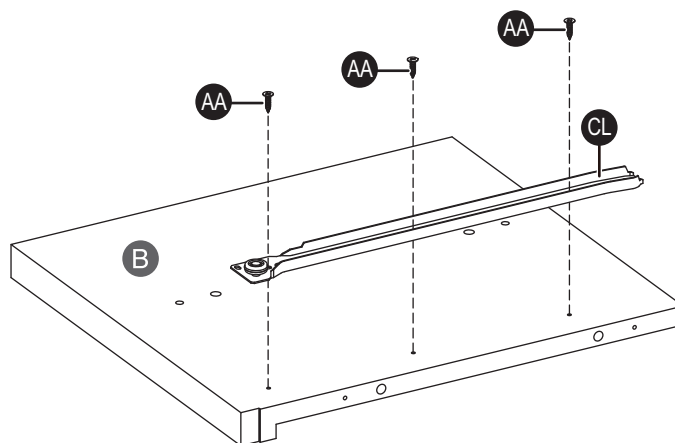


- 5 Align the **CR** part of the rail assembly (**BB**) to the inside of the right divider panel (**C**). Make sure that the wheel on the assembly is at the back of the panel.

- 6 Tighten the screws with a Phillips screwdriver.

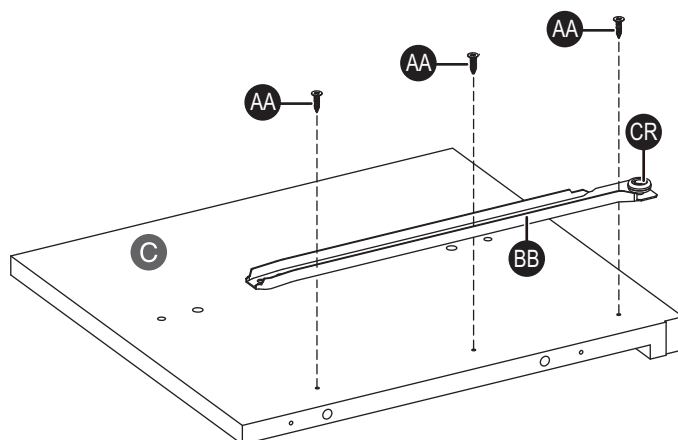


## STEP 2:


### You need:

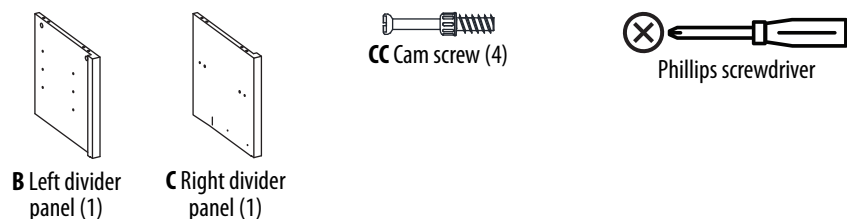


- 1 Insert two cam screws (**CC**) into the holes on the left divider panel (**B**), then tighten the screws with a Phillips screwdriver.

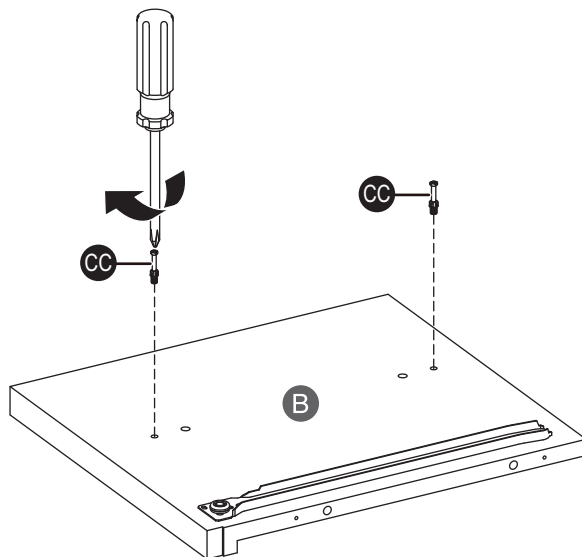


- 2 Insert two cam screws (**CC**) into the holes on the right divider panel (**C**), then tighten the screws with a Phillips screwdriver.

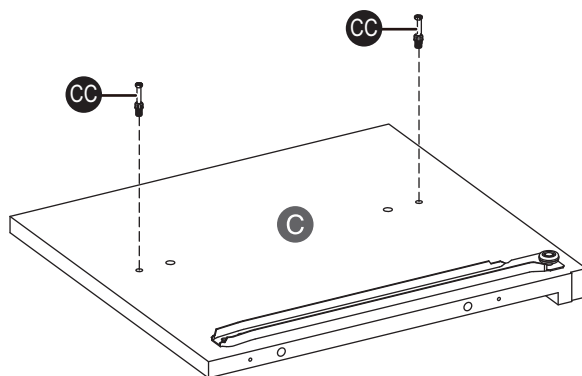

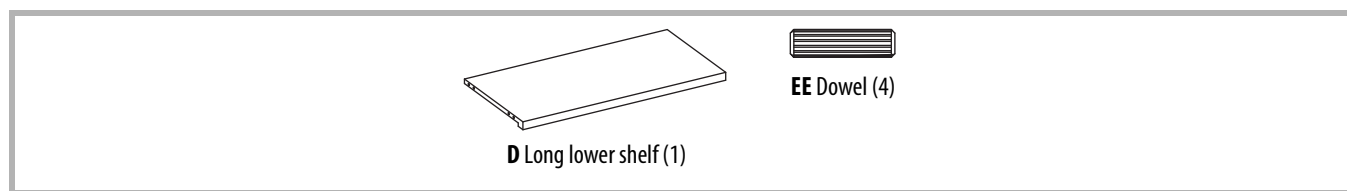
**STEP 3:****You need:**

- Insert four dowels (**EE**) into the short edges of the long lower shelf (**D**).

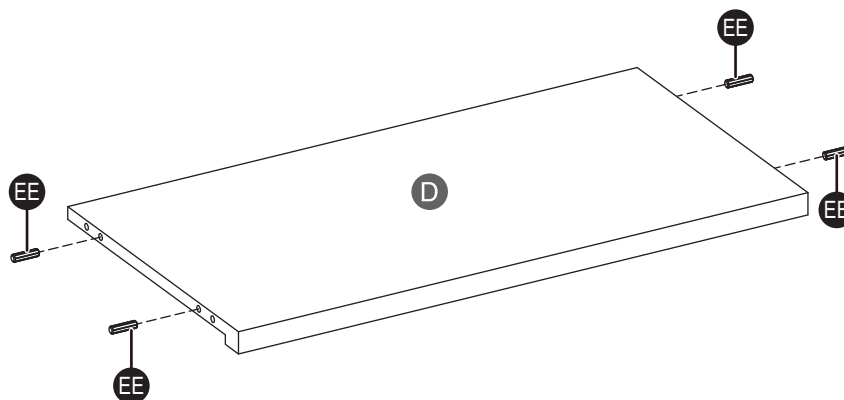


## STEP 4:

### You need:

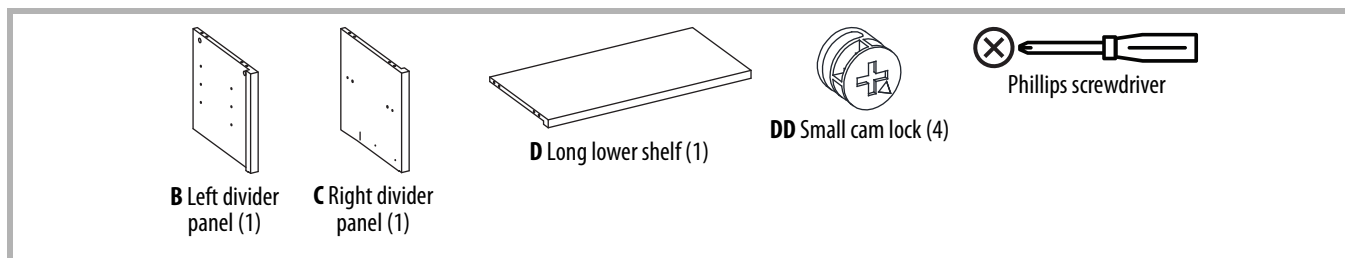


### Using cam locks

When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

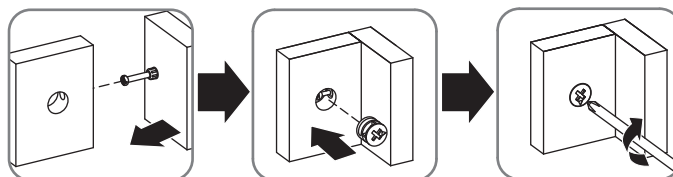


- 1 Insert four cam locks (**DD**) into the long lower shelf (**D**).

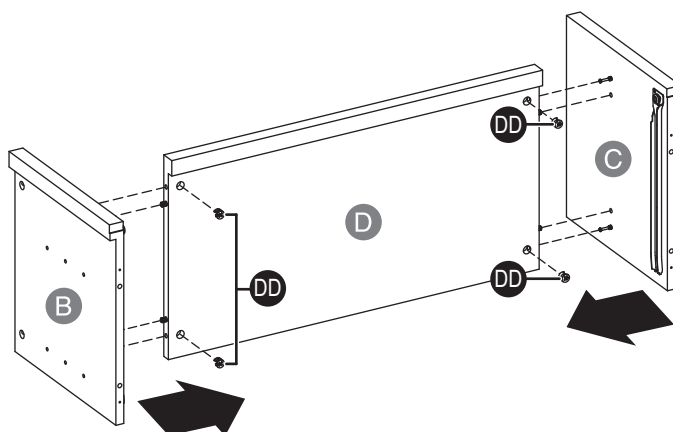

- 2 Insert the cam screws on the divider panels (**B** and **C**) into the cam locks on the long lower shelf, then tighten the locks with a Phillips screwdriver.

**STEP 5:****You need:****EE Dowel (8)**


- Insert eight dowels (**EE**) into the edges of the divider panels (**B** and **C**). Make sure that you use the inside hole of each pair of holes.

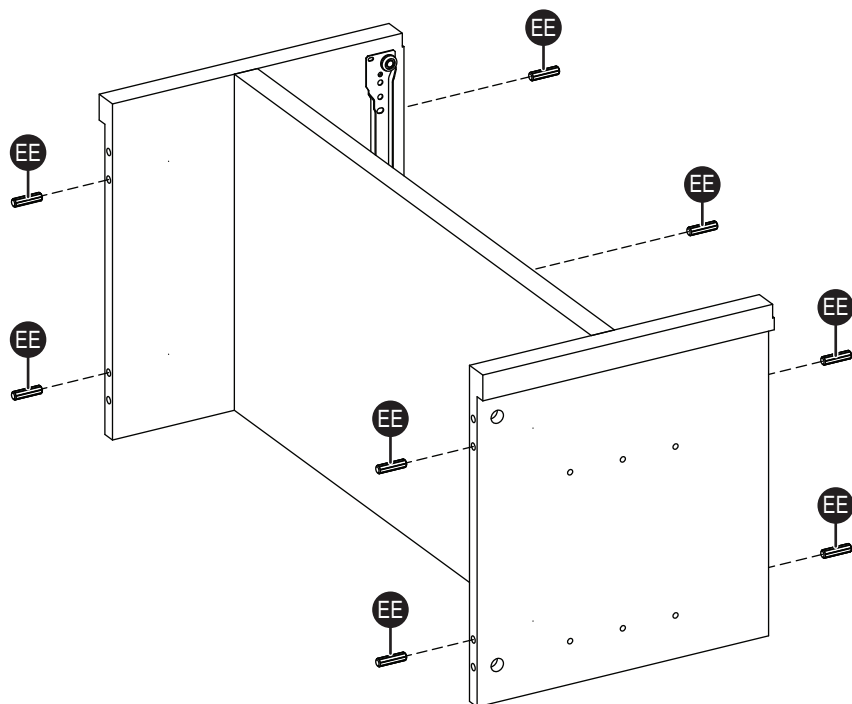





## STEP 6:

### You need:

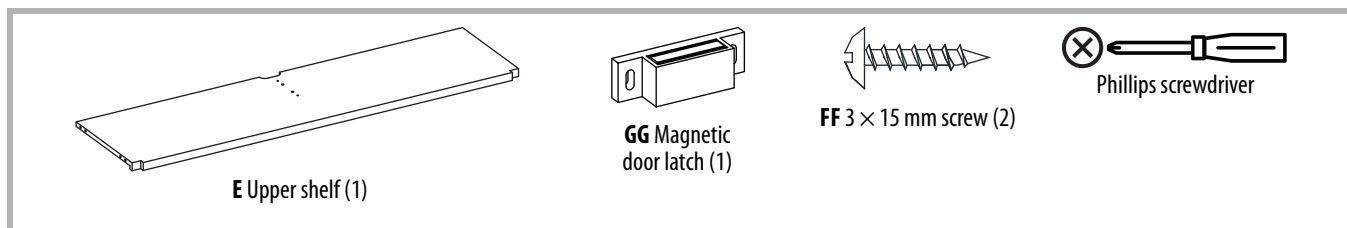


- Align the magnetic door latch (**GG**) with the holes on the upper shelf (**E**), then secure the latch with two 3 × 15 mm screws (**FF**) using a Phillips screwdriver. Make sure that you attach the latch to the side of the shelf that has cross bars.

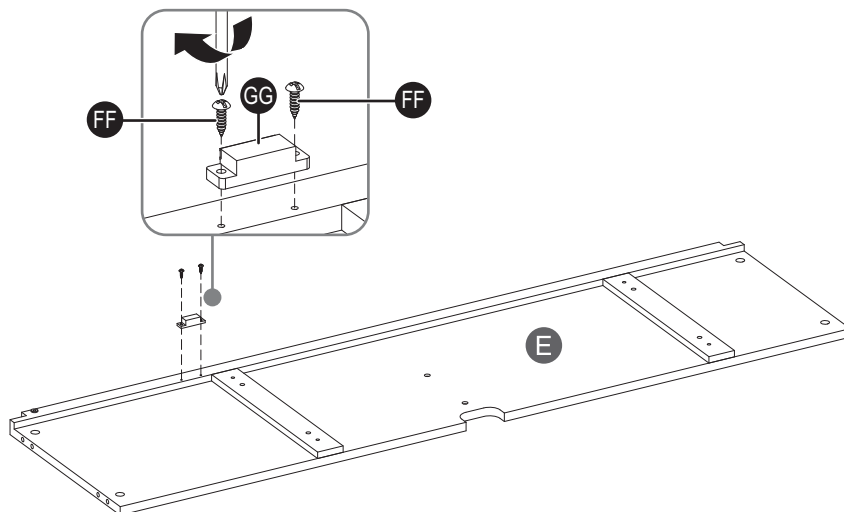

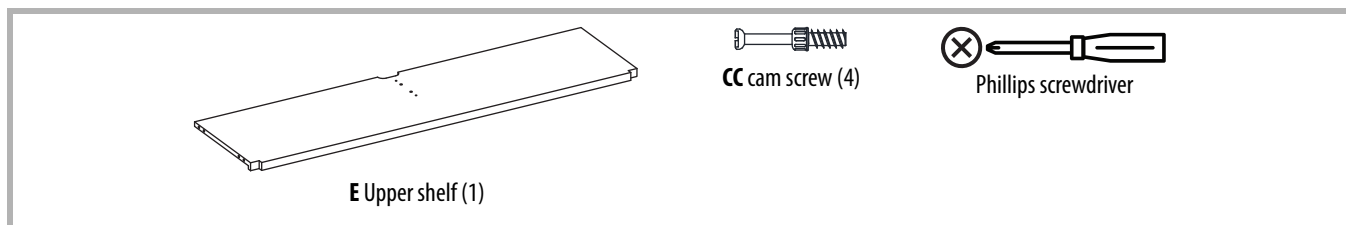
**STEP 7:****You need:**

- Insert four cam screws (**CC**) into the outer holes on the upper shelf (**E**), then tighten the screws using a Phillips screwdriver.

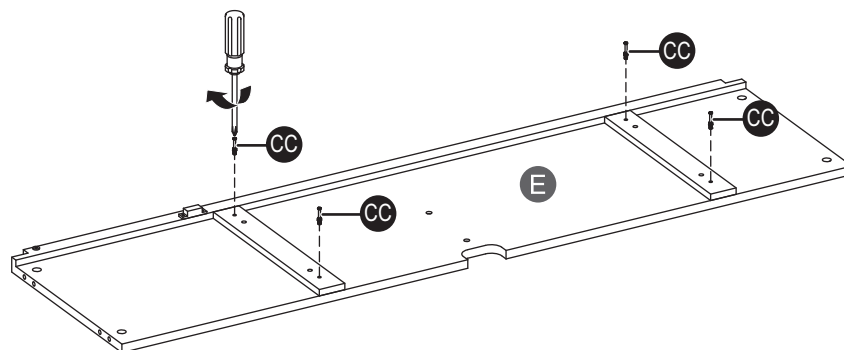


## STEP 8:

### You need:

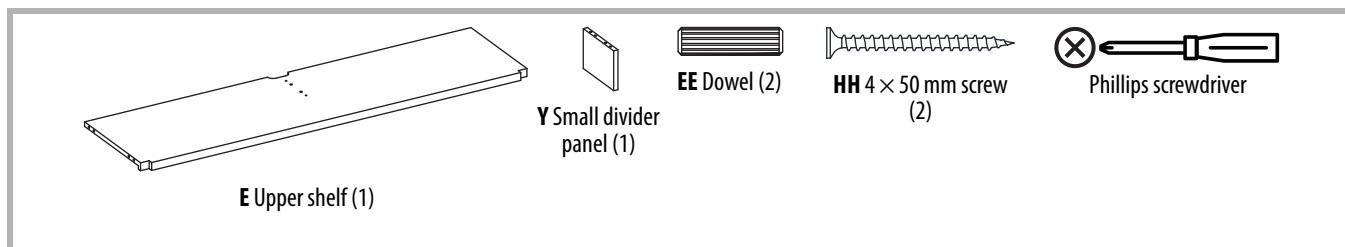


- 1 Insert two dowels (**EE**) into the long edge of the small divider panel (**Y**).
- 2 Insert two 4 × 50 mm screws (**HH**) through the upper shelf (**E**) and into the small divider panel (**Y**), then tighten the screws with a Phillips screwdriver.

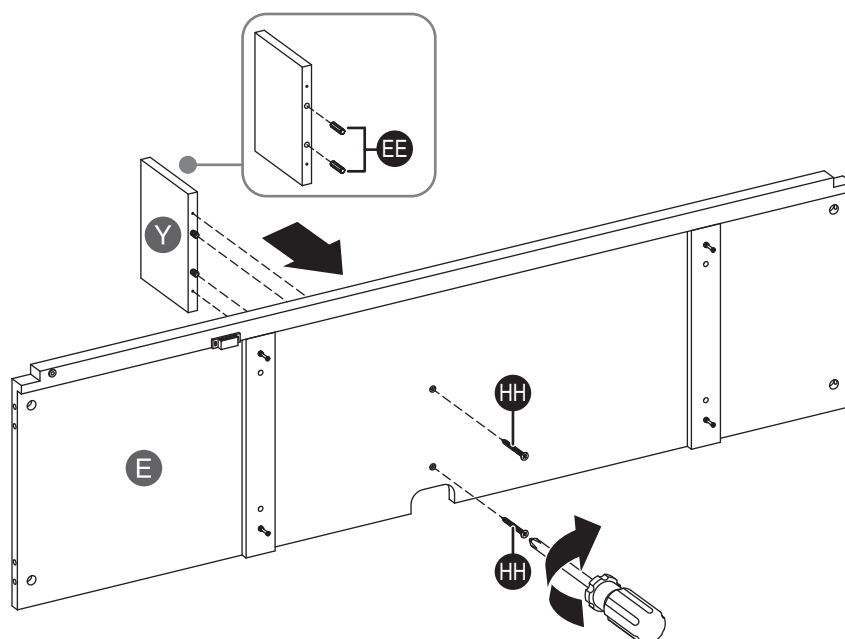


**STEP 9:****You need:****Using cam locks**

When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

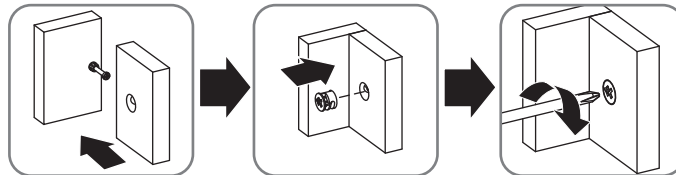


- 1 Insert the dowels and cam screws on the upper shelf (**E**) into the dowel cam lock holes on the left and right divider panels (**B** and **C**), then tighten the screws with a Phillips screwdriver.
- 2 Insert two cam locks (**DD**) into the left divider panel (**B**) and two into right divider panel (**C**) and make sure that the openings on the cam locks cover the cam screws in the panels.
- 3 Tighten the cam locks with a Phillips screwdriver.

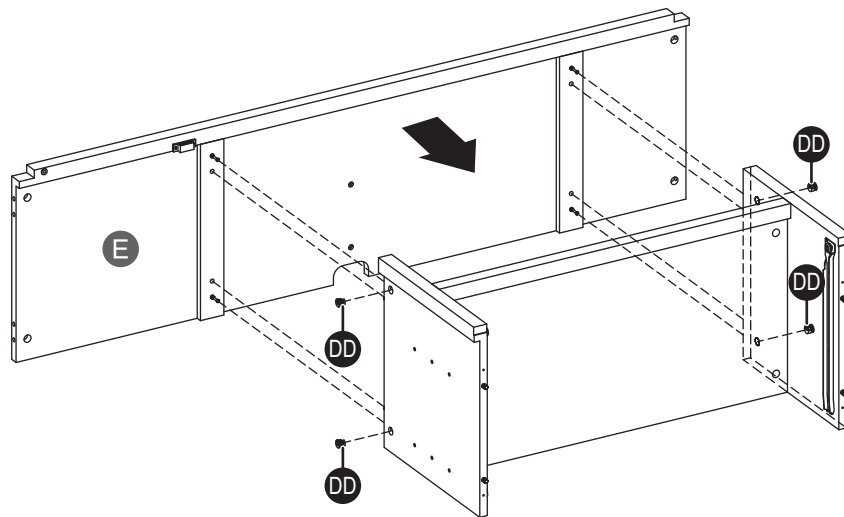


---


## STEP 10:

### You need:

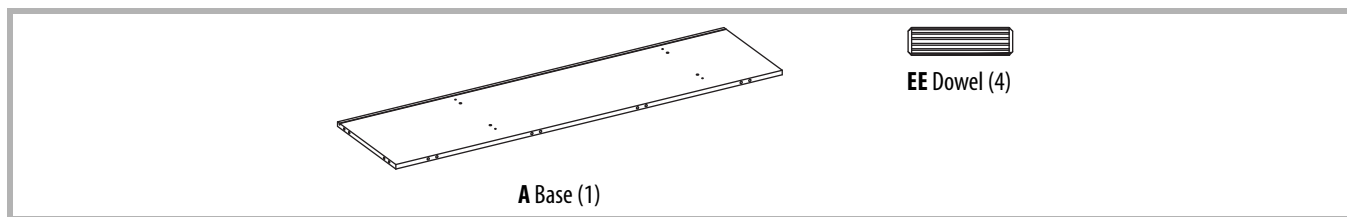


- Insert four dowels (**EE**) into the edge of the base (**A**). Make sure that you use the holes that don't have holes above them.

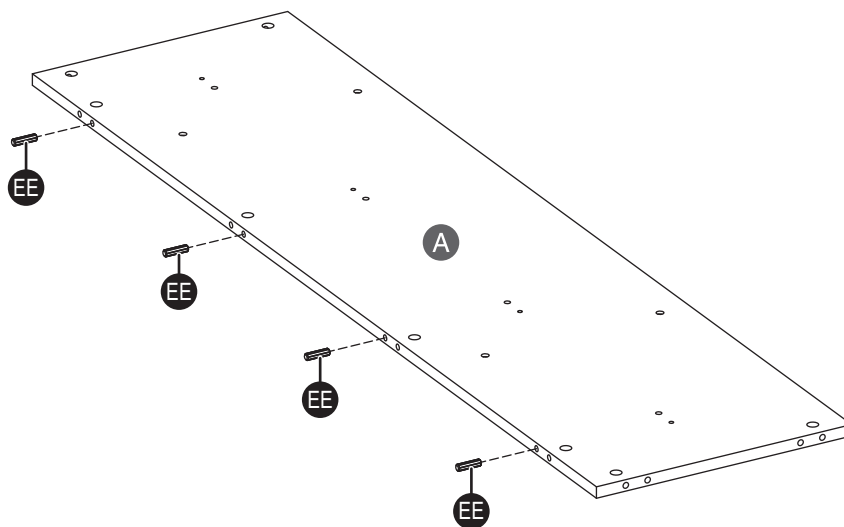

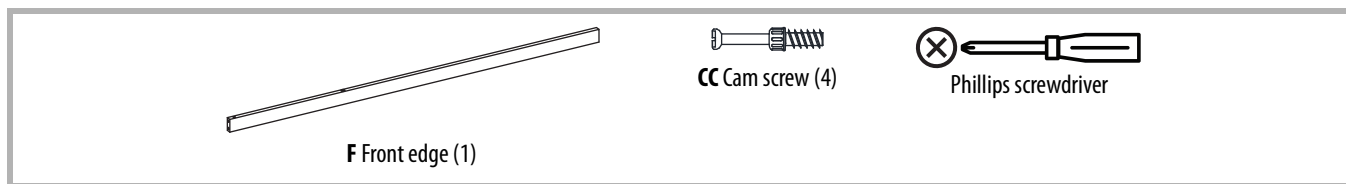
**STEP 11:****You need:**

- 1 Insert four cam screws (CC) into the edge of the front edge (F). Make sure that you use the outer screw hole in each pair of holes.
- 2 Tighten the screws with a Phillips screwdriver.

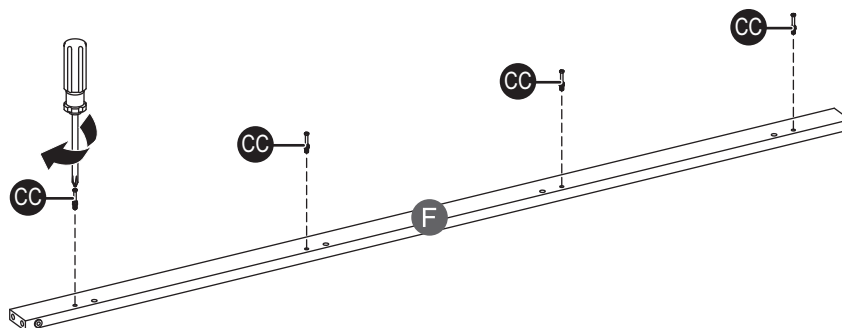


## STEP 12:


### You need:

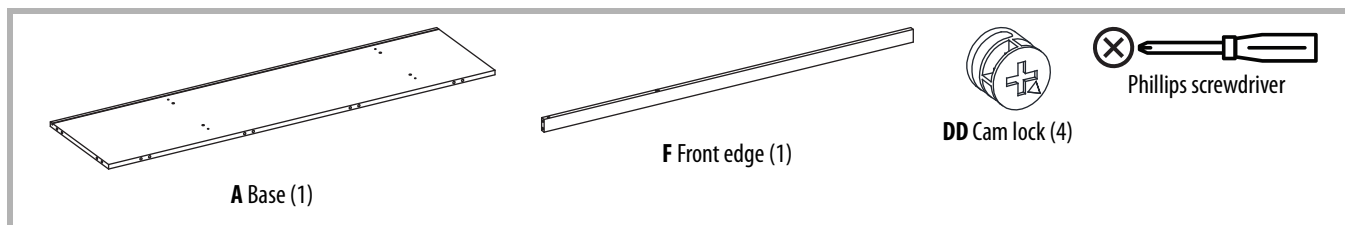


When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

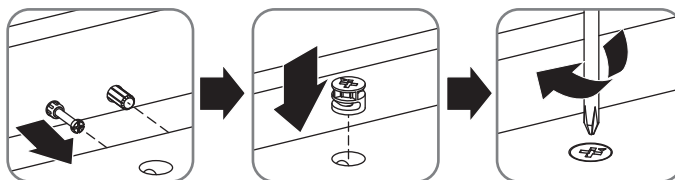


- 1 Insert four cam locks (**DD**) into the holes on the base (**A**).
- 2 Insert the cam screws and dowels on the front edge (**F**) into the cam locks and dowel holes on the base (**A**), then tighten the cam locks with a Phillips screwdriver.

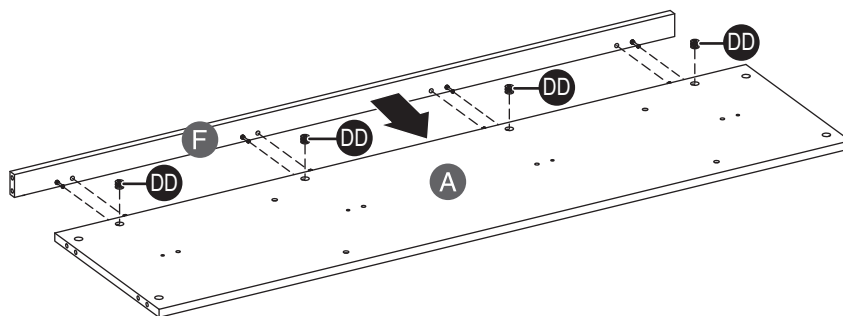

**STEP 13:****You need:**  
CC Cam screw (4)  
EE Dowel (4)  
Phillips screwdriver


- 1 Insert four dowels (**EE**) into the middle holes on the base (**A**). Make sure that you use the inner hole on each pair of holes.
- 2 Insert four cam screws (**CC**) into holes on the base. Make sure that you use the outer hole on each pair of holes.
- 3 Tighten the screws with a Phillips screwdriver.

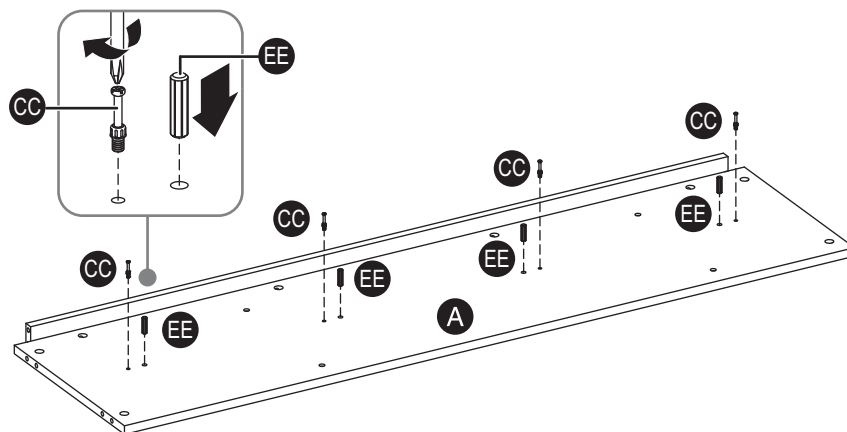




## STEP 14:


### You need:

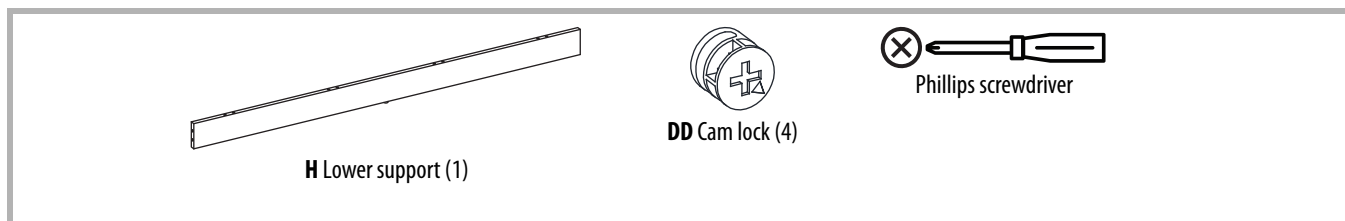


When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

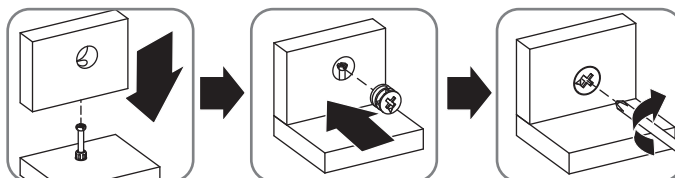

 
- 1 Insert four cam locks (**DD**) into lower support (**H**).
- 2 Insert the cam screws in the base (**A**) into the cam locks, then tighten the cam locks with a Phillips screwdriver.

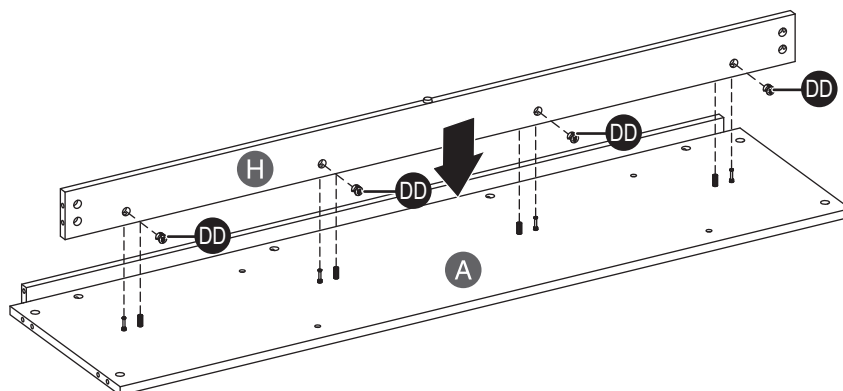

**STEP 15:****You need:****HH 4 × 50 mm screw (4)**

Phillips screwdriver

- 1 Insert four 4 × 50 mm screws (**HH**) through the base (**A**) and into the holes on the bottom edges of the left and right divider panels.
- 2 Tighten the screws with a Phillips screwdriver.

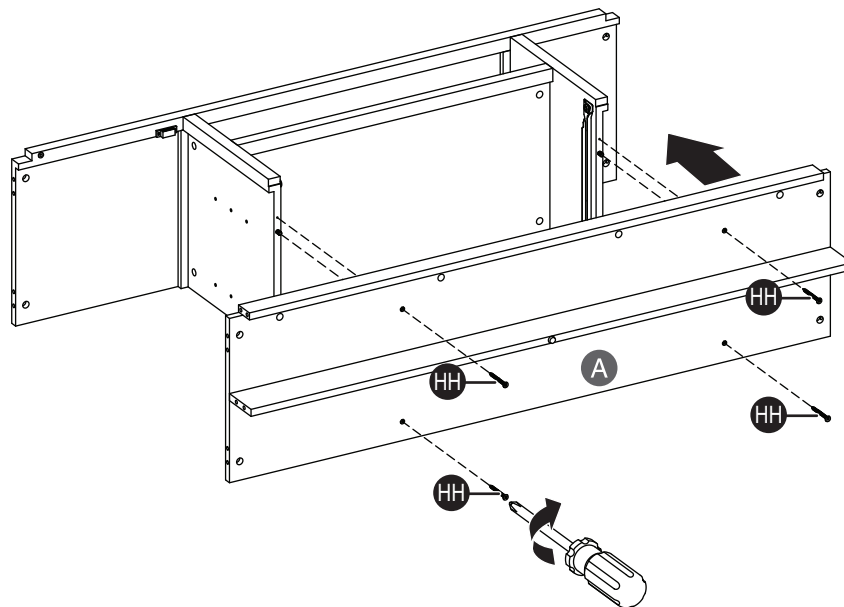

---


## STEP 16:


### You need:




EE Dowel (12)

- 1 Insert four dowels (**EE**) into the base (**A**).
- 2 Insert four dowels (**EE**) into the front edge (**F**).
- 3 Insert four dowels (**EE**) into the left and right divider panels (**A** and **B**).

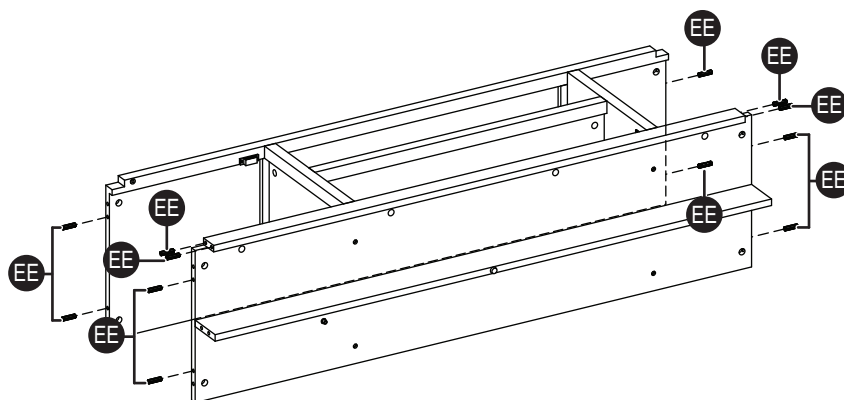

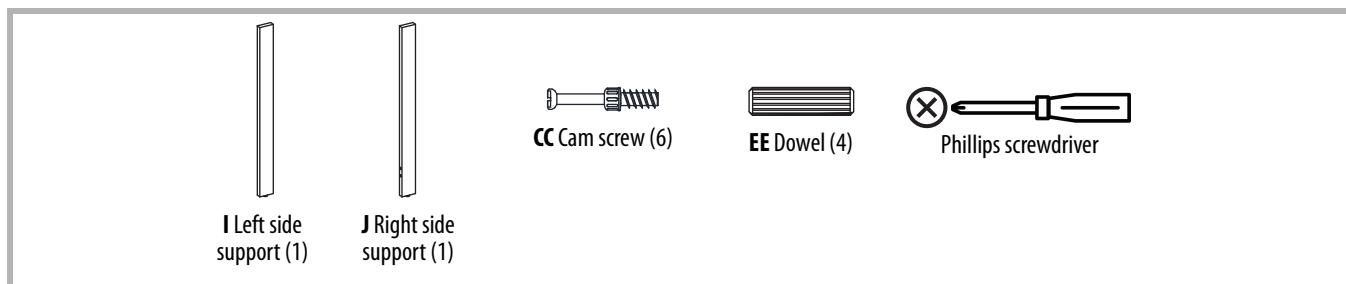
**STEP 17:****You need:**

- 1 Insert three cam screws (**CC**) and two dowels (**EE**) into the left side support (**I**) and three cam screws and two dowels into the right side support (**J**).
- 2 Tighten the screws with a Phillips screwdriver.

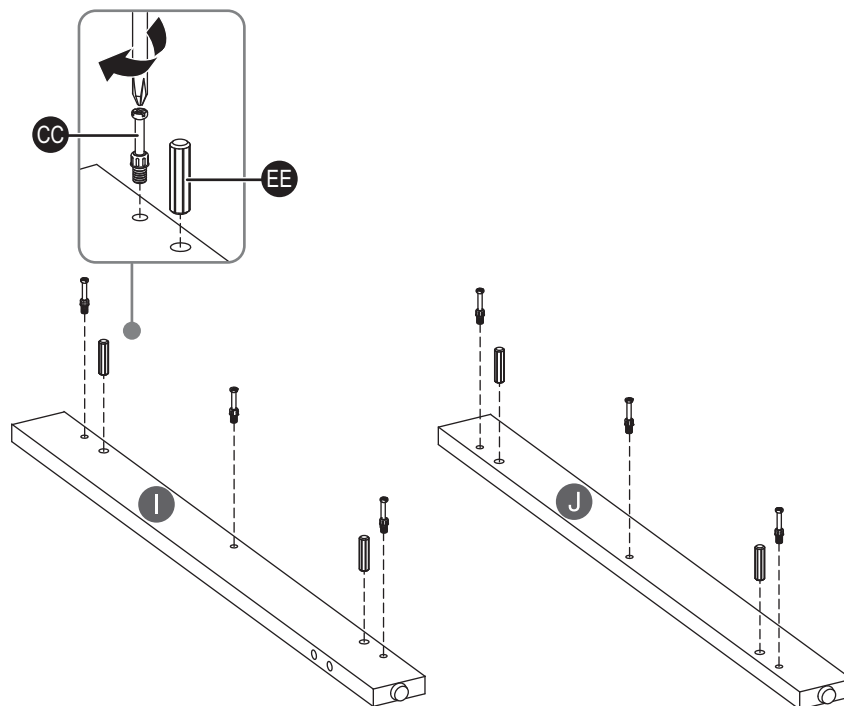


## STEP 18:


### You need:

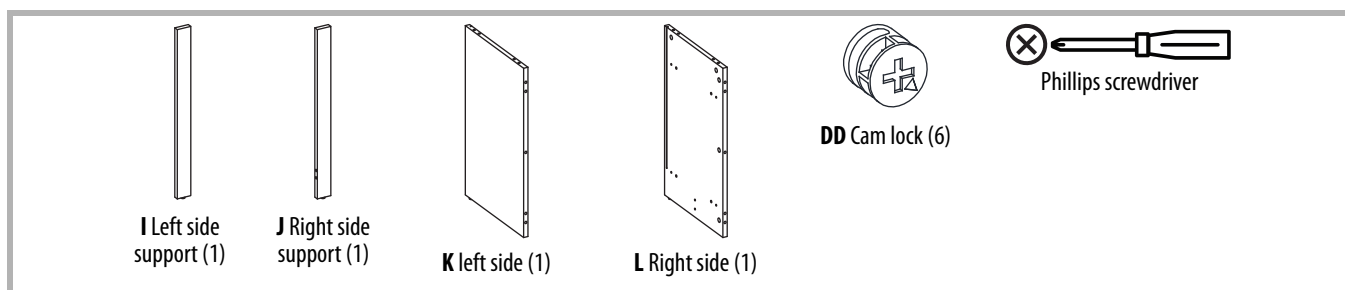


When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

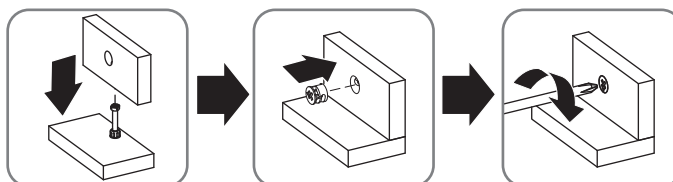


- 1 Insert three cam locks (**DD**) into the left side (**K**) and three cam locks into the right side (**L**).
- 2 Insert the cam screws on the left support (**I**) and right support (**J**) into the cam locks on the left and right sides, then tighten the screws with a Phillips screwdriver.

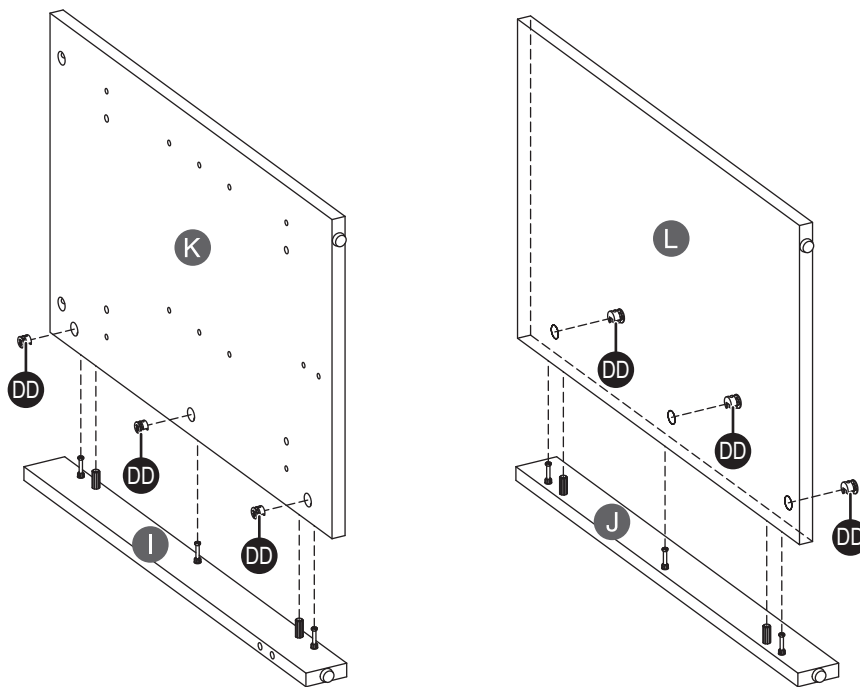

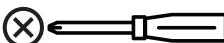**STEP 19:****You need:**  
**CC** Cam screw (12)  
Phillips screwdriver

- Insert six cam screws (**CC**) into the left side (**K**) and six cam screws into the right side (**L**), then tighten the screws with a Phillips screwdriver.

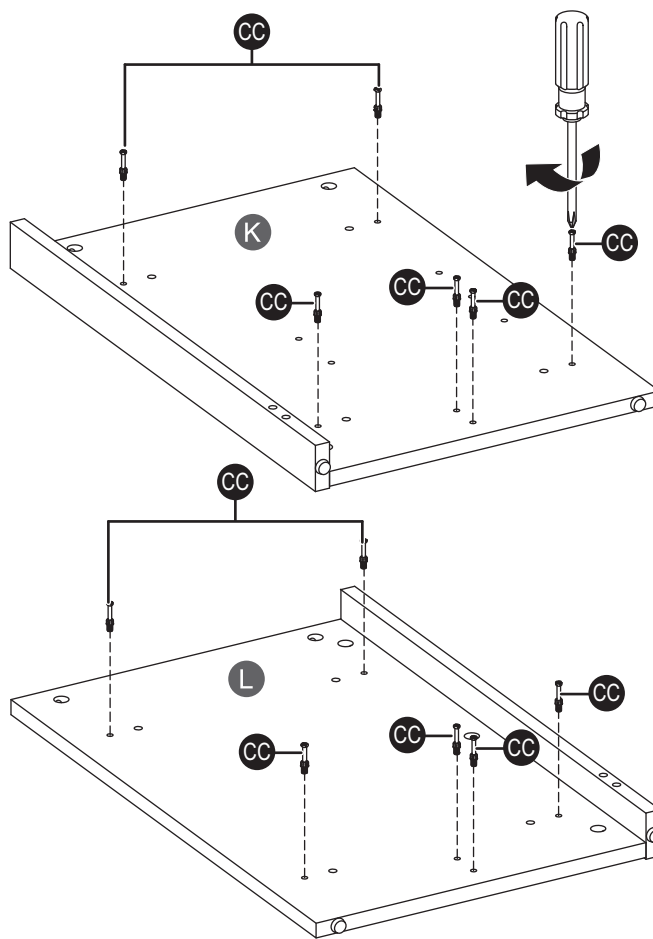


## STEP 20:

### You need:



 
DD Cam lock (12)




Phillips screwdriver


### Using cam locks

When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

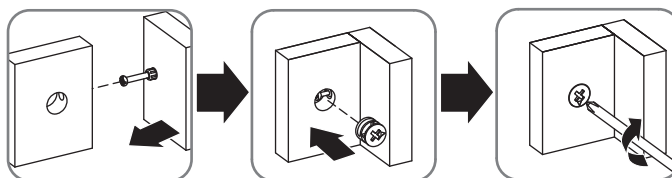


- 1 Insert one cam lock (DD) into each corner of the bottom of the upper shelf (E).
- 2 Insert one cam lock into each corner of the bottom of the base (A).
- 3 Insert two cam locks into the bottom of the left and right sides of the lower shelf (H).
- 4 Insert the six cam screws on the left side (K) into the cam locks, then tighten the cam locks with a Phillips screwdriver.
- 5 Insert the six cam screws on the right side (L) into the cam locks, then tighten the cam locks with a Phillips screwdriver.

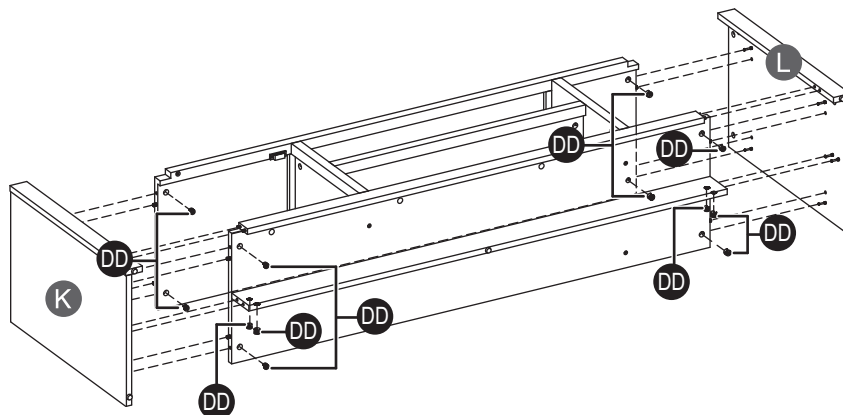

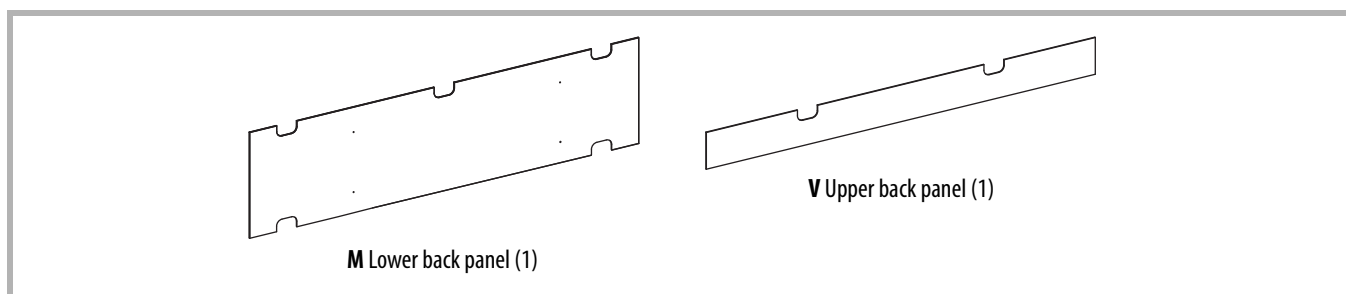**STEP 21:****You need:**

- Slide the lower back panel (**M**) into the grooves on the left and right sides (**K** and **L**) then slide the upper back panel (**V**).

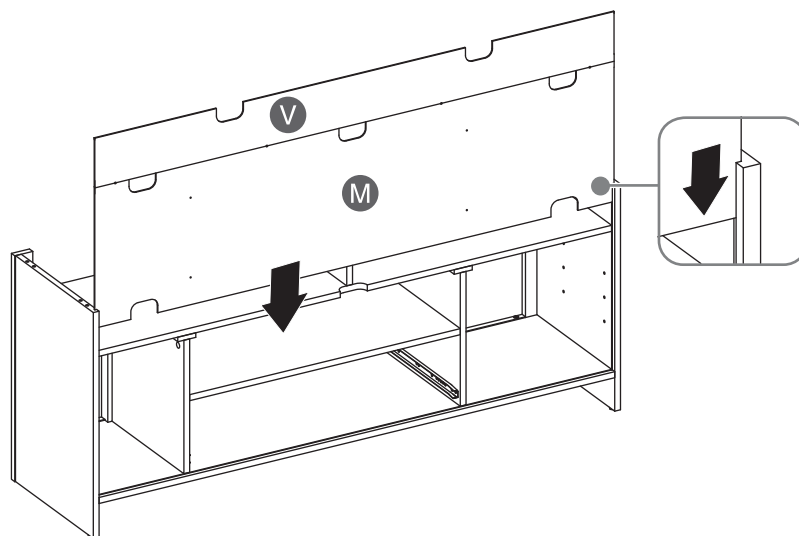





---


**STEP 22:****You need:****EE Dowel (6)**

- Insert two dowels (**EE**) into the top edges of the left side (**K**), the right side (**K**), and the small divider (**Y**). Make sure that you use the inside hole in each pair of holes.

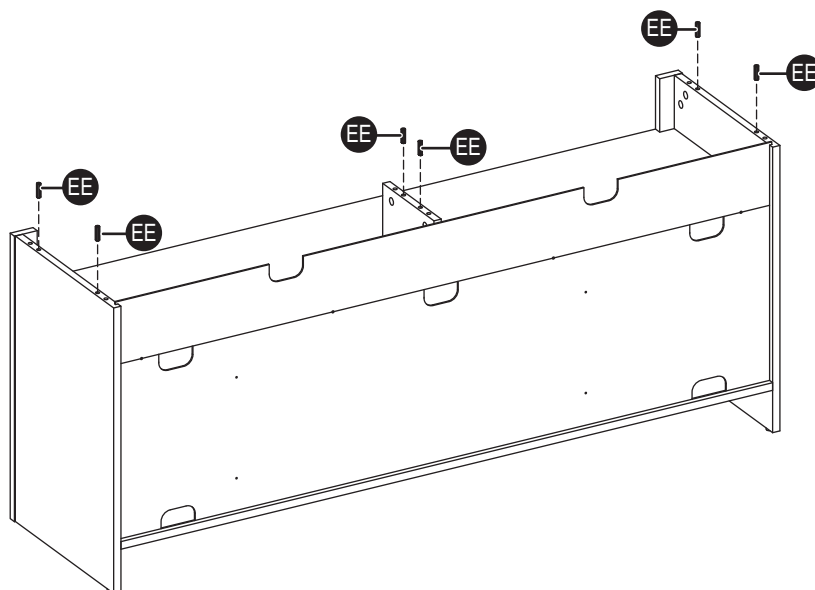

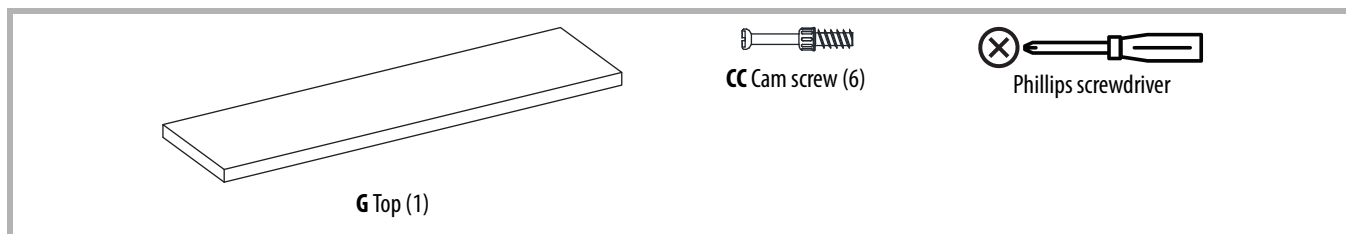**STEP 23:****You need:**

- 1 Insert one cam screw (**CC**) into each corner and the middle of the top (**G**). Make sure that you use the outside hole of each pair of holes.
- 2 Tighten all screws with a Phillips screwdriver.

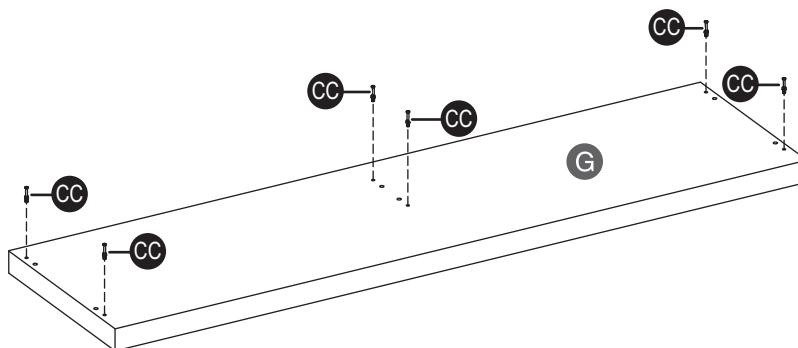


## STEP 24:

### You need:




 DD Cam lock (6)




Phillips screwdriver

When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

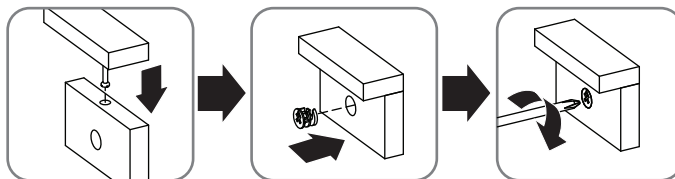


- 1 Insert two cam locks (**DD**) into the inside top edges of the left side (**K**), the right side (**L**), and the left top side of the small divider (**Y**).
- 2 Lay the top (**G**) onto the left and right sides. Make sure that the cam screws fit into the cam locks,
- 3 Tighten all cam locks with a Phillips screwdriver.

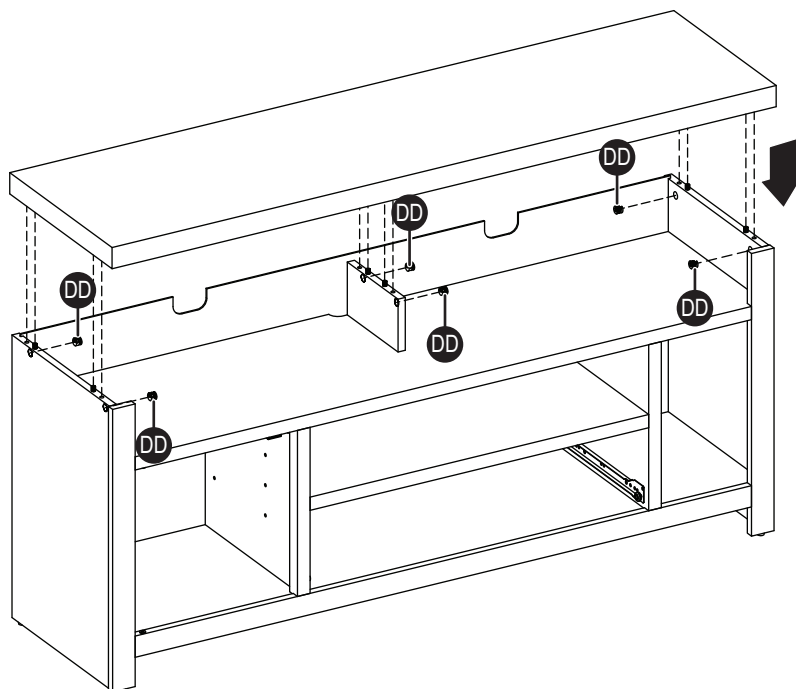


**STEP 25:****You need:****VV** Cam lock cover (14)

- Snap cam lock covers (**VV**) over the exposed cam locks on the left and right sides, the small divider (panel), and the left and right divider panels.

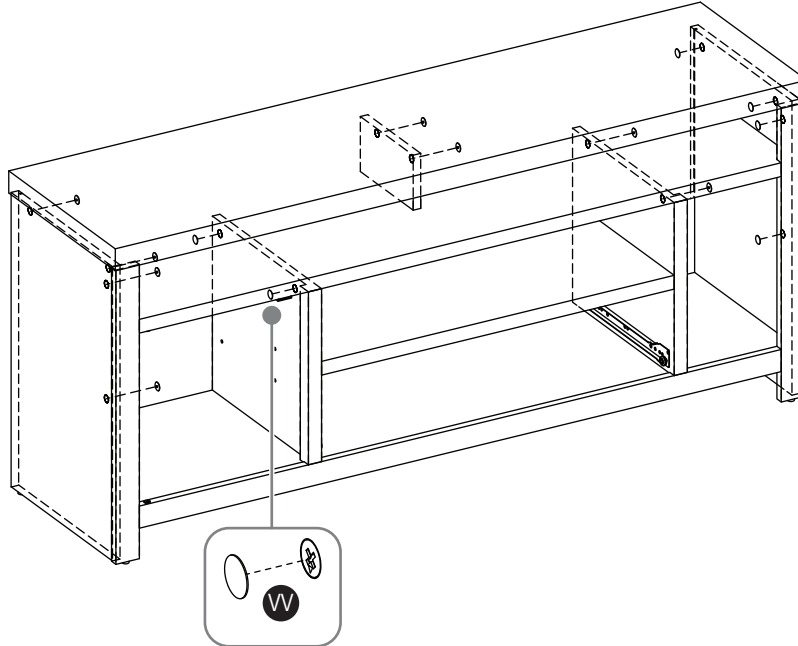

## STEP 26:


### You need:

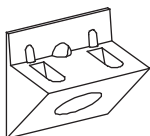

**RR** Back support bracket (12)






 
**SS** 3.5 × 16 mm screw (12)



Phillips screwdriver

   
- Insert twelve back brackets (**RR**) into the edges of the back panels, then secure each bracket with a 3.5 × 16 mm screw (**SS**).

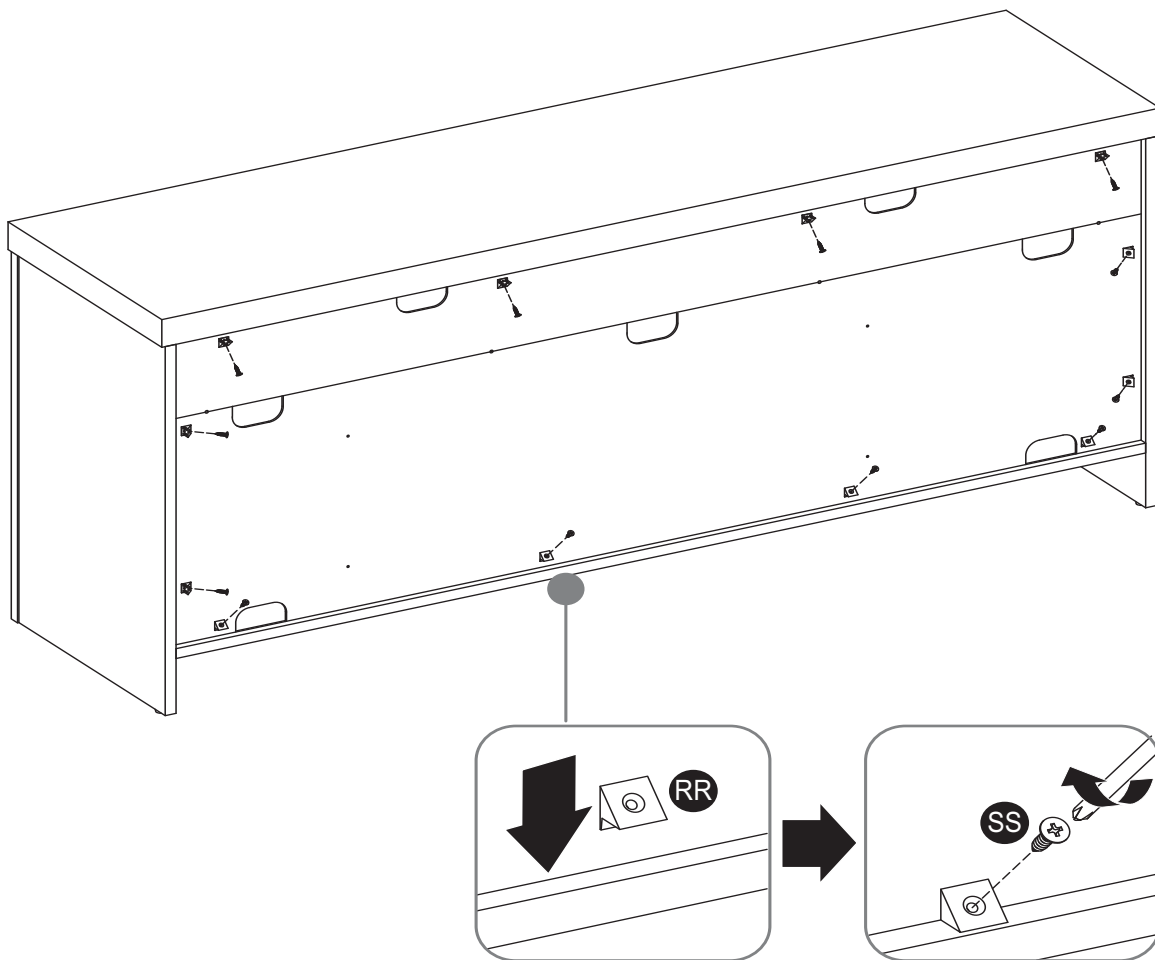


**STEP 27:****You need:****II** 3 × 16 mm screw (6)**TT** Cable wrap (2)

Phillips screwdriver


- 1 Insert six 3 × 16 mm screw (**II**) along the outer edges of the lower back (**M**), then tighten the screws with a Phillips screwdriver.
- 2 Align two cable wraps (**TT**) with the holes in the middle of the lower back, then secure each wrap with a 3 × 16 mm screw (**II**) using a Phillips screwdriver.



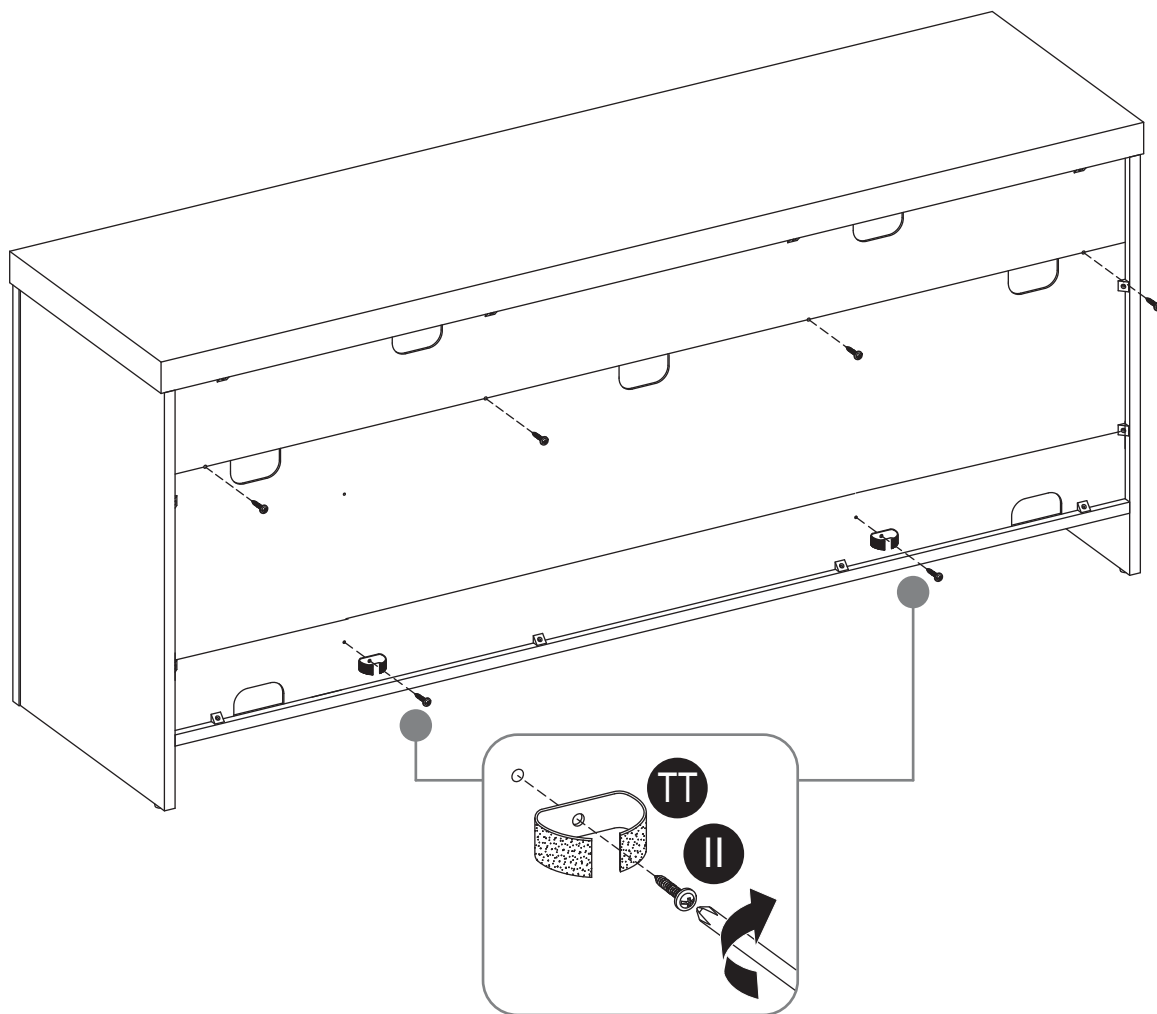


---

 **STEP 28:****You need:**

  
- 1 Remove the screws from the handle (**JJ**).
- 2 Align the handle with the holes on the outside of the door (**N**), then insert the screws through the inside of the door and into the handle.
- 3 Tighten the screws with a Phillips screwdriver.

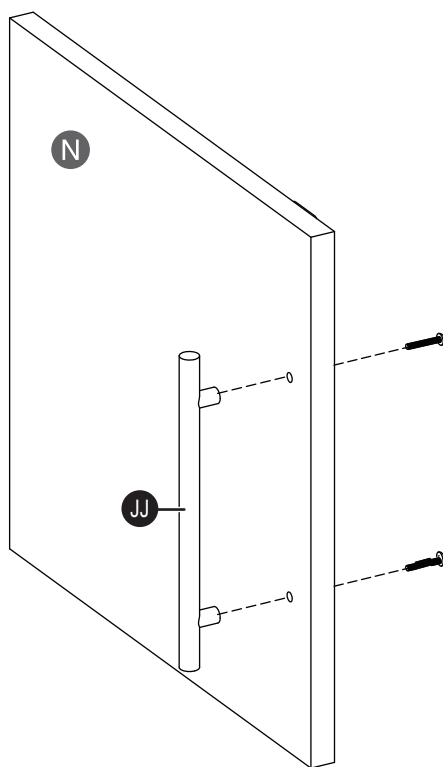

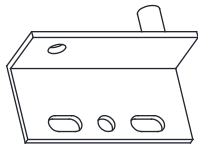**STEP 29:****You need:****KK** Lower hinge pin (1)**LL** Upper hinge pin (1)**XX** 3 × 12 mm screw (4)

Phillips screwdriver

- 1 Insert the lower hinge pin (**KK**) into the pin hole on the left bottom of cabinet.
- 2 Insert the upper hinge pin (**LL**) into the pin hole on the left top of cabinet.
- 3 With the handle facing out, slide the door (**N**) onto the hinge pins that the screw holes on the door align with the holes in the hinge pins.
- 4 Secure the door to each hinge pin with two 3 × 12 mm screws (**XX**) using a Phillips screwdriver.

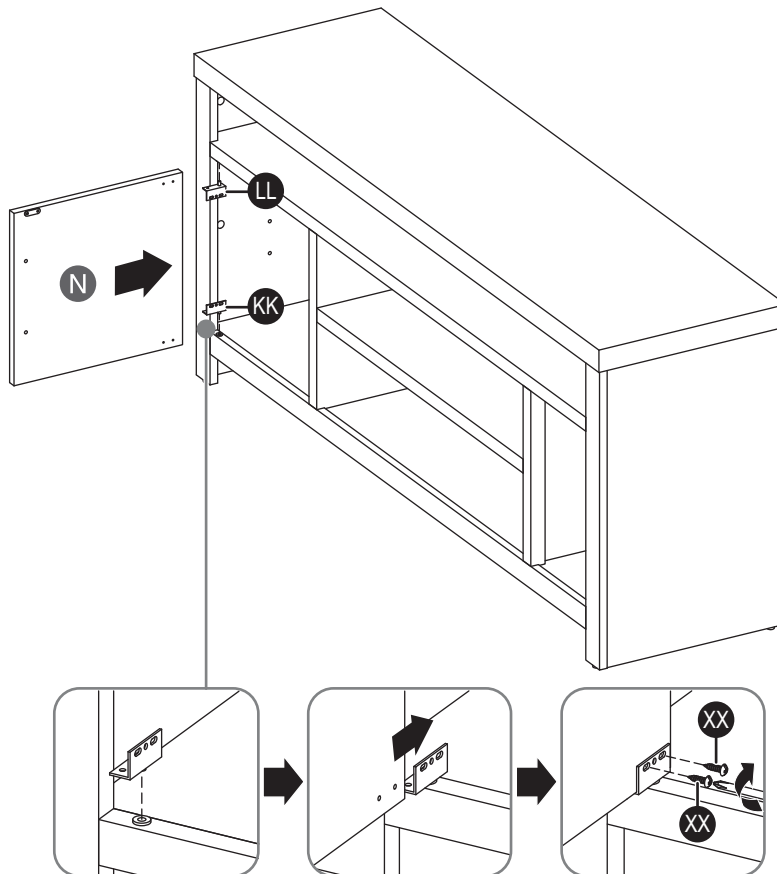




---


**STEP 30:**


 
After the door is installed, you might need to adjust the door so that it fits snugly into the cabinet.

**You need:**


Phillips screwdriver

  - Loosen the hinge pin screws, slightly slide the door forward or back, then tighten the screws.

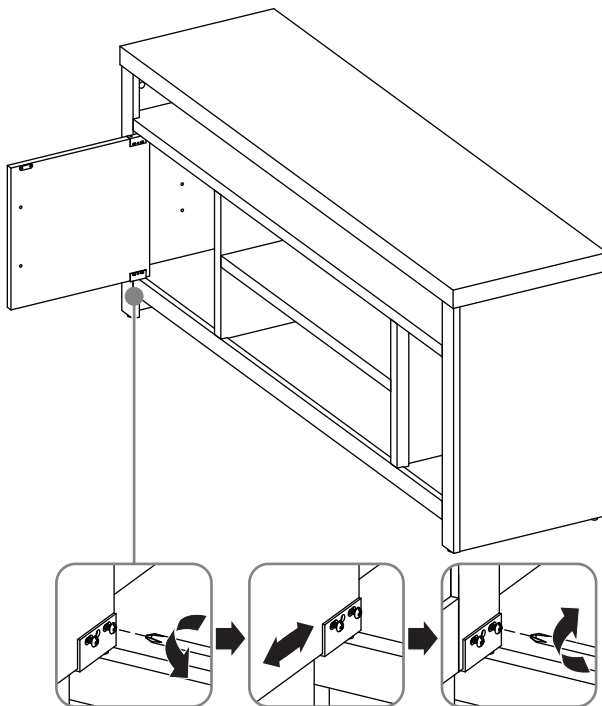


**STEP 31:****You need:****O** Short upper shelf (1)**MM** shelf support (4)

- 1 Insert the four shelf supports (**MM**) inside the cabinet. Make sure that all the supports are on the same level.
- 2 Tilt the short upper shelf (**O**), then slide the shelf above the shelf supports and into the cabinet.
- 3 Lower the shelf onto the supports.

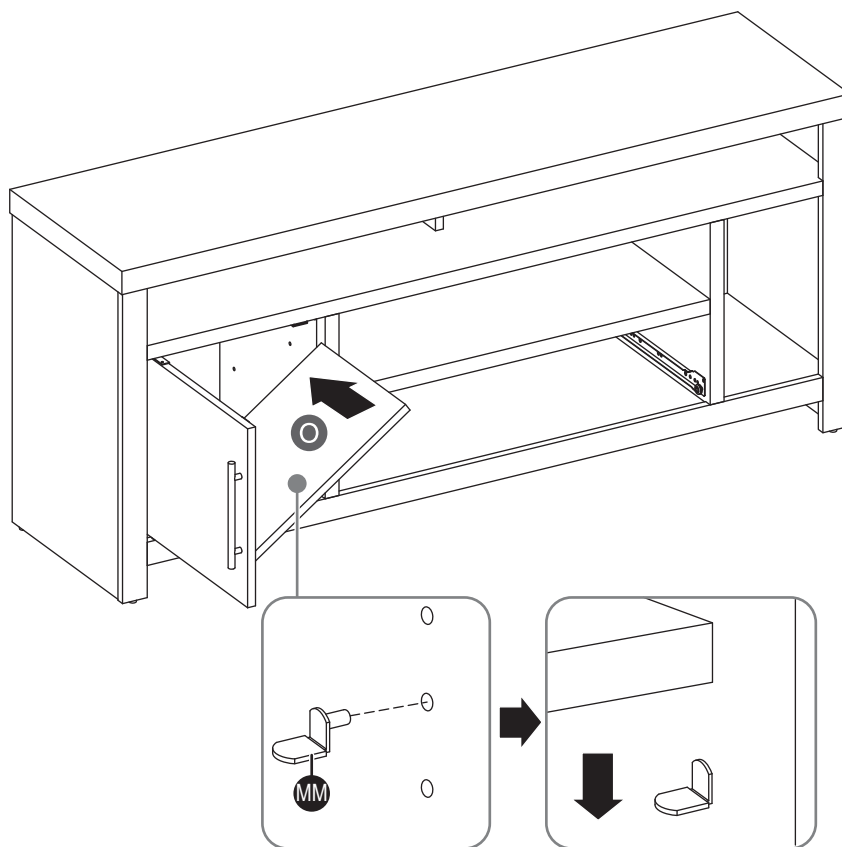



## STEP 32:

### You need:

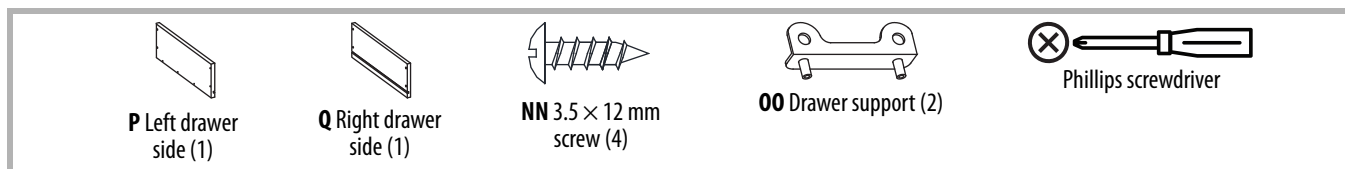


- 1 Align a drawer support (**OO**) with the holes on the inside of the left drawer side (**P**), then insert two 3.5 × 12 mm screws (**NN**) through the outside of the drawer and into the support.
- 2 Tighten the screws with a Phillips screwdriver.
- 3 Align a drawer support (**OO**) with the holes on the inside of the right drawer side (**Q**), then insert two 3.5 × 12 mm screws (**NN**) through the outside of the drawer and into the support.
- 4 Tighten the screws with a Phillips screwdriver.

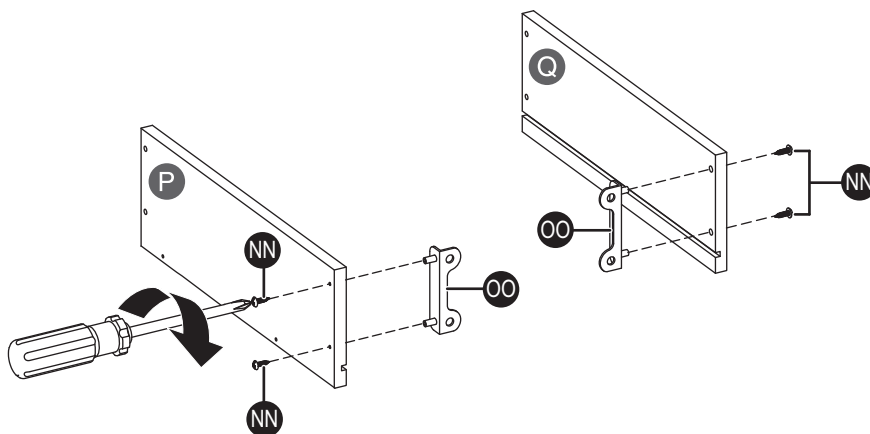

 **STEP 33:****You need:****R** Drawer back (1)**PP** 4 × 38 mm screw  
(4)

Phillips screwdriver

- 1 With the grooves in the drawer back (**R**) and the left and right drawer sides (**P** and **Q**) facing inward, insert two 4 × 38 mm screws (**PP**) through the left and right drawer sides and into the drawer back.
- 2 Tighten the screws with a Phillips screwdriver.

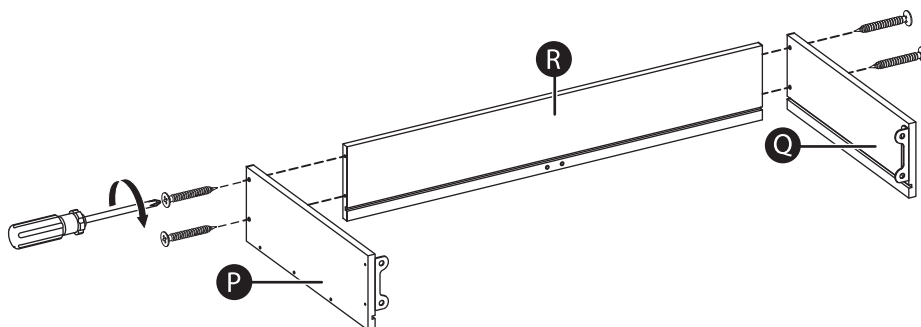


---

**STEP 34:**


**S** Drawer bottom (1)

- With the drawer back facing down, slide the drawer bottom (**S**) into the grooves on the drawer sides and back.

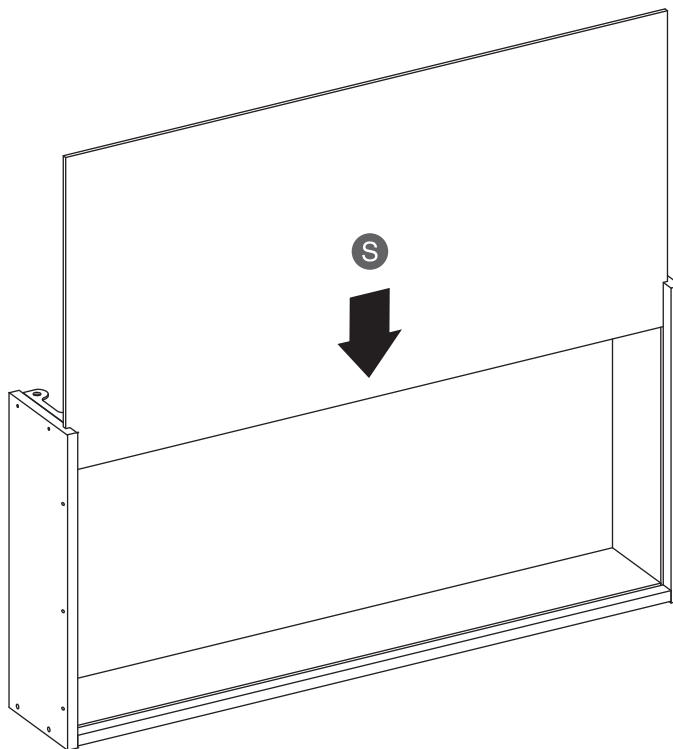


**STEP 35:****You need:**

**T** Drawer support (1)




**PP** 4 × 38 mm screw  
(2)

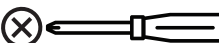


Phillips screwdriver

- 1 Insert two 4 × 38 mm screws (**PP**) through the holes on the back of the drawer and into the holes in the drawer support (**T**).
- 2 Tighten the screws with a Phillips screwdriver.

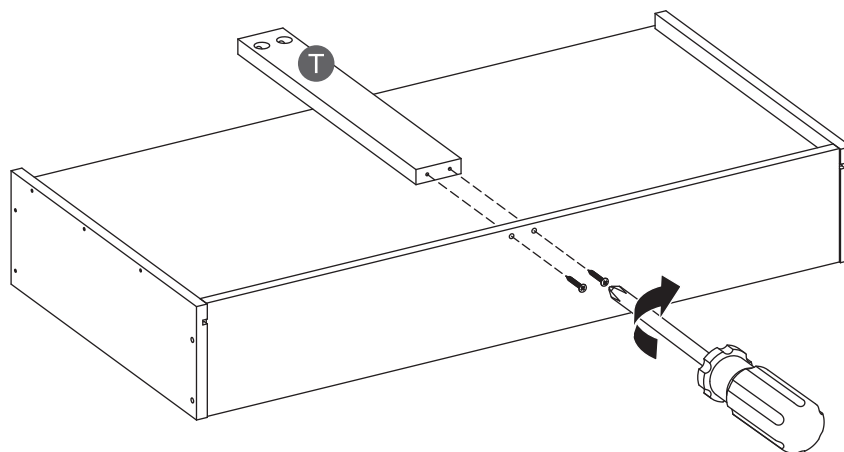

## STEP 36:

 
### You need:



**U** Drawer front (1)




 
**CC** Cam screw (2)



Phillips screwdriver

 
- With the groove in the drawer front (**U**) facing up, insert two cam screws (**CC**) into the drawer front, then tighten the screws with a Phillips screwdriver.

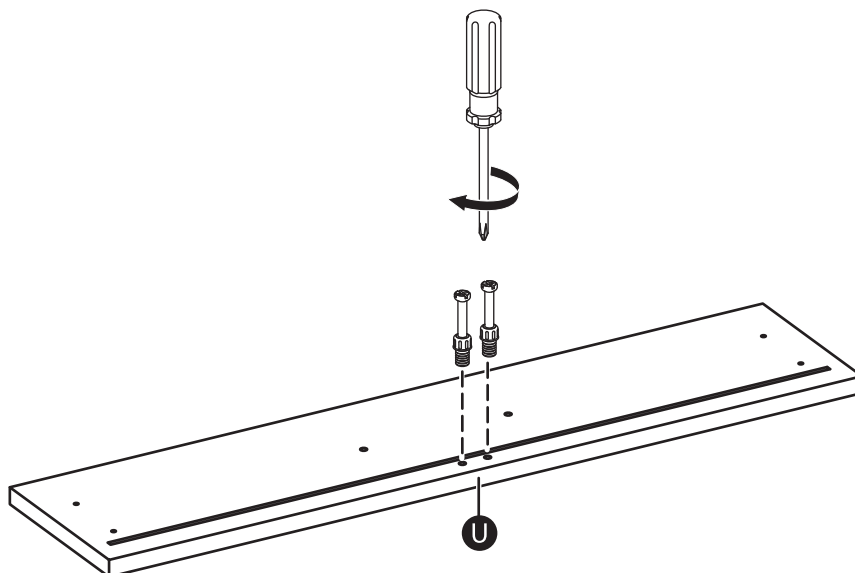


**STEP 37:****You need:****WW** Cam lock (2)

Phillips screwdriver

When you insert a cam lock, position the open end of the lock toward the cam screw, then insert the cam screw into the cam lock opening.

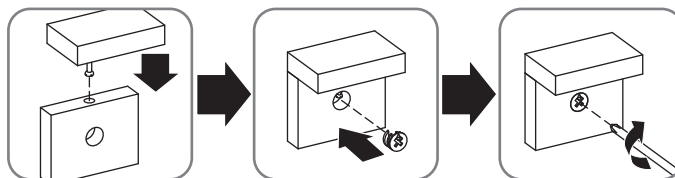


- 1 Insert the two cam screws on the drawer front (**U**) into the drawer support.
- 2 Insert two cam locks (**WW**) into the two holes on the drawer support, then tighten the locks with a Phillips screwdriver.

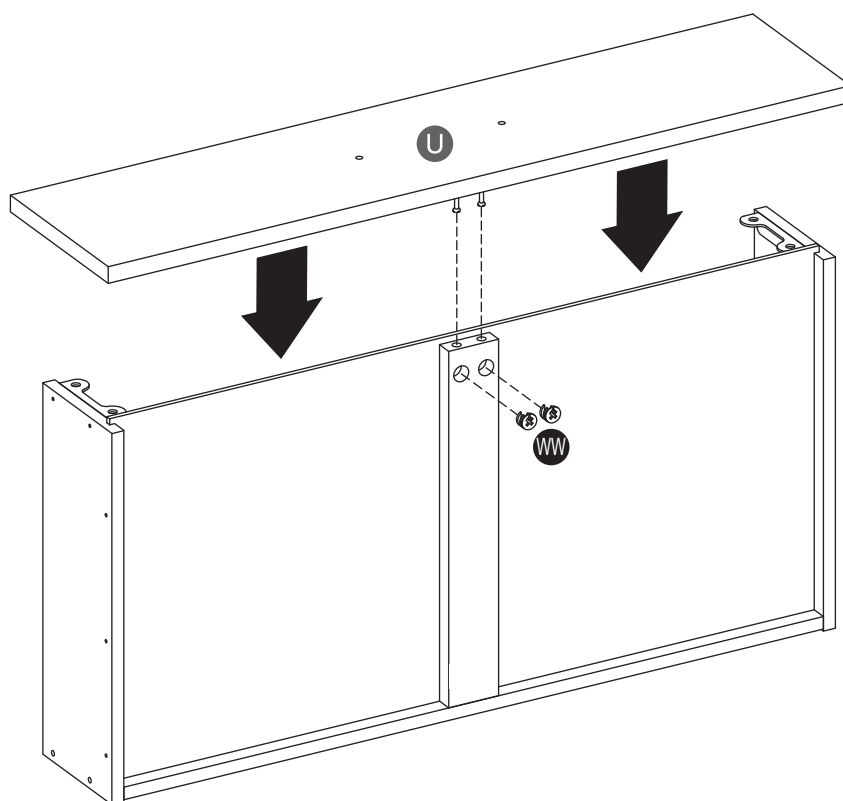




## STEP 38:
 
### You need:





**QQ** 4.5 × 14 mm screw (4)

 


Phillips screwdriver

 - 1 Align the sides of the drawer so the holes in the brackets align with the holes on the drawer front.
- 2 Insert two 4.5 × 14 mm screws (**QQ**) through each bracket and into the drawer front.
- 3 Tighten the screws with a Phillips screwdriver.

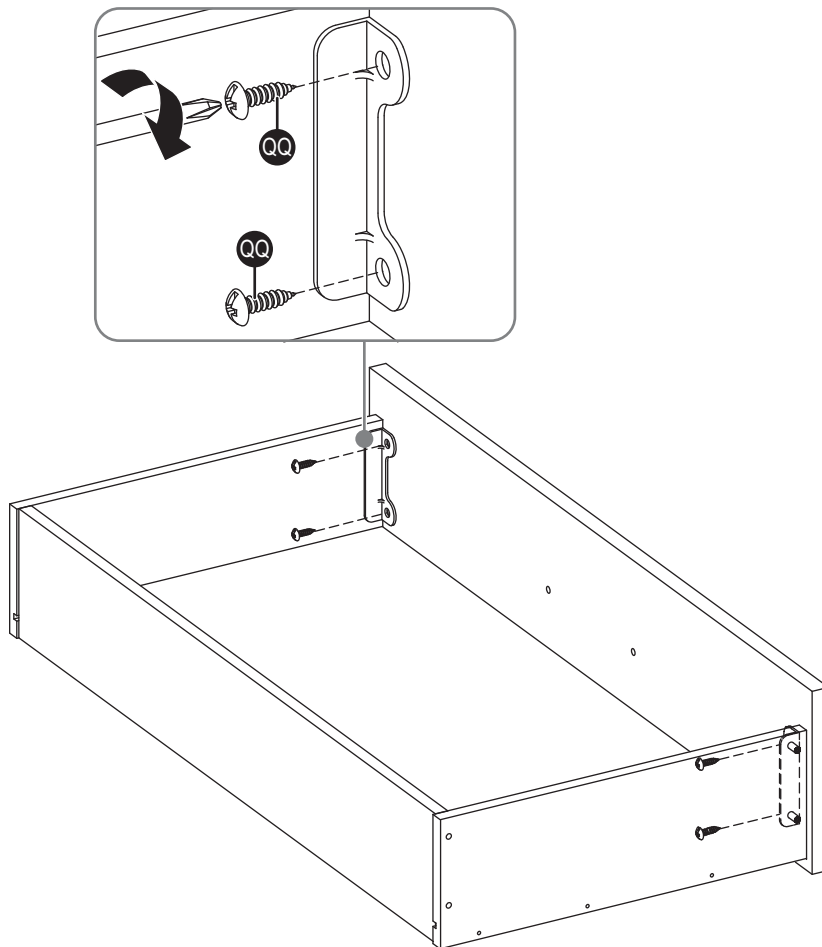




**STEP 39:****You need:**

- 1 Remove the screws from the handle (JJ).
- 2 Align the handle with the holes on the outside of the drawer front, then insert the screws through the back of the drawer front and into the handle.
- 3 Tighten the screws with a Phillips screwdriver.

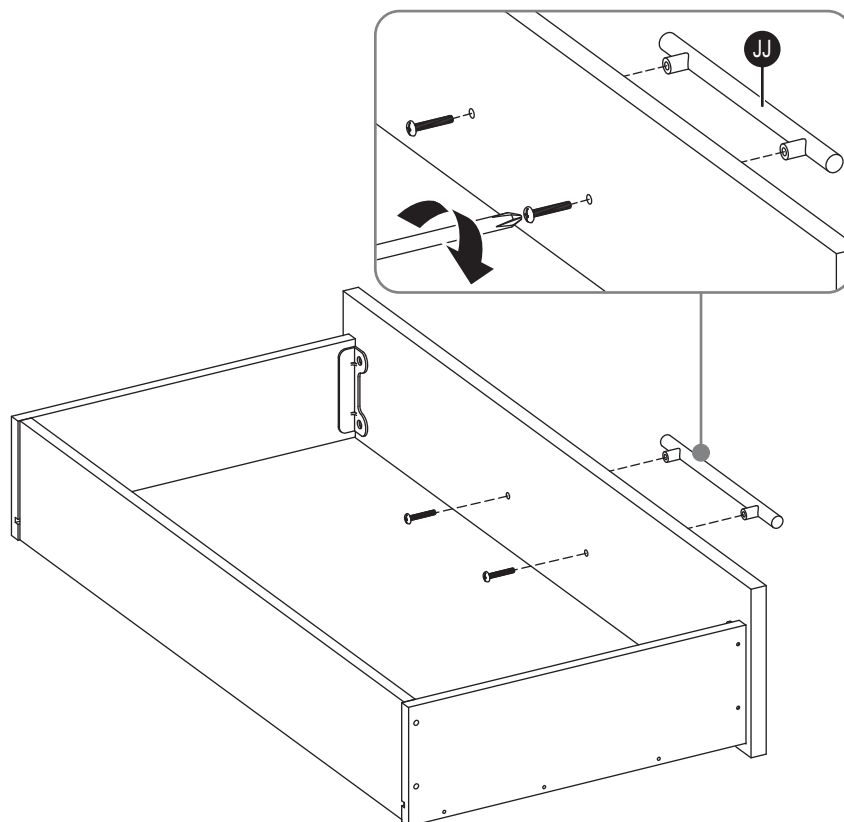


## STEP 40:
  
### You need:

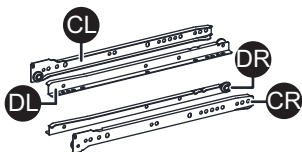


- 1 Insert three 3 × 12 mm screws (**AA**) into the holes on the **DL** and **DR** parts of the rail assembly (**BB**).
- 2 Align the screws in the **DL** and **DR** parts of the rail assembly with the holes on the outside of the left and right drawer sides.
- 3 Tighten the screws with a Phillips screwdriver.

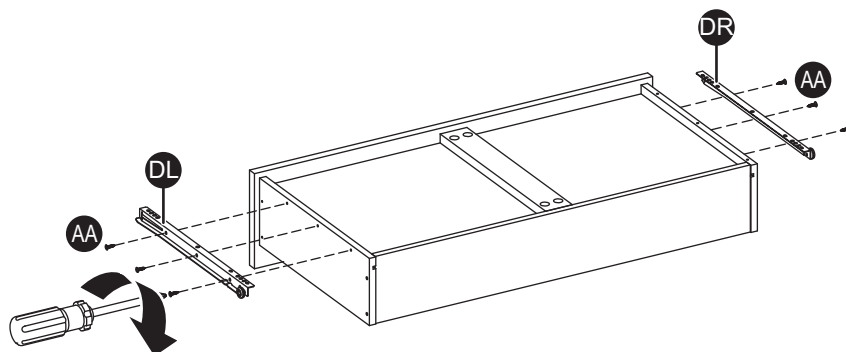

**STEP 41:**

- 1 Align the rail assemblies on the drawer with the rails inside cabinet, then slightly lift the drawer up so that the wheels fit into the slots on the rail assemblies.
- 2 Slide the drawer into the cabinet.

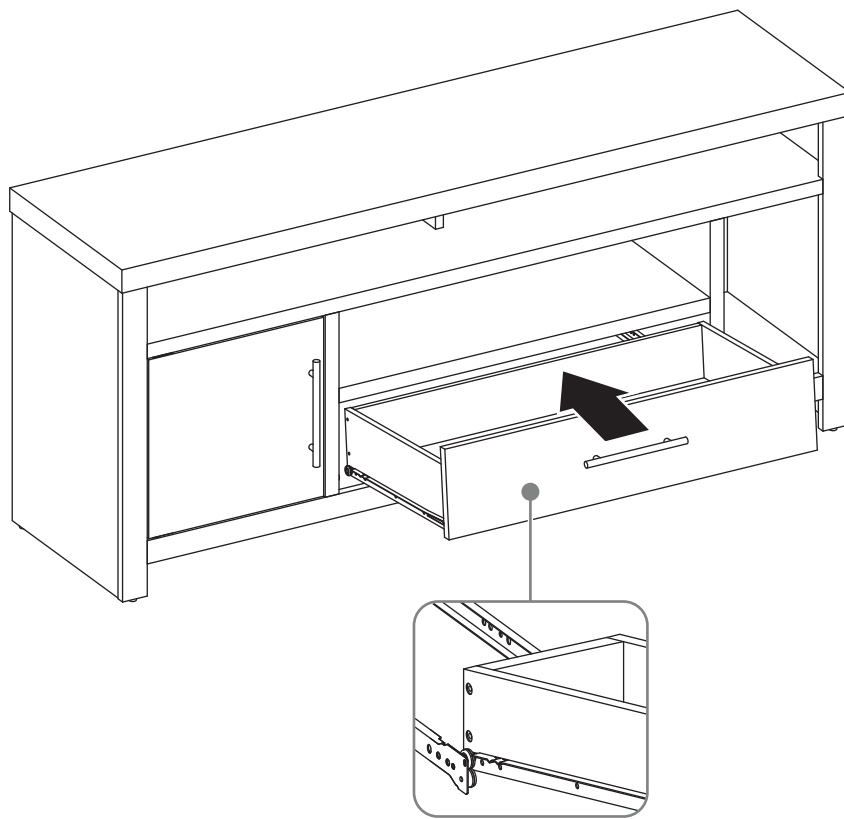


## STEP 42:

### You need:




 **UU** Anti-tip bracket with plastic strap (2)



Phillips screwdriver

- 1 Insert one screw through one hole on each bracket and into the left and right holes on the top of the back. Tighten the screws with a Phillips screwdriver.
- 2 Insert two screws through the two holes on each bracket and into the wall stud. Tighten the screws with a Phillips screwdriver.
- 3 Pull the plastic strap on each bracket to secure your TV stand to the wall. Tighten the screws with a Phillips screwdriver.

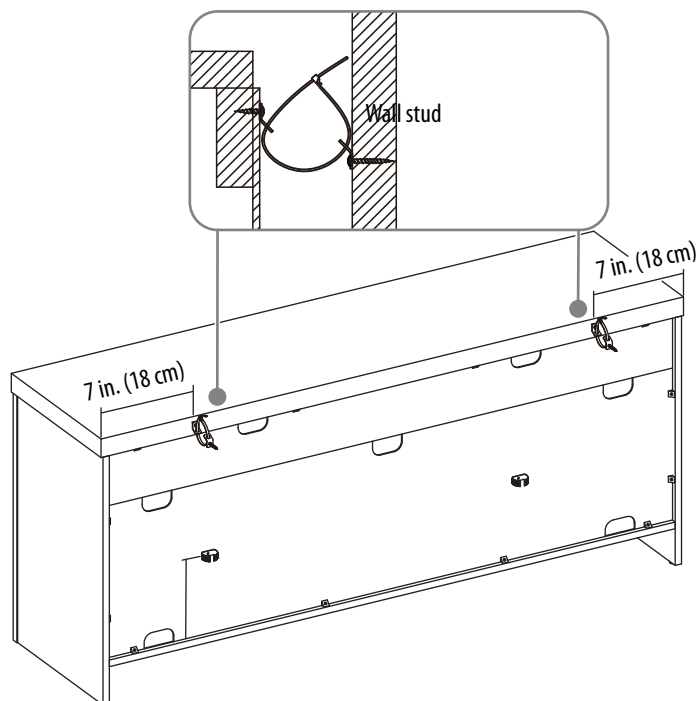

**WARNING:** You must install the tip restraint hardware to help prevent any accidents or damage to your TV stand. We strongly recommend attaching the tip restraint hardware to a wall stud and your stand. For all other wall types, visit your local hardware store to obtain the correct hardware.

## Maintaining your TV stand

Your TV stand is designed for year-round use with only minimal cleaning and maintenance.

- Use a soft, clean, cloth that won't scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately, because they may damage the furniture. Use a soft, clean, cloth and blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture.

### ***Caring for wood***

We recommend that you keep your TV Stand in a climate-controlled environment.

Temperature and humidity changes can cause fading, warping, shrinking, and splitting of wood. We recommend that you to keep your stand away from direct sunlight because sun may damage the finish. Correct care and cleaning at home will extend the life of your TV stand.

## Specifications

Dimensions (WxHxD)	58 x 25.4 x 15.5 in. (147.3 x 64.5 x 39.4 cm)
Weight	100.3 lbs. (45.5 kg)

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2023 Best Buy. All rights reserved.

INSIGNIA™

**[www.insigniaproducts.com](http://www.insigniaproducts.com)**  
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2023 Best Buy. All rights reserved.

V5 ENGLISH  
23-0406