

QUICK SETUP GUIDE

Dual Sandwich Maker

NS-SM2CBK6 / NS-SM2CBL6 /
NS-SM2CPK7 / NS-SM2CBL7

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all Instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock do not immerse cord, plugs, or sandwich maker in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the sandwich maker.
- 6 Do not operate the sandwich maker with a damaged cord or plug or after the sandwich maker malfunctions, or has been damaged in any manner. Return the sandwich maker to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the sandwich maker's manufacturer may cause injuries, fire, or electric shock.
- 8 Do not use outdoors.
- 9 Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Do not use the sandwich maker for other than intended use.
- 12 Make sure that your household voltage corresponds to the voltage stated on your sandwich maker's rating label.

- 13 Allow your sandwich maker to cool completely before moving it.
- 14 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


SAVE THESE
INSTRUCTIONS

PACKAGE CONTENTS

- Sandwich maker
- Quick Setup Guide

FEATURES

- Automatic temperature control
- Non-stick cooking plates for easy cleaning
- Cord wrap on the base for storing your power cord when not in use
- Store upright to save space
- Power and ready lights
- Cool-touch handle

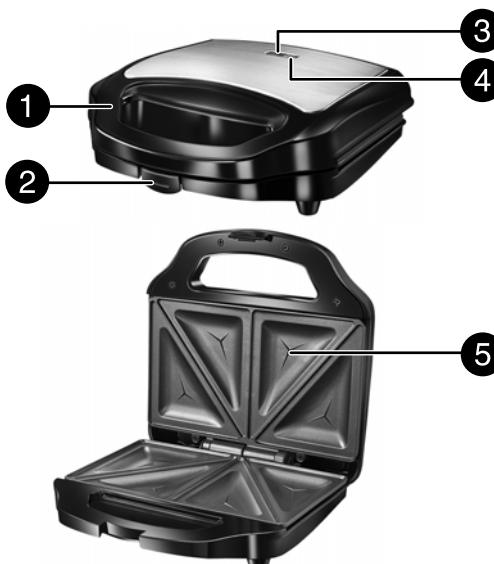

#	ITEM	DESCRIPTION
1	Handle	Use to easily move and store the sandwich maker when not in use.
2	Handle lock	Locks the lid into place.
3	Power light (red)	Lights when the sandwich maker is plugged in.
4	Ready light (green)	Lights when the sandwich maker is preheated or a sandwich is done cooking.
5	Non-stick cooking plates (not visible)	Place your sandwich between these plates.

BEFORE USING YOUR SANDWICH MAKER FOR THE FIRST TIME

- 1 Remove all packaging materials.
- 2 Wipe the cooking plates with a sponge or cloth dampened in warm water.
- Caution:** Do not immerse your sandwich maker in water, and do not run water directly onto the cooking plates.
- 3 Dry the plates with a cloth or paper towel.

USING YOUR SANDWICH MAKER

Note: The first time you heat your sandwich maker, it may emit some smoke or odor, which is normal. This does not affect the safety of your sandwich maker.

For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

- 1 Close your sandwich maker and plug it into a power outlet. The red power light turns on.



Preheating takes approximately two to four minutes. When your sandwich maker is preheated, the green ready light turns on.



- 2 Open the lid, then place your constructed sandwich (a slice of bread, sandwich components, then another slice of bread) on the bottom cooking plate.

3 Close the lid and latch the handle lock. The green ready light turns off.



The sandwich cooks for approximately three to five minutes. When your sandwich is done cooking, the green ready light turns on again.



4 Use the handle to open the lid and check the contents. If you want the contents cooked longer, close the lid and continue cooking. Your sandwich maker begins a second cooking cycle. When the cycle is complete, the green ready light turns on.



5 When the contents are cooked, use a plastic spatula to remove the contents. Never use metal tongs or a knife because these can damage the non-stick coating on the cooking plates.

6 Disconnect the power cord from the power outlet and leave your sandwich maker open to cool.

USAGE TIPS:

- Use breads that are $\frac{1}{2}$ " – 1" thick. Standard sandwich bread work well but thicker breads, such as rolls, pita loaves and English muffins are good too. Try different flavors to create a sandwich you love.
- Choose meats such as water-packed tuna or diced cooked chicken, or thinly-sliced ham, roast pork, pepperoni, or corned beef.
- For more variety, experiment with fillings such as thinly-sliced cheeses, finely-chopped onion, tomatoes, and sauerkraut.
- Choose from condiments like salt, pepper, mayonnaise, pickle relish, mustard, and fresh herbs for extra flavor.

STORING YOUR SANDWICH MAKER

- 1 Unplug your sandwich maker.
- 2 Make sure that your sandwich maker is cool.
- 3 Clean and dry the cooking plates and exterior, if necessary.
- 4 Close the lid and lock it into place.
- 5 Wrap the power cord around the cord wrap bracket on the base of your sandwich maker.
- 6 Use the handle to move the sandwich maker.

Note: The sandwich maker can be stored upright.

MAINTENANCE AND CLEANING

- Do not disassemble your sandwich maker for cleaning.
- Never immerse your sandwich maker in water or place it in a dishwasher.
- Do not use anything abrasive (such as metal scouring pads or steel wool) that can scratch or damage the non-stick coating or exterior finish.
- Do not use metal utensils to remove food residue because they can damage the non-stick surface.

To clean your sandwich maker:

- 1 Unplug your sandwich maker and let it to cool before cleaning. The cooking plates are easier to clean when they are slightly warm.
- 2 Wipe cooking plates with a soft, damp cloth or sponge to remove food residue. For baked on food residue, squeeze some warm water mixed with detergent over the food residue or place a wet paper towel over the residue to soften it. Remove the residue with a non-abrasive, plastic scouring pad, then wipe the cooking plates with a soft damp cloth or sponge.
- 3 Remove and empty the drip tray, then wash the tray in warm, soapy water. Rinse and thoroughly dry the tray, then put it back in your sandwich maker.
- 4 If necessary, wipe the outside of your sandwich maker with a damp cloth.

SPECIFICATIONS

Measurements (HxWxD):	3.7 x 9 x 9 in (9.4 x 22.9 x 22.9 cm)
Maximum temperature:	200 +/-20°
Wattage:	760W
Voltage:	120V

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
©2016 Best Buy. All rights reserved.

Made in China