

# AM/FM Dual Alarm Clock Radio

## Quick Setup Guide

BE-CLOPP3  
Rev.B



Before using your new product, please read these instructions to prevent any damage.


## Package contents

- Alarm clock radio
- AC power adapter
- CR2025 battery
- Quick Setup Guide


## Features

- Wake up to the radio or a buzzer
- Listen to either AM or FM stations
- Set snooze or sleep functions
- Program up to two different alarms
- Prevent losing the time with the pre-installed CR2025 backup battery
- Charge devices with the USB charging port


### Front LED display

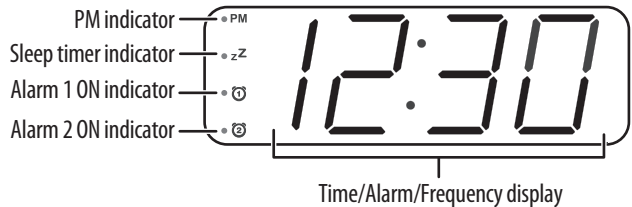

### Back

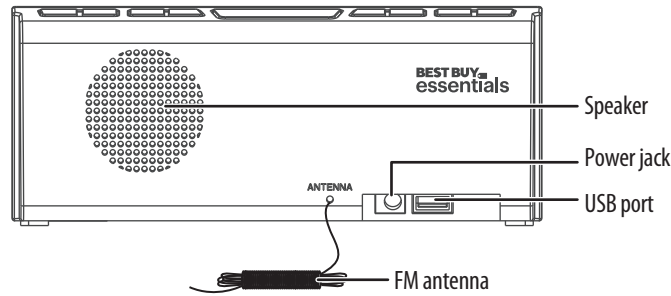


### Top panel

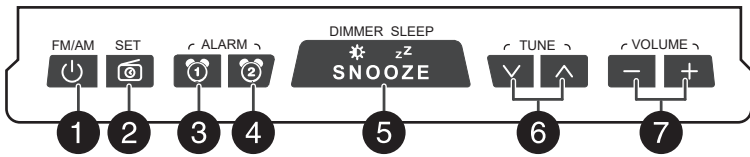


#	Item	Description
1	Radio power	<ul style="list-style-type: none"><li>• Press and hold to turn the radio on or off.</li><li>• Press briefly to switch between FM and AM.</li></ul>
2	Set / Radio/Clock	<p>With the radio turned off:</p> <ul style="list-style-type: none"><li>• Press and hold to set the clock.</li></ul> <p>With the radio turned on:</p> <ul style="list-style-type: none"><li>• Press briefly to move to the next preset radio station.</li><li>• Press and hold for two seconds to save a new radio station preset.</li><li>• Press and hold for six seconds to automatically search and save radio stations.</li></ul>
3	Alarm 1	<p>With the radio turned off:</p> <ul style="list-style-type: none"><li>• Press briefly to turn Alarm 1 on or off.</li><li>• Press and hold to set the alarm time.</li></ul>
4	Alarm 2	<p>With the radio turned off:</p> <ul style="list-style-type: none"><li>• Press briefly to turn Alarm 2 on or off.</li><li>• Press and hold to set the alarm time.</li></ul>
5	* zZ Dimmer/ Sleep/Snooze	<ul style="list-style-type: none"><li>• Press briefly to adjust the screen brightness or to snooze when the alarm is ringing.</li><li>• Press and hold to turn off the alarm when the alarm is ringing</li><li>• With the radio turned on, press and hold to set the sleep timer (90 min., 60 min., 45 min., 30 min., 15 min., or OFF).</li></ul>
6	Up/ Down	<p>With the radio turned on:</p> <ul style="list-style-type: none"><li>• Press to tune the radio to the previous (down arrow) or next (up arrow) station.</li><li>• Press and hold to search for the station automatically.</li></ul> <p>When setting the clock:</p> <ul style="list-style-type: none"><li>• Press to set the hours and minutes backward or forward.</li></ul> <p>When setting the alarm:</p> <ul style="list-style-type: none"><li>• Use to adjust the alarm time, select the alarm mode, or adjust the alarm volume.</li></ul>
7	+ Raise/ - Lower volume	Press to raise or lower the volume.

## Setting up your clock radio

1 Pull out the plastic tab to activate the pre-installed CR2025 battery.

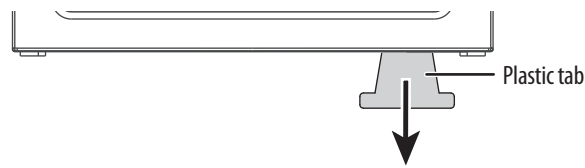

2 Connect the power adapter from your alarm clock's power jack to a power outlet. The hour digits blink on the display.

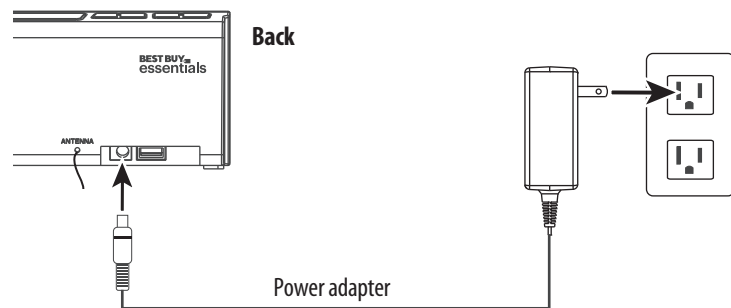

3 Press ∨ (down) or ∧ (up) repeatedly to set the correct hour, then press (radio/clock) to save the setting. The minutes digits blink.

4 Press ∨ (down) or ∧ (up) repeatedly to set the correct minutes, then press (radio/clock) to save the setting.

### Notes:

- When you set the clock to a time after noon (12 PM), the PM indicator lights.
- To set the clock again, press and hold (radio/clock) in standby mode. When the hours digits blink on the display, repeat steps 3–4.

## Using the alarm clock

### Setting an alarm

- 1 Under standby mode, press and hold (Alarm 1). The hours digits blink.
- 2 Press ∨ (down) or ∧ (up) repeatedly to set the correct hour, then press (Alarm 1) to save the setting. The minutes digits blink.
- 3 Press ∨ (down) or ∧ (up) repeatedly to set the correct minutes, then press (Alarm 1) to save the setting.
- 4 Press ∨ (down) or ∧ (up) to select the alarm ring type (“Bu” for a buzzer sound or “rAd” for the radio), then press (Alarm 1) to save the setting.
- 5 Press ∨ (down) or ∧ (up) to set the volume, then press (Alarm 1) to save the setting. Alarm 1 is turned on.

### Notes:


- To set Alarm 2, follow these instructions, but press (Alarm 2) instead of (Alarm 1).
- To turn on an alarm that you’ve previously set, press (Alarm 1) or (Alarm 2). The Alarm 1 or Alarm 2 indicator is shown on the display when the alarm is turned on.

### Quieting an alarm

- Press \*zZ **SNOOZE** briefly to mute an alarm for nine minutes. You can snooze as many times as you need within 59 minutes of the preset alarm time.
- Press and hold \*zZ **SNOOZE** to turn off an alarm for 24 hours. The alarm stays on to ring the next day.
- Press (Alarm 1) or (Alarm 2) briefly to cancel an alarm. The indicator turns off, and the alarm remains off.

## Using the radio




- 1 Press and hold (power) to turn on the radio.
- 2 Press (power) briefly to select either the FM or AM band. The current station is shown on the screen for 10 seconds, then clock displays.  
**Note:** If you select the FM band, stretch out the FM antenna on the back of your clock radio to improve FM reception.

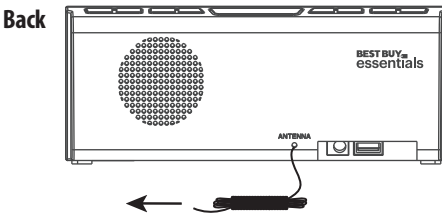




- 3 To tune into a station:
  - a. Press ∨ (down) or ∧ (up) repeatedly to find the station you want.
  - b. Press and hold ∨ (down) or ∧ (up) to search for the next available station.  
**Note:** The search may not stop at a station with a weak signal.
- 4 Press + (raise volume) or – (lower volume) to raise or lower the volume.
- 5 When you finish listening, press and hold (power) to turn off the radio.

## Saving radio station presets


Your clock radio can store ten station presets for FM and AM stations.

- 1** With the radio turned on, press  (down) or  (up) to search the radio band (AM or FM) you want, then press and hold  (set). A preset number blinks. (The preset number will automatically increase each time you set a preset, or you can press down or up repeatedly to select the preset number you want.)


**Tip:** Press and hold  (down) or  (up) to adjust the radio band more quickly.

- 2** Press  (set) briefly to save the station to the preset number, the station number shows on the screen.




- 3** Repeat the above steps to save a next station.

**Note:** To automatically search and save radio stations, turn on the radio, then press and hold  (radio/clock) for six seconds.

## Recalling preset stations

With the radio on, press  (radio/clock) repeatedly to select the preset station you want.

## Using the sleep timer ( )

- 1** When listening to the radio, press and hold  **SNOOZE** to set the sleep timer.
- 2** Press  **SNOOZE** repeatedly to set the sleep timer for 90 min., 60 min., 45 min., 30 min., 15 min., or OFF. The radio automatically turns off after the specified time. You can also change the sleep timer duration when the remaining time is displayed by pressing this button repeatedly.
- 3** To stop listening at any time, press and hold  (power).

## Charging USB devices

Connect a USB cable (not included) from the clock radio's USB port to your smartphone, tablet, or other USB device.

**Note:** The reception sensitivity on the radio may worsen when charging a smartphone through the USB port.

## Adjusting the LED brightness ( )

Press  **SNOOZE** repeatedly to adjust the display's brightness level.

## Maintaining your clock radio

Use a soft, dry cloth to clean the exterior of your clock radio. For stubborn stains, dampen the cloth with a weak solution of mild detergent and water, then immediately dry.

**Note:** Do not use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

## Specifications


- **Dimension (H × W × D):** 3.2 × 7.9 × 2.2 in. (8.1 × 20 × 5.7 cm)
- **Weight:** 0.7 lbs. (0.3 kg)
- **Power requirements:** AC 120 V, 60 Hz
- **Power consumption:** 6 W
- **Tuner:**
  - **Band:** FM and AM
  - **Range:** FM – 87.5~107.9 MHz | AM – 520~1710 KHz
  - **Preset:** 20 for AM and FM
- **USB port:** 5 V/1 A
- **Backup battery:** CR2025 battery

## Troubleshooting

### No power

- Make sure that the power adapter is connected securely and correctly to the power outlet.
- Make sure that the power outlet is working.

### No sound from the speakers

- Press  (raise volume) to increase the volume.
- Make sure that the power adapter is connected securely and correctly to the power outlet.
- Make sure that your clock radio is turned on.

### Static or noise when playing the radio

- Make sure that the station is tuned correctly and that the station has a good signal.
- Try another station.
- For FM stations, extend or rotate the antenna wire to improve the reception.
- For AM stations, adjust the position of your clock radio and unplug the USB charging cable (if connected) for the best reception.

### The sound is distorted

- Make sure that the volume level is not set too high.
- Make sure that the station is tuned correctly and that the station has a good signal.

### The clock radio gets warm after extended play at high volume levels

- This is normal. Turn down the volume to let the radio cool.

## Safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### WARNING and the following or equivalent,

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable

## Legal notices

### FCC and IC Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

### ICES Statement

CAN ICES-3 (B)/NMB-3

## One-year limited warranty

Visit [www.bestbuy.com/bestbuyessentials](http://www.bestbuy.com/bestbuyessentials) for details.

## Contact Best Buy essentials

For customer service, call 866-597-8427 (U.S. and Canada) [www.bestbuy.com/bestbuyessentials](http://www.bestbuy.com/bestbuyessentials)

Best Buy essentials is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2023 Best Buy. All rights reserved.