






ZOOM XP

HOVERBOARD

TABLE OF CONTENTS

Safety Instructions	0
What's in the box	1
Features & specifications	2
Charging the battery	3
Indicator lights	4
How to recalibrate	5
How to ride	6
Care and mainenance	7
Safety warnings	8

PAGE 1 - WHAT'S IN THE BOX

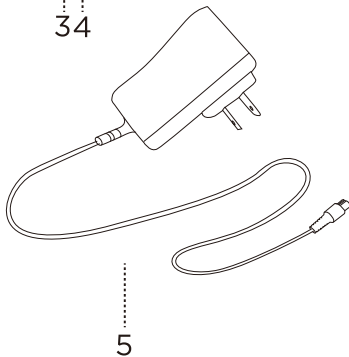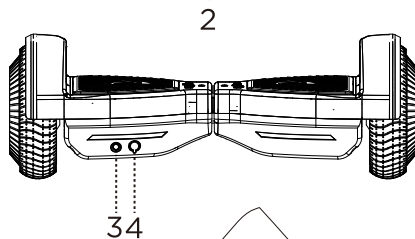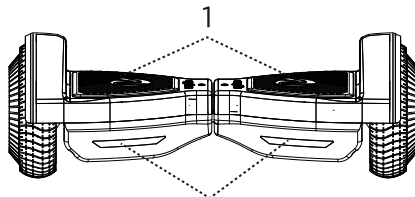

1. Foot Pads

2. Front LED Lights

3. Power Button

4. Charging Port

5. Charger

PAGE 2 - FEATURES & SPECIFICATIONS

Weight Limit: 80 lbs

Product Weight: 12 lbs

Recommended Age: 5+

Tire Size: 6.3"

Max Speed: Up to 5 mph

Max Range: Up to 3 miles

Battery: Li-ion 22.2V/2.0Ah

Motor: 150W Dual Hub

Charger: UL110-240V, 25.2V/0.4A

Recharge Time: Up to 5 hours

Climbing Angle: Up to 5°

PAGE 3 - CHARGING THE BATTERY

Only use the included charger.

Plug the charger into the wall before plugging it into the hoverboard.

Don't turn on the hoverboard while it's charging.


Charge the battery until it is full charged, no longer than that.

Cover the charging port when you are done.

CHARGING INDICATOR ON THE CHARGER:


Red Light: Battery is charging.

Green/Blue Light: Charging is complete

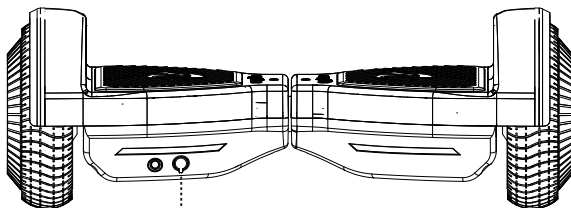

Charging Port

Charging Indicator Light




PAGE 4 - INDICATOR LIGHT

Battery Indicator Light:

- Green Light - Over 50% power.
- Yellow Light - 49-20% power.
- Red Light - Less than 20% power. Need to charge.


Warning: If the battery power goes below 10%, the hoverboard will automatically turn off as a safety precaution.

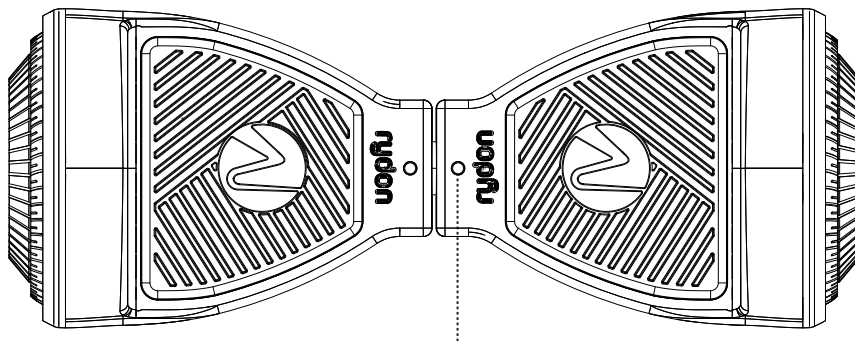

Battery Indicator Light:

PAGE 5 - HOW TO RECALIBRATE


- Place the hoverboard on a flat, level surface with the foot pads parallel to the ground.
- Press and hold the power button (for about 5-10 seconds) until you hear a constant beeping sound.
- Restart the hoverboard by pressing the power button once to turn it off and once more to turn it back on.
- The hoverboard should be recalibrated and level now. if you notice it is still not level, repeat these steps and ensure the foot pads are not angled at all.

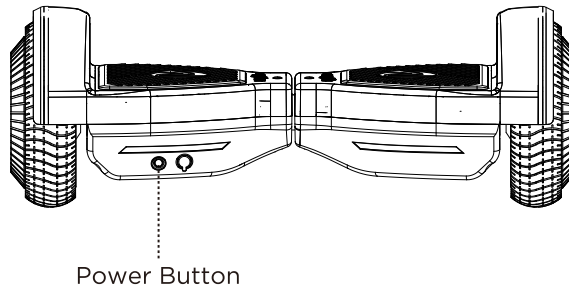

PAGE 6 - HOW TO RIDE


NEUTRAL

Keep both feet level

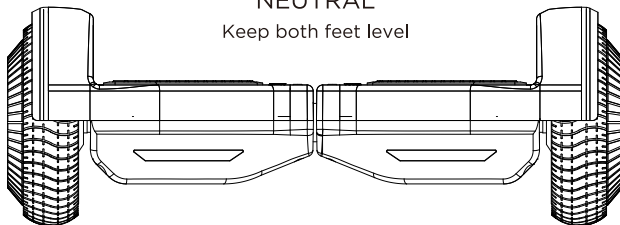


TURN RIGHT

Press down left foot

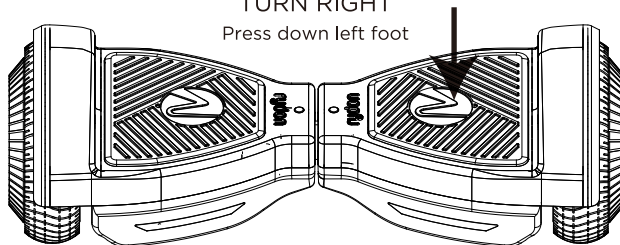

TURN LEFT

Press down right foot

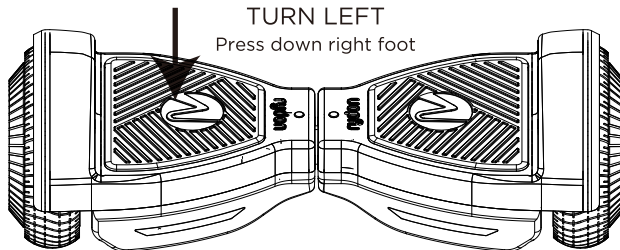

PAGE 7 - CARE & MAINTENANCE

RIDING RANGE

The maximum range is 3 miles. However, a lot of factors will effect how far you can go per charge.

- Driving Surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Temperature: Ride and store the hoverboard above 50°F.
- Maintenance: Timely battery charging and maintenance will increase driving distance.
- Speed and Driving Style: Frequent starting and stopping will reduce driving distance.

CLEANING THE HOVERBOARD

To clean the hoverboard, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the hoverboard, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Rogue. If the electric parts or battery get wet, do not power on the hoverboard. Please contact customer support for assistance.

BATTERY

- Keep the hoverboard away from fire and excessive heat.
- Do not subject the hoverboard to intense physical shock, severe vibration, or impact.
- Protect from water or moisture. Do not submerge the hoverboard in water.
- Do not disassemble the hoverboard or its battery.
- If there are any issues with the battery, please contact customer support.

STORAGE

- Fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the hoverboard.
- Store the hoverboard indoors, in a dry place and at a suitable temperature.
- You should bring the hoverboard into a warm environment for charging.

PAGE 8 - SAFETY WARNINGS

- For your safety, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Children, the elderly, pregnant women, and those with heart conditions should not use the hoverboard.
- The rider should not exceed 160 lbs.
- Do not ride at night.
- Do not use near motor vehicles.
- Do not ride after drinking or taking prescription medication.
- Do not ride the hoverboard if you have had any head, back, or neck ailments, or prior surgeries to those areas.
- Persons with any mental or physical conditions that may make them susceptible to injury or impair their dexterity or mental capabilities should recognize, understand, and perform all of the safety instructions and be able to assume the hazards inherent in using the hoverboard.
- Do not carry items when riding.
- Always wear shoes, a helmet, and appropriate safety gear.
- Prior to each ride, inspect each part of the hoverboard to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The hoverboard cannot be ridden by more than one person.
- When you ride the hoverboard along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the products barefooted and keep shoelaces tied.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.

PAGE 9

- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- The area that the hoverboard is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Only ride the hoverboard with adequate daylight conditions for visibility.
- We encourage you to highlight the hoverboard, for visibility, by using lighting, reflectors, and signal flags on flexible poles.
- If device or internal components come in contact with water or moisture, DO NOT use and contact customer support for assistance.

CALIFORNIA PROPOSITION 65

WARNING: This product can expose you to a chemical such as Cadmium that is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Rogue or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS


Do not lift the hoverboard off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the hoverboard, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation. Always check the battery charge before using.





www.GoRydon.com • support@GoRydon.com

Rydon LLC.


3422 Old Capitol Trail, PMB# 733, Wilmington, DE 19808. USA.







PAGE 0 - SAFETY INSTRUCTIONS

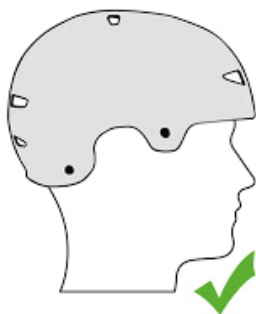


Correct



Exposed Forehead

Incorrect

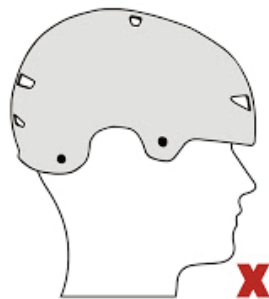

Blocked Vision

Incorrect

Correct Fitting:

Make sure your helmet covers your forehead.

Incorrect Fitting:

Forehead is exposed and vulnerable to serious injury.

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.