




Please see [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for the latest Quick Start Guide and troubleshooting.

# Extended Play Battery Pack for Nintendo® Switch™

RF-NSEXPBP / RF-NSEXPBP-C

## PACKAGE CONTENTS

- Extended Play Battery Pack
- USB Type-C charging cable
- Quick Setup Guide

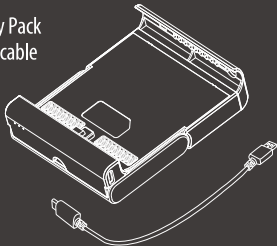

## QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.

## FEATURES

- Form-fitted to attach to the Nintendo Switch
- Intelligently designed to extend battery life
- Built-in stand to aid in hands-free operation
- 5,000 mAh Lithium battery capacity for extended playing time
- Cutouts for ventilation ensures necessary airflow
- LED indicator lights to show current battery level

## **SAFETY INFORMATION**

- Read these instructions.
- To preserve battery lifespan, fully recharge at least once every four months.
- Replacement of a battery with an incorrect type will defeat the safeguards.
- **WARNING:** Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- **WARNING:** Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- **WARNING:** A battery subjected to extremely low air pressure (altitudes above 6500 ft. [2000 m]) may result in an explosion or the leakage of flammable liquid or gas.
- Exceeding the operating or storage temperatures stated in the specifications could result in damage to your battery pack.

# CHARGING YOUR BATTERY PACK


- 1 Plug in the USB Type-C charging cable (included) into a USB wall charger (not included).

**Note:** For optimal charging speed, use the Nintendo Switch's AC adapter (not included). Using a charger without the Power Delivery feature may result in charging times over five hours.

- 2 Plug the small end of the cable into the USB Type-C port on the side of the battery pack.


The LED indicator light should start blinking to indicate it is charging. Each LED represents 33% of the battery charge. When all lights are on and not blinking, it is fully charged.

**Note:** The indicator light only indicates the battery pack's charge level. If you want to check the battery level of the Switch, check the built-in charging icon on the top left of the Switch screen while in the home screen.

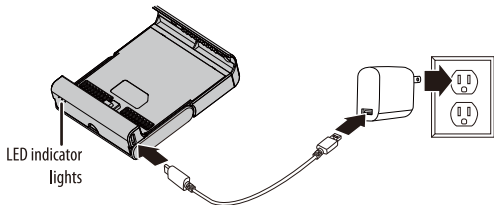


# TO INSTALL THE BATTERY PACK


- 1 Locate the two sliding switches on the back of the battery pack, then slide the locking switches to the unlock state and remove the top piece of the battery pack.

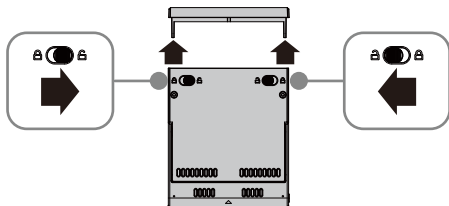

- 2 Carefully slide your Switch Lite onto the battery pack. Make sure that you have the USB Type-C port lined up properly to the Switch charging port.

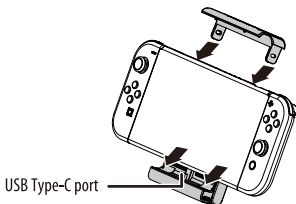


- 3** Replace the top piece of the battery pack, then slide the locking switches to the locked state.

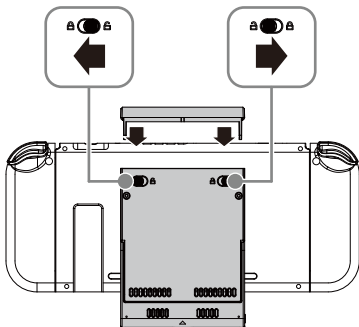



## CHARGING YOUR SWITCH WITH THE BATTERY PACK

- Press the power button on the side of the battery pack once to start charging. To turn off the battery pack when it is installed, press and hold the power button for three seconds.

**Note:** The battery pack automatically stops charging after the console is fully charged.

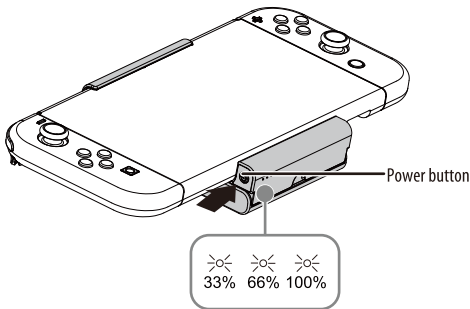


**Note:** You can charge your Switch and battery pack at the same time using an AC adapter or wall charger. Don't try to charge your Switch Lite and battery pack by using a USB charging cable connected to your computer or tablet.

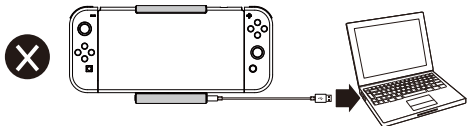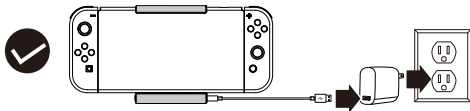

Need help? Call 1-800-620-2790 (U.S. and Canada)



## BUILT-IN STAND

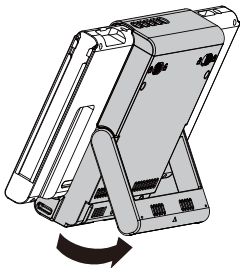

## SPECIFICATIONS

- **Dimensions (H × W × D):** 4.5 × 3.3 × 1.2 in. (11.5 × 8.4 × 3 cm)
- **Weight:** .3 lbs. (150 g)
- **Battery capacity:** 5,000 mAh, 3.8 V, 19 Wh
- **Input:** 5 V/3 A, 15 V/2.6 A
- **Output:** 5 V/3 A, 12 V/1.5 A
- **Charging cable length:** .82 ft. (25 cm)
- **Charging time:**
  - Battery pack:** More than 5 hours (via USB cable + USB AC without PD)
  - Battery pack:** More than 2.5 hours (via Nintendo Switch's AC adapter)
- **Operating temperature:** 15 °C - 33 °C (59 °F - 91.4 °F)
- **Storage temperature:** -5 °C - 35 °C (23 °F - 95 °F)

Need help? Call 1-800-620-2790 (U.S. and Canada)

## **TROUBLESHOOTING**

### **The console is not charging.**

- Make sure that the power button has been pressed and held for three seconds to turn the pack on.
- Make sure that there are no debris inside the battery pack.
- Make sure that you have the Switch console completely seated in the battery pack.
- Check the battery level of the battery pack by pressing the power button. If the battery indicator lights do not light up, it needs to be charged.
- When temperatures exceed 140°F / 60°C, all three LEDs flash. To prevent the risk of damage, the battery pack automatically stops charging. Charging functionality returns when temperatures fall below 140°F / 60°C.

# LEGAL NOTICES

## FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance may cause interference and void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-3(B) / NMB-3(B) standard.

# ONE-YEAR LIMITED WARRANTY

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

Nintendo Switch is a registered trademark of Nintendo Inc.

This product is not sponsored or approved by Nintendo.

ROCKETFISH is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.,

©2020 Best Buy. All rights reserved.

Made in China

Need help? Call 1-800-620-2790 (U.S. and Canada)