


MAYTAG
COMMERCIAL TECHNOLOGY

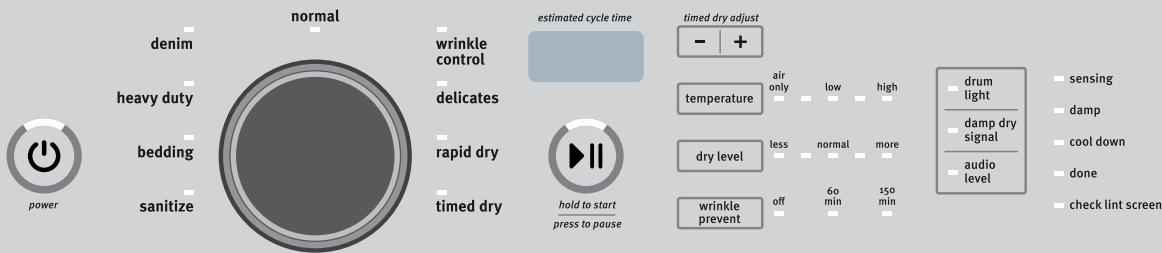

Quick Start Guide Using Your High Efficiency Dryer

Appearance may vary depending on model.

⚠ WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

1 CLEAN THE LINT SCREEN

2 LOAD THE DRYER

3 TOUCH POWER TO TURN ON THE DRYER

power

4 SELECT THE DESIRED CYCLE FOR YOUR LOAD*

5 ADJUST CYCLE SETTINGS, IF DESIRED*

6 SELECT ANY ADDITIONAL OPTIONS*

7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE

*hold to start
press to pause*


* **NOTE:** See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

W10904265A
W10904267A - SP

®/™ ©2016 Maytag. All rights reserved. Used under license in Canada.

12/16

MAYTAG
COMMERCIAL TECHNOLOGY

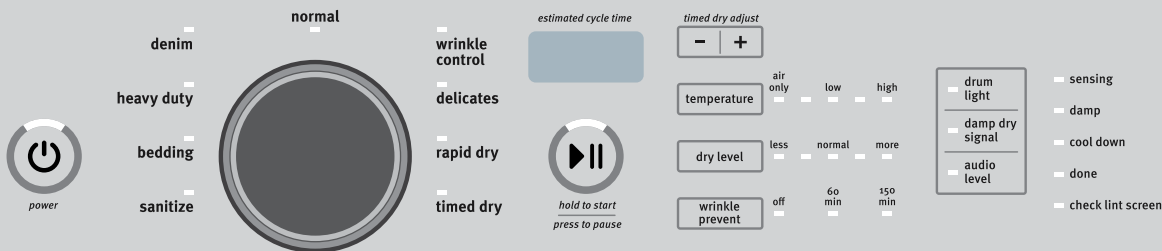

L'aspect peut varier selon le modèle.

Guide de démarrage rapide

Comment utiliser votre sècheuse haute efficacité.

⚠ AVERTISSEMENT



Risque d'incendie


Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Aucune laveuse ne peut complètement enlever l'huile.


Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.

1 NETTOYER LE FILTRE À CHARPIE

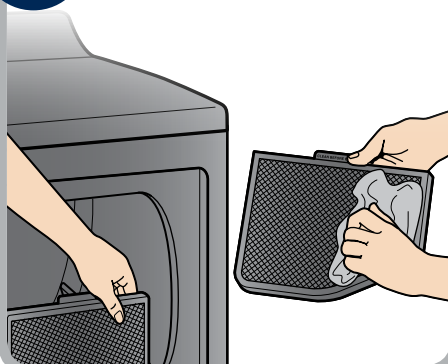

2 CHARGER LA SÈCHEUSE

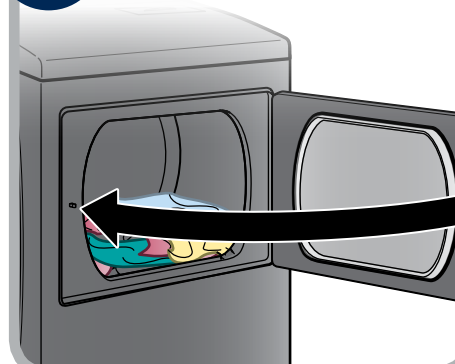

3 APPUYER SUR POWER (MISE SOUS TENSION) POUR METTRE LA SÈCHEUSE EN MARCHÉ




power


4 SÉLECTIONNER LE PROGRAMME SOUHAITÉ POUR LA CHARGE*




5 AJUSTER LES RÉGLAGES DE PROGRAMME SI DÉSIRÉ*

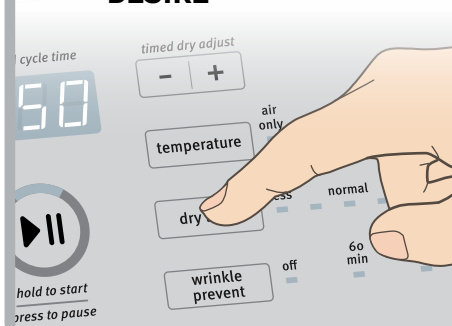

6 SÉLECTIONNER TOUTE OPTION SUPPLÉMENTAIRE*

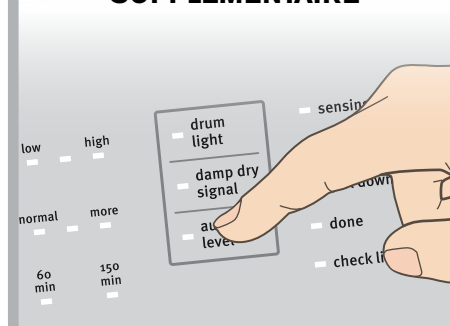

7 APPUYER SANS RELÂCHER SUR START/PAUSE (DÉMARRER/PAUSE) POUR DÉMARRER LE PROGRAMME

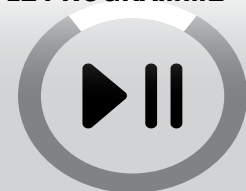

hold to start
press to pause

*REMARQUE : Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sècheuse.