


SATINY SMOOTH[®]
recortadora facial todo en uno



CONAIR[®]
MODELO LT85
Instrucciones antes de usarlo.
Producto, siempre lee cuidadosamente las
instrucciones antes de usarlo.


USING THE BIKINI TRIMMER

1. Start with the guide comb attached for first-time use.
2. Turn the unit on.
3. To fully remove hair or to outline the bikini area, use the trimmer without the attachment comb.
4. When removing hair, gently move the blades against the direction of growth.
5. To outline, place the blades perpendicular to the skin surface and apply the blades to the edge of the hair. Use the blades to create the desired outline.
6. For the cleanest finish, follow up with the foil shaver.
7. For cutting hair without completely removing it, attach the detail comb to the head. Place the comb on the cutting blades first, align the comb ribs with top surface of trimmer head housing and then snap down onto the back of the trimming head (see FIG. 4).
8. Snap off the comb guide to release from the trimmer head (see FIG. 5).

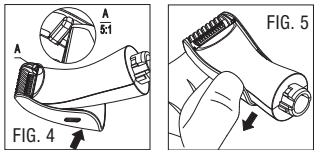

USING THE EYEBROW TRIMMER

1. This trimmer comes with two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for detailing. It also comes with a comb attachment that helps you achieve an even cut when you do not want to completely remove the hair. The comb attachment has two sides: The long tooth is for body hair, and the short tooth is for eyebrow trimming.
2. Aligning the indicator with the 6mm mark on the comb leaves hair longer, while aligning with the 3mm mark leaves hair shorter (see FIG. 6).
3. To use the comb attachment, be sure the unit is in the OFF position and slide the comb over the trimming blades (see FIG. 7). Make sure that the teeth of the comb are facing in the same direction as the trimming blade, and that the top of the comb is even with the top of the trimmer. If you want to completely remove hair, use the trimmer without the comb attachment.
4. To operate the trimmer, turn the battery cover to the right so arrow points to the "I" mark. When finished trimming, turn the unit off by turning the battery cover to the left, so arrow points to "O" mark.
5. To store the trimmer, slide the comb attachment cover over the trimming blades.

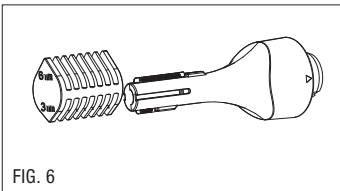

Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en: www.conair.com/registration

©2018 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
18PG050897
IB-15526

GARANTÍA LIMITADA DE DOS AÑOS(VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)


Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio Indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$5.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITA, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA.

Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.

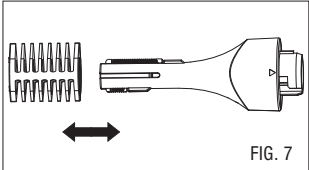

TAKING CARE OF YOUR TRIMMER BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the trimmer. This may result in malfunction or damage to the trimmer.

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.


ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

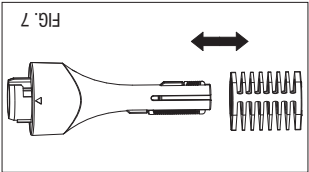

LIMPIEZA DE SU RECORTADORA

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de su aparato han sido diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso, usando el cepillo de limpieza provisto, y luego enjuáguelas en agua corriente y permita que se sequen al aire. Guarde el aparato hasta el próximo uso. Para seguir disfrutando de su aparato por mucho tiempo, utilícelo únicamente con el propósito para el cual fue diseñado.

PRECAUCIÓN


1. Si tiene que sacudir el aparato para eliminar el exceso de agua, sosténgalo firmemente para evitar dejarlo caer o desarmar el cabezal.
2. No utilice un secador o un calentador para secar el aparato; esto puede impedir su buen funcionamiento o dañarlo.

CÓMO USAR LA RECORTADORA PARA CEJAS

1. La recortadora cuenta con dos cuchillas. La cuchilla grande puede usarse para cortar el vello corporal y las cejas. La cuchilla pequeña es ideal para dar el acabado. También cuenta con una guía que permite cortar el vello uniformemente, sin afeitarlo. La guía tiene dos lados: un lado con dientes largos, ideal para cortar el vello corporal, y un lado con dientes cortos, ideal para cortar las cejas.

2. Alinea el indicador con la marca "6mm" en la guía deja el vello más largo; alineararlo con la marca "3mm" deja el vello más corto (FIG. 6).

3. Asegúrese de que el aparato está apagado y deslice la guía por encima de la cuchilla (FIG. 7). Asegúrese de que los dientes de la guía están en la misma dirección que los dientes de la cuchilla y de que la parte superior de la guía está paralela con la parte superior de la recortadora. Si desea afeitar el vello, utilice la recortadora sin la guía. 4. Para encender la recortadora, gire la parte inferior de la carcasa hasta que el triángulo quede alineado con la marca "I". Para apagar, gire la parte inferior de la carcasa hasta que el triángulo quede alineado con la marca "O". 5. Para guardar el aparato, deslice la cubierta protectora por encima de las mismas.

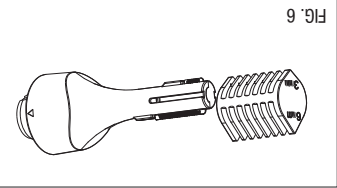

SATINY SMOOTH[®] all-in-one facial trim system



For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR[®]
MODELO LT85

Please register this product at www.conair.com/registration

©2018 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

18PG050897

IB-15526