ROVI

DASH**CAM**

RELIVE • DISCOVER • CONNECT

QUICK START GUIDE

CL-3017

BEFORE USING ROVI...

WARNING

- Never rely solely on ROVI products when driving. Always practice safe driving habits and follow all driving laws and standards. ROVI products are not a replacement for safe driving habits.

- Always survey your surrounding before driving and operating ROVI products. ROVI products are not replacements for manually checking your surroundings

- Never drive while only looking into the built-in monitors of ROVI products. The images and objects viewed from the screen will be different from the actual distance to your vehicle.

- Do not operate or change settings on any ROVI products while driving or while the vehicle is in motion. Always practice safe, hands-free, and unobstructed driving.

- Mounting and installation locations are for recommendations only. The placement recommendations may not apply to every type of vehicle. Please ensure that installation and mounting location you choose will not obstruct visibility, any safety features of the vehicle, or violate government safety standards.
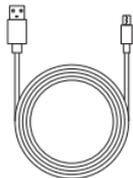
IN THE BOX

ROVI Dashcam
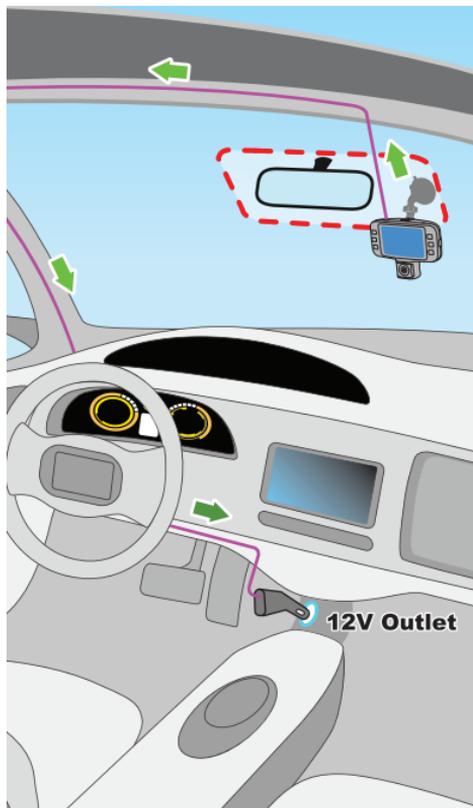
Suction Mount

USB Car Charger

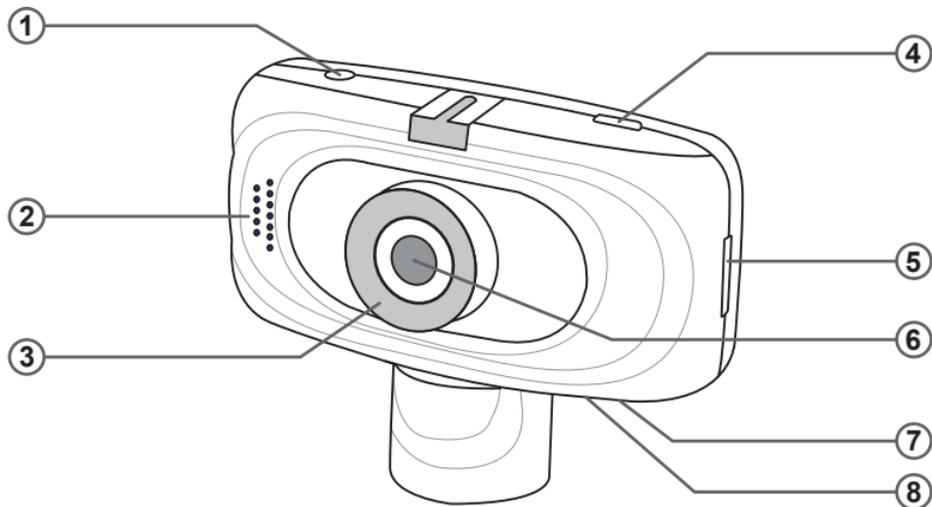USB Charge
and Sync Cable

Quick Start Guide

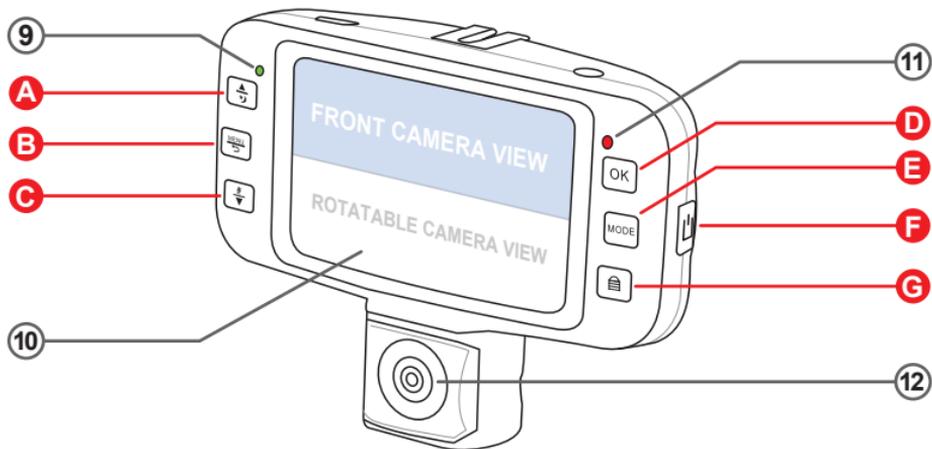Accessories sold separately. Available on RoviCams.com

INSTALLATION

1. Insert the MicroSD card in the ROVI dashcam. Push card until it locks into place.

2. Determine mounting location (See diagram for optimal placement)

3. Attach the ROVI dashcam and the mount to the windshield.

4. Connect USB car charger to the ROVI dashcam.

5. Route cable around windshield so it is not obstructing visibility.

6. Plug the USB car charger into the 12V socket.

7. Adjust the angle of the mount and lens for optimal viewing.

BUTTON LAYOUT

1. AV Output
2. Speaker
3. Infrared Lights
4. USB Power Connector
5. MicroSD Card Slot
6. Wide Angle Lens

7. Microphone
8. Reset Button
9. Power Indicator
10. 2.7" Screen
11. Charging/Recording Indicator
12. Rotatable Lens

A Up / Infrared Light

B Menu / Return

C Down / Audio on/off

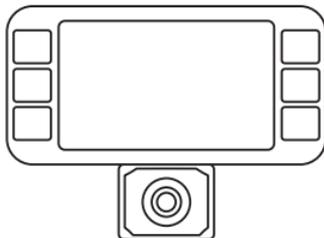**D** OK / Record / Pause

E Mode Select

F Power on/off

G Recording Lock

BUTTON FEATURES

RECORDING MODE

Infrared Mode ON/OFF

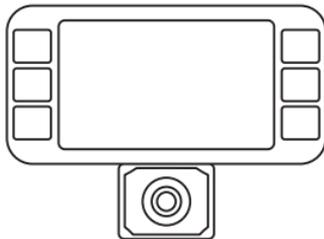Mute/Unmute Audio

Pause/Unpause Recording

Lock Current Recording

REVIEW MODE

Select Previous Clip

Clip Options

Select Next Clip

Playback/Pause Recording

SPECIFICATIONS

Lens	140° Wide Angle
LCD	2.7" TFT LCD
Resolution/FPS	MAX 1080p @25fps, 720p @30fps, 840x480, 640x480
Languages	English, Français (French), Español (Spanish), Português (Portuguese), Deutsch (German), Italiano (Italian), 简体中文 (Simplified Chinese), 繁體中文 (Traditional Chinese), русский (Russian), 日本語 (Japanese), 한국어 (Korean)
Battery	Built-In, Rechargeable
Loudspeaker	Built-In
Microphone	Built-In
Storage	MAX: 32GB micro SD (Class 10 Required)
TV Standard	NTSC/PAL
Working Temperature	- 10°C ~ 50°C (- 14°F ~ 122°F)

MENU LIST

VIDEO RECORDING SETTINGS

VIDEO RESOLUTION	LOOP RECORDING	EXPOSURE		MOTION DETECTION
1080 FHD 1920x1080	OFF	+ 0.0		OFF
1080p 1440x1080	3 Minutes	+2.0	-1/3	ON
720p 1280x720	5 Minutes	+5/3	-2/3	
WVGA 848x480	10 Minutes	+4/3	-1.0	
VGA 640x480		+1.0	-4/3	
		+2/3	-5/3	
		+1/3	-2.0	

SYSTEM SETTINGS

DATE / TIME	AUTO POWER OFF	LANGUAGES	
Manual Input	OFF	English	
	1 Minute	Français (French)	简体中文 (Simplified Chinese)
	3 Minutes	Español (Spanish)	繁體中文 (Traditional Chinese)
	5 Minutes	Português (Portuguese)	русский (Russian)
		Deutsch (German)	日本語 (Japanese)
		Italiano (Italian)	한국어 (Korean)

RECORD AUDIO
OFF
ON

DATE STAMP
OFF
ON

G-SENSOR SENSITIVITY
OFF
2G
4G
8G

BEEP
OFF
ON

FREQUENCY
50 Hz
60 Hz

SCREEN SAVER
OFF
1 Minute
3 Minutes
5 Minutes

INFRARED SENSOR
OFF
ON

FORMAT
Format SD Card

DEFAULT SETTINGS	VERSION
Restore Defaults	Firmware Version

THANK YOU FOR CHOOSING ROVI.

ENHANCE YOUR DRIVING EXPERIENCE.

FOR IMMEDIATE HELP AND SUPPORT,
AS WELL AS HOW-TO VIDEOS, PLEASE VISIT

rovicams.com