

Hamilton Beach

Sure-Crisp® Air Fryer Countertop Oven

Four de comptoir à friture à air Sure-Crisp®

Horno de cubierta de cocina para freír al aire Sure-Crisp®

Read before use / Lire avant utilisation / Lea antes de usar.

For recipes, tips, product information and registration: hamiltonbeach.com

Pour des recettes, des conseils, des renseignements sur le produit et l'enregistrement : hamiltonbeach.ca

Para recetas, consejos, información del producto y registro: hamiltonbeach.com.mx

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

ENTER TO WIN \$100 TO SPEND ON WEBSITE
Visit register.hamiltonbeach.com

PARTICIPEZ POUR COURIR LA CHANCE DE GAGNER UN MONTANT DE 100 \$ À DÉPENSER SUR NOTRE SITE WEB
Visitez le register.hamiltonbeach.com

INGRESE PARA TENER LA OPORTUNIDAD DE GANAR \$100 PARA GASTAR EN NUESTRO SITIO WEB
Visite register.hamiltonbeach.com

Open to US customers only • Ce concours s'adresse aux clients des États-Unis seulement • Este concurso está disponible sólo a clientes de los Estados Unidos

⚠ WARNING Fire Hazard.

- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.
- Do not operate oven unattended.
- Do not use with oven cooking bags.
- Do not heat foods in plastic containers.
- Do not heat taco shells in countertop oven. Always use full-size conventional oven.
- Always allow at least 1 inch (2.5 cm) between food and heating element.
- Follow food manufacturer's instructions.
- Always unplug oven when not in use.
- Regular cleaning reduces risk of fire hazard.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children unless they are supervised. Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or countertop oven in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
- Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Disconnect, turn all controls to OFF (O); then remove plug from wall outlet.
- Use extreme caution when removing pan or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
- Oversize foods or metal utensils must not be inserted in an oven as they may create a fire or risk of electric shock.
- A fire may occur if countertop oven is covered or touching flammable material, including curtains, draperies, walls, overhead cabinets, paper or plastic products, cloth towels, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
- Do not store any materials, other than manufacturer-recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To turn oven off, turn timer to OFF (O) position. See "Parts and Features" section.
- Do not place eyes or face in close proximity with tempered safety glass door, in the event that the safety glass breaks.
- Always use appliance with crumb tray securely in place.
- Do not use appliance for other than intended use.
- Clean oven interior carefully. Do not scratch or damage heating element tube.
- Do not operate unattended.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- CAUTION: HOT SURFACE.** The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS


Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This appliance is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.


The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and Features

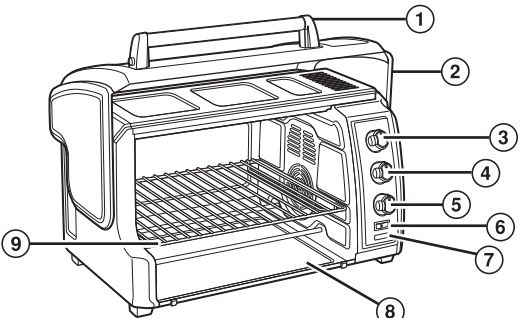

1. Handle
2. Open Door
3. Temperature Knob
4. Toast Shade Knob
5. 120-minute Timer Knob (with STAY ON)
6. Air Fry/Convection Switch
7. ON Indicator Light
8. Slide-Out Crumb Tray
9. Oven Rack
10. Baking/Broiling Pan (slides under oven rack)
11. Air Frying Basket (fits into Baking/Broiling Pan)
12. Glass Window (for cleaning access)

Rack Positions

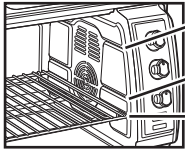

Top Rack Position: Baking, Broiling, and Toasting

Middle Rack Position: Air Frying, Baking/Convection, Baking, Broiling, and Toasting

Bottom Rack Position: Air Frying, Baking/Convection, Baking and Broiling large pieces of meat or poultry

To order parts, visit: hamiltonbeach.com/parts

How to Use

⚠ WARNING Fire Hazard.

- If contents ignite, keep door closed and unplug oven. Allow contents to stop burning and cool.
- Do not leave unattended while in use.
- Read and understand all safety instructions and Important Safeguards before use.
- Always unplug countertop oven when not in use.

NOTE: Do not use Glass Window to add or remove food to Oven cavity. Food should only be added or removed from Oven when the Easy Reach® door is lifted.

Before first use: Most heating appliances produce an odor and/or smoke when used the first time. Plug Countertop Oven into an outlet. Turn Temperature Knob to 450°F (230°C). Heat at this temperature for 10 minutes. Odor should not be present after this initial preheating. **Wash Air Frying Basket, Baking/Broiling Pan, and Oven Rack before using.**

How to Air Fry

- Use Air Fry mode to crisp foods using little added oil.
- Rack position used to air fry depends on the size of the food to be cooked. Keep at least 1 inch (2.5 cm) between food and heating elements.
- Place larger food in middle or bottom rack position.
- Larger/thicker foods may need to be flipped, stirred, or rotated halfway during cooking.
- Air Fry mode cooks and browns evenly by circulating forced hot air which crisps food.
- Slice or cut fresh foods in uniform size pieces to ensure even cooking.
- Check food for doneness before recommended packaging cook time.
- For faster cooking, preheat Oven to reduce cooking time.

- Plug into outlet. Press Air Fry/Convection Switch.
- Arrange foods in a single, even layer and avoid overfilling the Air Frying Basket. Place Basket into Baking/Broiling Pan on Oven Rack. Adjust Oven Rack so food is at least 1 inch (2.5 cm) from heating element.
- Rotate Timer past 40 and let Countertop Oven preheat for 5 minutes before beginning to air fry. After Countertop Oven is preheated, set Timer to desired time by rotating Timer past 40 and then to desired air frying time; or rotate Timer to STAY ON while pressing in and holding the buttons on the side of the Knob.

desired air frying time; or rotate Timer to STAY ON while pressing in and holding the buttons on the side of the Knob.

- When finished, press Air Fry/Convection Switch to OFF (O).
- Unplug.

TIP: When cooking pizza, use bottom rack position with Air Fry/Convection switch on. Check for doneness before end of cooking cycle as thicker crust requires longer time than a thinner crust.

How to Bake

For cakes, casseroles, cookies and roasting meats, poultry or vegetables. Place Oven Rack in any rack position depending on size of food. For best results, preheat Countertop Oven for 5 minutes before adding food to be baked.

- Plug into outlet. Turn Temperature Knob to desired temperature.
- Rotate Timer Knob past 40 and let Countertop Oven preheat for 5 minutes before beginning to bake. After Countertop Oven is preheated, set Timer by rotating Timer Knob past 40 and then to desired baking time. Or, rotate to STAY ON while pressing and holding buttons on side of Knob.
- Rotate Timer to OFF (O) to end cycle at any time.
- Unplug.

Stay On Function

The Countertop Oven can be set to stay on by turning Timer to STAY ON while pressing and holding buttons on side of Knob.

How to Broil

Use to brown foods such as beef, chicken, fish, pork, and casseroles. Slide Oven Rack in any rack position depending on size of food. Food must be a minimum of 1 inch (2.5 cm) from heating elements.

- Plug in Countertop Oven. Slide Oven Rack into top rack position. Insert Baking/Broiling Pan in slots under the Oven Rack and add food to Oven Rack. DO NOT PREHEAT THE OVEN. Turn Temperature Knob to Broil.
- Rotate Timer clockwise past 40, then to the desired broiling time. Turn foods when browned, or halfway through cooking time. Oven broils on high temperature and may not be adjusted.

- Rotate Timer Knob to OFF (O) to end cycle at any time.
- Unplug.

How to Toast

Use for browning and toasting breads, bagels, and English muffins. Place food cut/split side facing up. This will toast cut/split side more than outside of food. Rack should be in top or middle position. Ensure Air Fry/Convection Switch is OFF (O).

- Plug into outlet. Turn Temperature Knob to Broil/Toast.
- Select shade of browning by turning Toast Shade Knob past MEDIUM (☉) to desired toast color. A bell will sound when toast cycle is complete.
- Rotate Timer to OFF (O) to end cycle at any time.
- Unplug.

TIPS:

- When toasting bread, place bread in middle rack position for even toasting on top and bottom.
- The number of slices of bread and bread freshness will affect toast color. For example, toasting 4 slices of bread will require a darker toast color setting than 2 slices of bread. Adjust Toast based on desired color and number of slices.

Care and Cleaning

⚠ WARNING Electrical Shock Hazard. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts.

Your Countertop Oven should be cleaned regularly for best performance and long life. Regular cleaning will also reduce the risk of fire hazard.

- When finished, turn Timer Knob to OFF (O) and unplug. Let cool completely.
- To clean inside of Countertop Oven, wipe interior of Oven with a damp, soapy cloth. Repeat with a clean, damp cloth, then dry. For stubborn stains, use a plastic scouring pad.
- Hand-wash Baking/Broiling Pan, Slide-Out Crumb Tray, Air Frying Basket and Oven Rack in hot, soapy water. Rinse, and dry.
- Wipe outside of Countertop Oven with a damp cloth. Do not use abrasive cleansers or metal scouring pads.

Glass Window Cleaning:

- Make sure Countertop Oven is unplugged and completely cooled.
- Using both hands, press buttons in on sides of Handle. Using one hand, lift up Oven Door to clean.

Wash Window with a damp, soapy cloth. Using a clean, damp cloth, wipe Window to rinse and dry.

Troubleshooting

Countertop Oven will not heat.

- Check to make sure electrical outlet is working and Oven is plugged in. Turn Temperature Knob to 350°F (177°C). Turn Timer Knob counterclockwise to STAY ON while pressing and holding buttons on side of Knob.

Moisture forms on inside of Oven Door when toasting.

- This is normal when toasting in a Countertop Oven. Moisture is slower to escape from a Countertop Oven than from a toaster. The amount of moisture will differ between fresh bread, bagels, and frozen pastries.

An odor and smoke come from the Countertop Oven.

- Smoke and odor are normal during first use of most heating appliances. These will not be present after initial heating period.

Countertop Oven will not toast.

- Check to make sure outlet is working and Oven is plugged in. Turn Temperature Knob to Broil/Toast. Turn Toast Shade knob past MEDIUM (☉) shade position, then turn knob to desired toast shade.

Some foods burn and some are not done.

- Adjust rack position to center food in Oven.
- Adjust Oven temperature or cooking time for best results with your recipes.

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with out returning a product or component under this warranty to you. If the product or component is unavailable, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage

and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please write Hamilton Beach Brands, Inc., Customer Service Department, 4421 Waterfront Dr., Glen Allen, VA 23060, or visit hamiltonbeach.com/customer-service in the U.S. or hamiltonbeach.ca/customer-service in Canada. For faster service, locate the model, type, and series numbers on your appliance.

⚠ AVERTISSEMENT Risque d'incendie.

- Si le contenu de votre four se met à brûler, n'ouvrez jamais la porte du four. Débrancher l'appareil et laisser le contenu s'éteindre et refroidir avant d'ouvrir la porte.
- Ne pas utiliser l'appareil sans surveillance.
- N'utilisez jamais avec des sacs de cuisson au four.
- Ne pas chauffer d'aliments dans des plats de plastique.
- Ne pas faire chauffer les coquilles à taco dans le four de comptoir. Toujours faire réchauffer dans un four conventionnel.
- Toujours laisser un espace de 2,5 cm (1 po) entre les aliments et l'élément chauffant.
- Suivre les instructions du fournisseur de produits alimentaires.
- Débranchez toujours votre four quand vous ne l'utilisez pas.
- Un nettoyage régulier réduit le danger d'incendie.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

- Lire toutes les instructions.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Le nettoyage et l'entretien ne doit pas fait par des enfants à moins d'être sous supervision. Surveiller que les enfants ne jouent pas avec l'appareil.
- Ne pas toucher les surfaces chaudes. Utiliser les poignées ou boutons.
- Pour protéger contre le risque de choc électrique, ne pas immerger le cordon, la fiche ou le four dans l'eau ou autre liquide.
- Débrancher l'appareil de la prise de courant électrique lorsqu'il n'est pas utilisé et avant un nettoyage. Le laisser refroidir avant le nettoyage et avant d'y placer ou d'y enlever des pièces.
- Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Veuillez communiquer avec le service à la clientèle pour obtenir de l'information concernant l'inspection, la réparation ou le réglage, comme précisé dans la garantie limitée.
- L'utilisation d'accessoires non recommandés par le fabricant d'appareil peut causer des blessures.
- Ne pas utiliser à l'extérieur.
- Ne pas laisser le cordon pendre du bord d'une table ou d'un comptoir, ou toucher des surfaces chaudes.
- Ne pas placer l'appareil sur ou près d'un brûleur chaud à gaz ou d'un élément électrique, ou dans un four chauffé.
- Une précaution extrême doit être employée lors du déplacement d'un appareil électroménager contenant de l'huile chaude ou autre liquide chaud.
- Pour débrancher le four, tourner le bouton de minuterie à OFF (O/arrêt) puis débrancher la fiche de la prise murale.
- Une prudence extrême s'impose lors de l'enlèvement du plateau ou de la vidange de graisse chaude.
- Ne pas nettoyer avec des tampons à récurer en métal. Des particules peuvent se détacher du tampon et toucher les pièces électriques, créant un risque de choc électrique.
- Des aliments de grosseur excessive ou des ustensiles de métal ne doivent pas être insérés dans un four de comptoir, car ils peuvent créer un incendie ou un risque de choc électrique.
- Un incendie peut survenir si le four de comptoir est recouvert ou en contact avec un matériau inflammable, y compris rideaux, tentures, murs, armoires en surplomb, produits en papier ou en plastique, serviettes en tissu et autres articles semblables, lorsqu'il fonctionne. Ne rangez aucun article sur le dessus de l'appareil lorsqu'il fonctionne.
- Une grande précaution doit être prise lors de l'utilisation de contenants construits en matériaux autre que le métal ou le verre.
- Ne pas remettre des matériaux autres que les accessoires recommandés par le fabricant dans cet appareil lorsqu'il n'est pas utilisé.
- Ne pas placer l'un des matériaux suivants dans le four : papier, carton, plastique et articles semblables.
- Ne pas couvrir le plateau à miettes/gouttes ou toute pièce du four avec du papier métallique. Ceci causera un surchauffe du four.
- Pour éteindre le four, tourner le bouton de minuterie à OFF (O/arrêt). Voir la section « Pièces et caractéristiques ».
- Ne pas placer les yeux ou le visage près de la porte en verre renforcé de sécurité, au cas où le verre de sécurité se briserait.

- Toujours utiliser cet appareil avec le Ramassemiettes/gouttes amovible bien en place.
- Ne pas utiliser cet appareil pour tout autre usage que celui recommandé.
- Nettoyer l'intérieur du four avec précaution. Ne pas égratigner ou endommager le tube de l'élément chauffant.
- Ne pas faire fonctionner le four sans

supervision.

- Ne pas faire fonctionner cet appareil avec une minuterie externe ou un système de télécommande distinct.
- ATTENTION : SURFACE CHAUE.** La température des surfaces extérieures sera plus élevée pendant le fonctionnement de l'appareil.



CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur


Cet appareil est destiné à un usage domestique uniquement.

⚠ AVERTISSEMENT Risque de choc électrique :

Cet appareil est fourni avec une fiche polarisée (une broche large) pour réduire le risque d'électrocution. Cette fiche n'entre que dans un seul sens dans une prise polarisée. Ne contrecarrez pas l'objectif sécuritaire de cette fiche en la modifiant de quelque manière que ce soit ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.


La longueur du cordon installé sur cet appareil

Pièces et caractéristiques

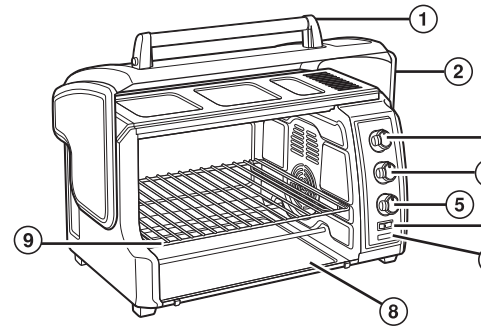

- Poignée
- Porte ouverte
- Bouton de température
- Bouton de degré de cuisson des rôties
- Bouton de minuterie 120 minutes (avec fonction STAY ON [rester allumé])
- Interrupteur pour modes Friture à air/Convection
- Témoin lumineux ON (marche)
- Ramasse-miettes coulissant
- Grille du four
- Plateau de cuisson/grillage (se glisse sous la grille du four)
- Panier pour friture à air (s'insère dans le plateau pour cuisson au four/grillage)
- Fenêtre en verre (facilite l'accès au nettoyage)

Positions de la grille du four

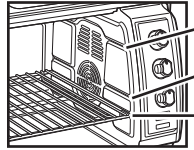

Position supérieure de la grille : cuisson au four, grillage et rôtissage

Position centrale de la grille : friture à air, cuisson au four/convection, grillage et rôtissage

Position inférieure de la grille : friture à air, cuisson au four/convection, cuisson au four et grillage des gros morceaux de viande ou de volaille

Utilisation

⚠ AVERTISSEMENT Risque d'incendie.

- Si le contenu s'enflamme, veuillez garder la porte fermée et débrancher le four. Laisser le contenu arrêter de brûler et refroidir.
- Ne pas laisser le four sans surveillance lors de son utilisation.
- Veuillez lire et comprendre toutes les consignes de sécurité et les garanties importantes avant d'utiliser.
- Toujours débrancher le four lorsqu'il n'est pas utilisé.

REMARQUE : Ne pas utiliser la fenêtre en verre pour ajouter ou retirer les aliments de la cavité du four. Les aliments ne doivent être ajoutés ou retirés du four que lorsque la porte Easy Reach® est soulevée.

Avant la première utilisation : La plupart des appareils ménagers qui chauffent produisent une odeur et/ou une fumée lors de l'utilisation pour la première fois. Brancher le four de comptoir dans une prise de courant. Tourner le sélecteur de température à 230 °C (450 °F). Chauffer à cette température pendant 10 minutes. L'odeur ne devrait pas survenir après ce préchauffage initial. **Nettoyer le panier pour friture à air, le plateau de cuisson/grillage, et grille du four avant l'utilisation.**

Comment utiliser le mode de friture à air

- Utiliser le mode friture à air pour rendre les aliments plus croustillants en ajoutant très peu d'huile.
- La position de la grille utilisée en mode de friture à air dépend de la taille des aliments à faire cuire. Laisser une espace d'au moins 2,5 cm (1 po) entre les aliments et les éléments chauffants.
- Pour les aliments de grande taille, utiliser la position centrale ou inférieure de la grille.
- Les aliments plus volumineux et plus épais doivent être retournés, remués ou tournés à la moitié de la cuisson.
- Le mode de air fry (friture à air) permet de cuire et griller uniformément à l'aide d'une circulation d'air chaud forcé qui rend les aliments croustillants.
- Trancher ou couper les aliments frais en morceaux de taille uniforme pour assurer une cuisson égale.
- Vérifier la cuisson des aliments avant la fin de la durée de cuisson recommandée sur l'emballage.
- Pour une cuisson plus rapide, veuillez préchauffer le four afin de réduire la durée de cuisson.
- Brancher dans la prise de courant. Appuyer sur l'interrupteur pour modes Friture à air/Convection.
- Disposer les aliments en une seule couche uniforme; éviter de trop remplir le panier pour friture à air. Mettre le panier dans le plateau pour cuisson au four/grillage sur la grille du four. Ajuster la grille du four de façon à laisser un espace d'au moins 2,5 cm (1 po) de l'élément chauffant.
- Tourner la minuterie au-delà de 40 et laisser le four de comptoir préchauffer pendant 5 minutes avant de commencer la friture à air. Une fois que le four est préchauffé, régler le bouton de minuterie à la durée souhaitée en tournant le bouton de minuterie au-delà de 40 et ensuite à la durée de friture à air souhaitée
- ou tourner le bouton de minuterie jusqu'à Stay On (rester allumé) tout en appuyant sur et en maintenant les boutons sur les côtés du bouton.
- Lorsque terminé, appuyer sur l'interrupteur pour modes Friture à Air/Convection en position OFF (O/arrêt) et débrancher.
- Débrancher.

CONSEIL : Lorsque vous faites cuire de la pizza, utiliser la grille en position inférieure, en vous assurant que l'interrupteur pour modes Air Fry/Convection (friture à air/convection) est en position ON (marche). Vérifier la cuisson avant la fin du cycle de cuisson, car les croûtes plus épaisses doivent cuire plus longtemps que les croûtes plus minces.

Comment utiliser le mode de cuisson au four

Pour la cuisson de gâteaux, mets en cocotte, biscuits et pour le rôtissage de viandes, volailles ou légumes. Glisser la grille du four dans n'importe quelle position en fonction de la taille des aliments. Pour obtenir de meilleurs résultats, préchauffer le four pendant 5 minutes avant d'ajouter les aliments à cuire.

- Brancher dans la prise de courant. Tourner le bouton de température à la température souhaitée.
- Tourner la minuterie au-delà de 40 et laisser le four de comptoir préchauffer pendant 5 minutes avant de commencer la cuisson. Une fois que le four est préchauffé, régler la minuterie en tournant d'abord le cadran dans le sens horaire
- au-delà de 40 et ensuite à la durée de cuisson souhaitée. Ou, tourner à Stay On (rester allumé) tout en appuyant et en maintenant les boutons sur les côtés du bouton.
- Tourner le bouton de minuterie à OFF (O/arrêt) pour arrêter le cycle en tout temps.
- Débrancher.

